



Pioneer Steel Wheels Swivels Replacement

Removing the swivels from the Pioneer Steel Wheels Headphone.

Written By: Garrett Leung




INTRODUCTION

This guide will show you the steps to remove the swivels.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Folding Hinges

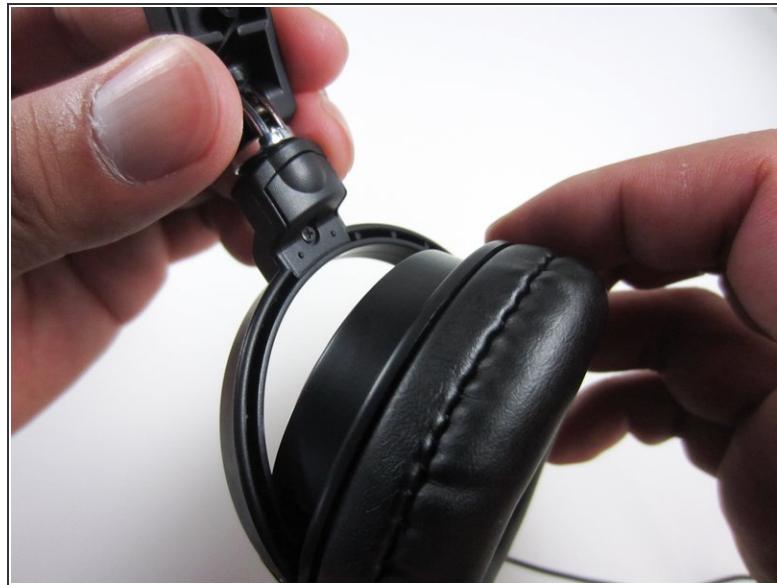



- While holding the base of the headband with one hand, hold the ear cup with the other hand.
- Pull them apart to reveal the screw.

Step 2



- While apart, remove the screw from the headphone.



Step 3

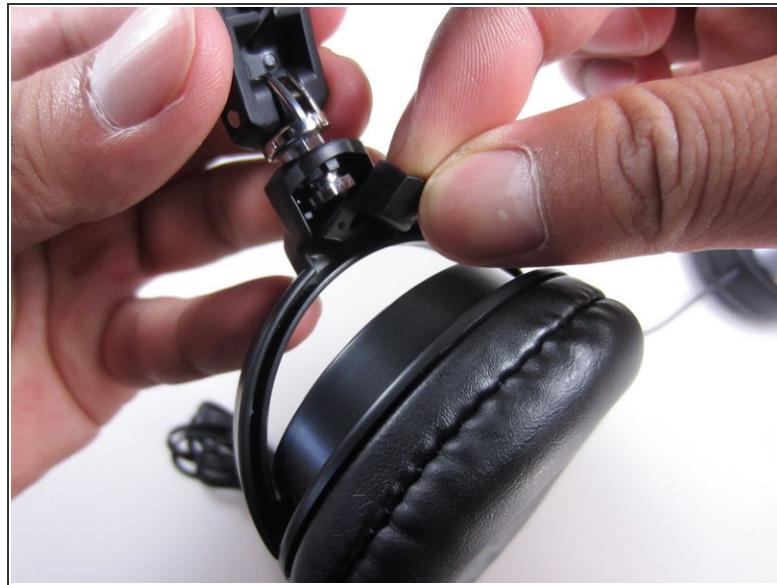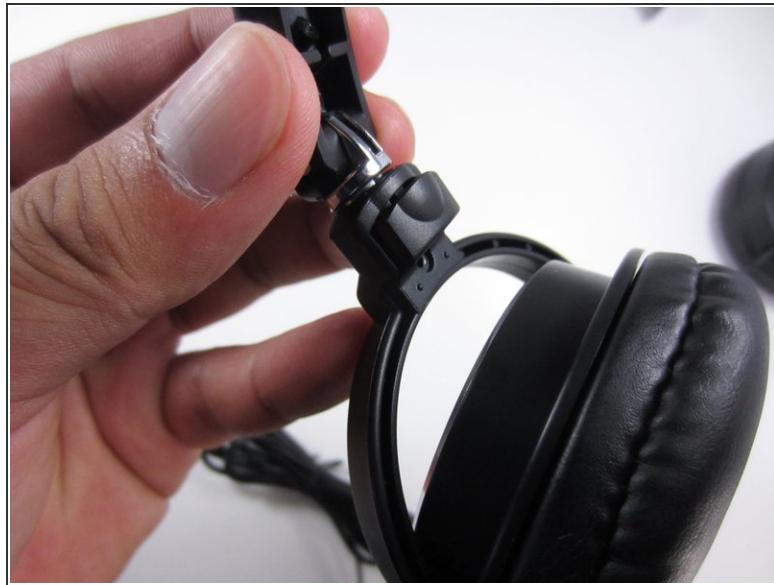

- Loosen the plastic cover piece that protects the chrome folding hinge.
- Remove the plastic cover piece.

 During reassembly, make sure the plastic covering piece hooks onto the base of the chrome hinge before screwing it back in.

Step 4

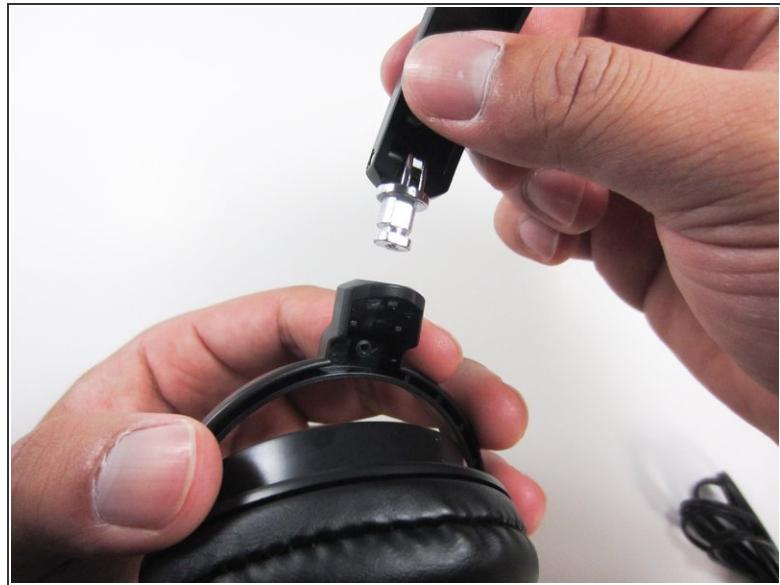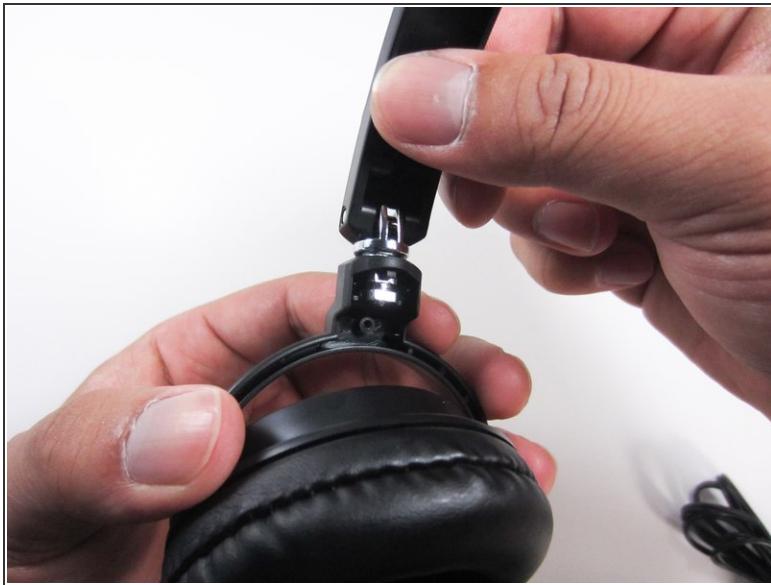

- Holding the ear cup with one hand, pull up on the base of the headband with the other hand to release the folding hinge.
- Repeat for the opposite side if necessary.


Step 5 — Drivers



- Remove the three screws located on the driver cover of the ear cup with the PH0 Phillips screw driver.


This document was generated on 2019-09-17 09:55:10 PM (MST).

Step 6

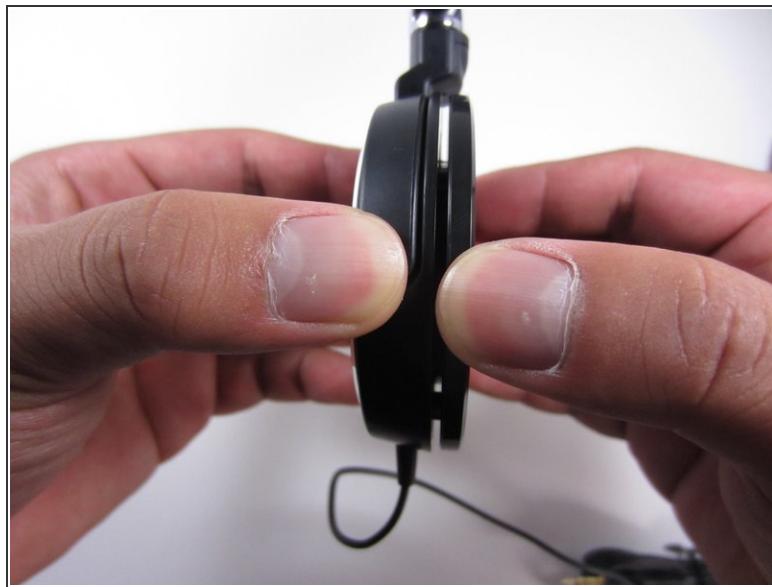

- Pull the driver cover away from the headphone.
- ⓘ Do not pull the driver cover away too fast since there are wires connecting the driver to the ear cup.
- ⚡ During reassembly, make sure the two wires are pointing downward before screwing the driver back in.

Step 7 — Swivels

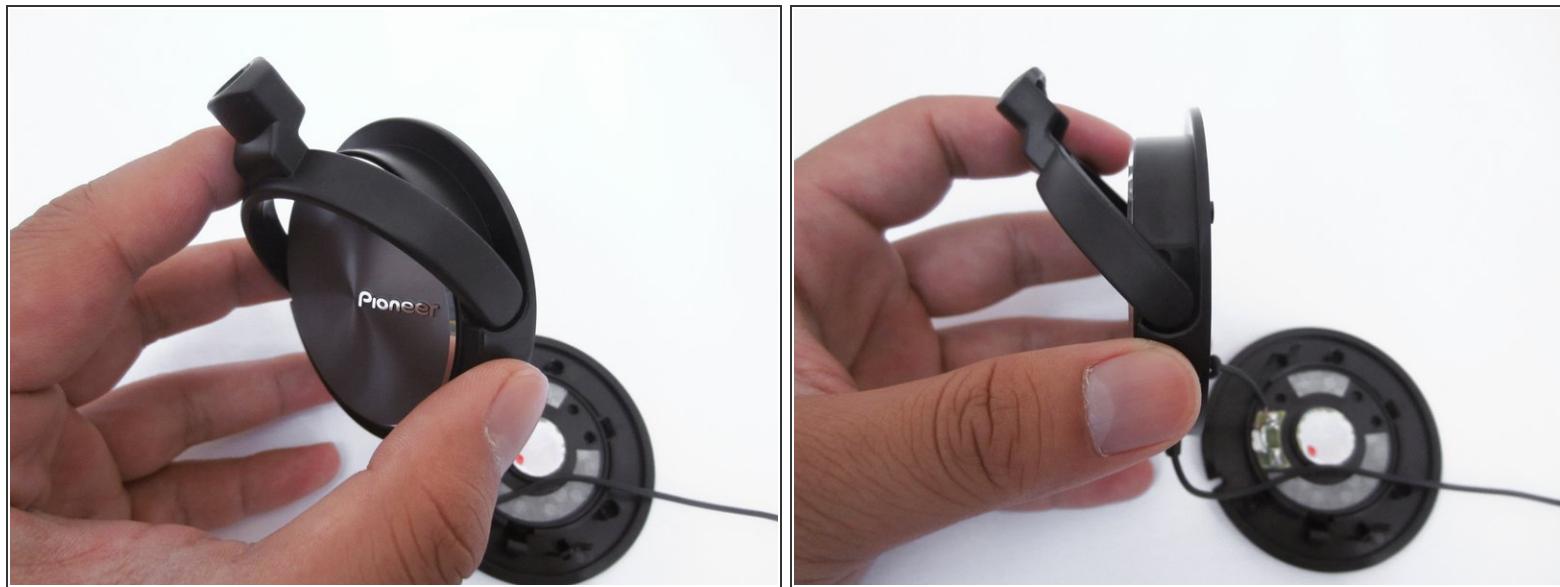

- Separate the swivel from the ear cup.

Step 8



- Grab the end of the swivel that is closest to "Pioneer" and pull outward.

Step 9



- Switch sides and grab the other end of the swivel and pull outward as well.
- ★ During reassembly, insert the swivel back at the tilted position so it can be popped in with ease.

To reassemble your device, follow these instructions in reverse order.