



# Play Station Vita PSV 1000 Analog Thumb Stick Cap (Thumbstick Button) Replacement

psv 1000 analog Thumb Stick Cap (Thumbstick Button)

Written By: cakone micke



## INTRODUCTION

This guide is only to replace the PSV 100x and maybe the PSV 200x Analog Sticks,Cap,Button.

### TOOLS:


- Tweezers (1)

## Step 1 — Overview





- This guide is only to replace the Stick button

## Step 2

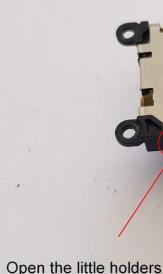


Open the little holders

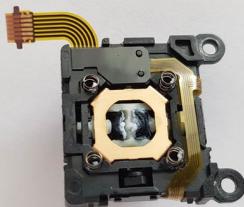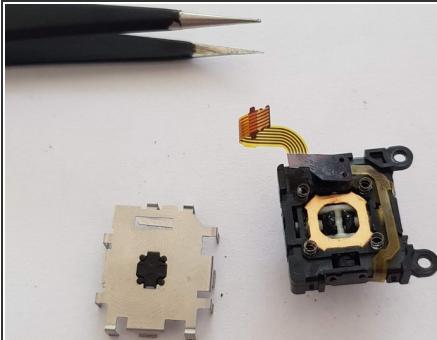


- Open the little holders
- then carefully lift the metal plate

## Step 3

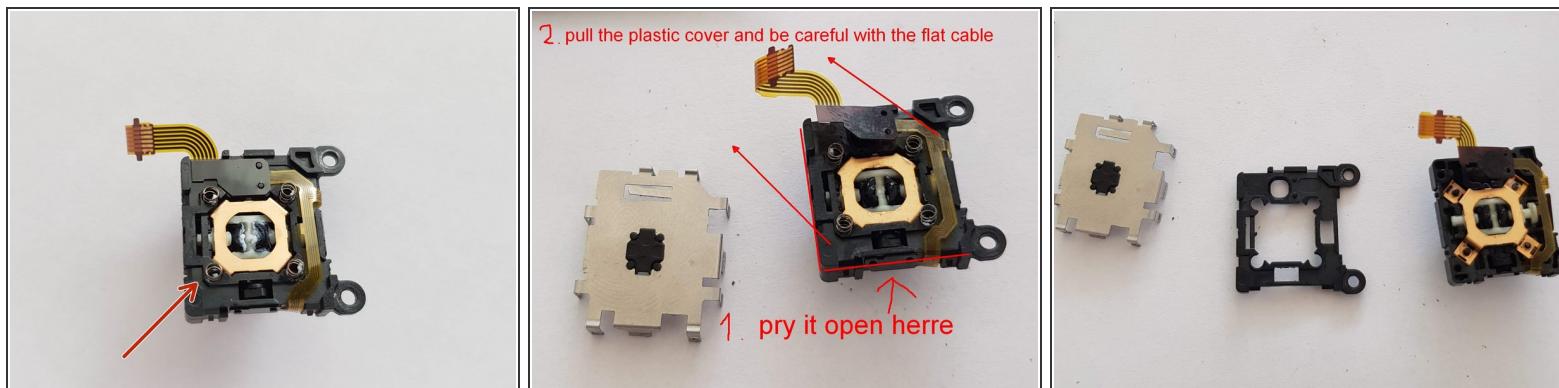


- Take out the small Springs and pry it open . I marked the direction .

## Step 4

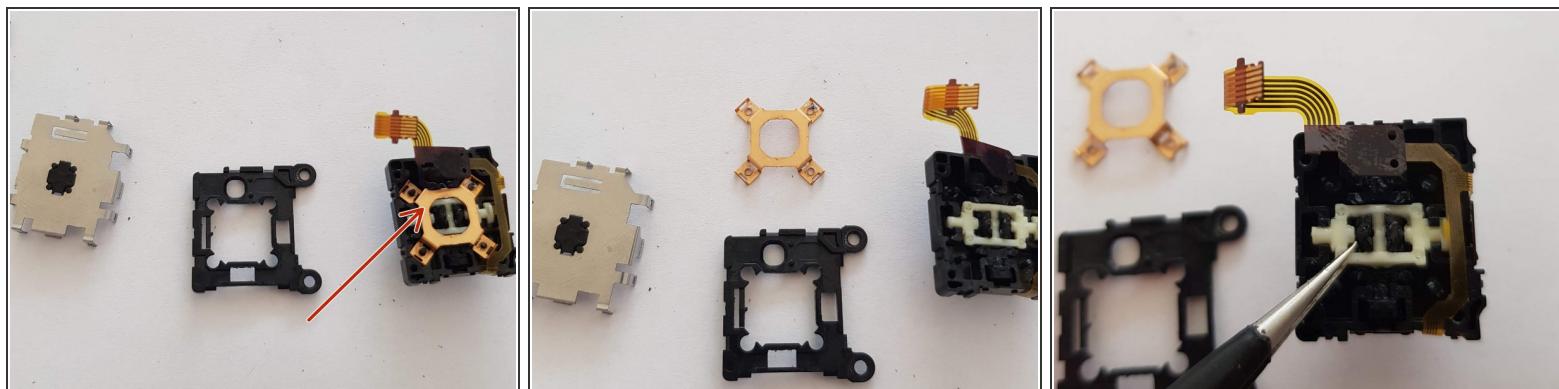

- Lift up this metal holder, don't bend it.
- Then with tweezers detach the white plastic. It holds the Analog cap.
- One end of the white plastic is magnetic. Do not damage it

## Step 5

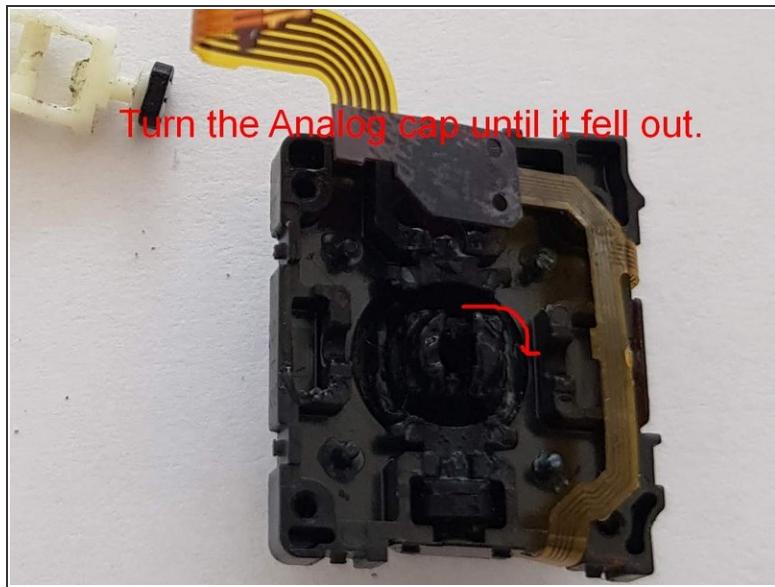

Turn the Analog cap until it fell out.



- Turn the cap and replace it with a new one.
- \* If Sony did not do this thing with the Analog Cap turning we could simply pull out the Cap and place a new one.
- **Assembly is simple like the disassembly :D**

To reassemble your device, follow these instructions in reverse order.