



# PlayStation 3 Slim - Manually Removing Stuck Disk

PlayStation 3 Slim - Manually Removing Stuck Disk

Written By: ZFix



**manually remove  
stuck disks**

## INTRODUCTION

You can use this method if you can't eject the stuck disk by the eject button and the eject hole. The PS3 slim on this video is model CECH-300X.

Full video you can see here:

[video: <https://www.youtube.com/watch?v=lyWHZFfLWAE>]

More info about disassembling, you can find in [PlayStation 3 Slim Teardown](#)

## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T8 Torx Security Bit Screwdriver](#) (1)

## Step 1 — PlayStation 3 Slim - Manually Removing Stuck Disk




- Disconnect all cables. You have 4x Torx T8 screws and 7x Phillips screws. Now you can remove outer case.

## Step 2

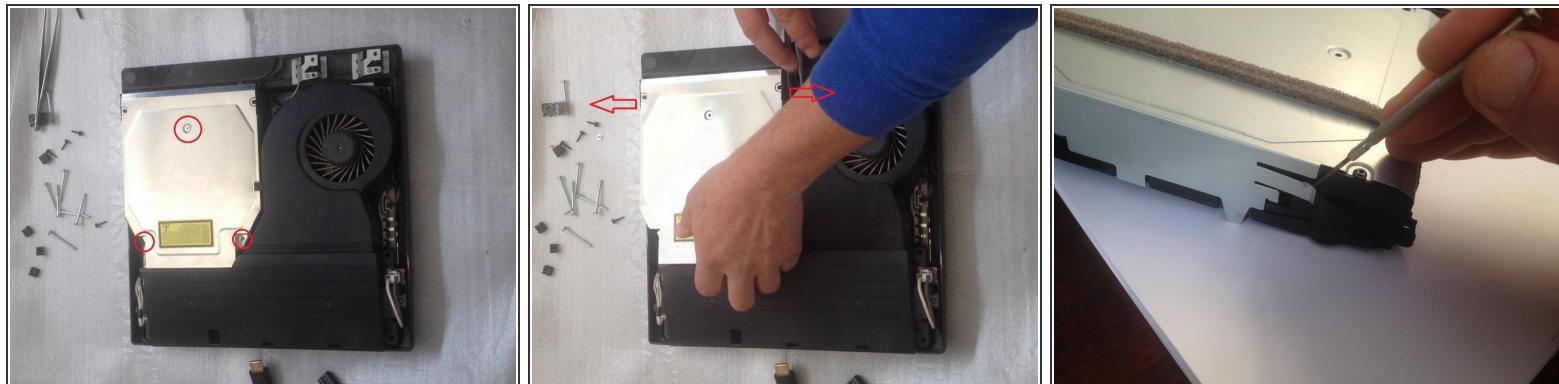


- Unscrew the three screws. To remove Blu Ray unit shell you must open two plates that are on the left and right side.

## Step 3

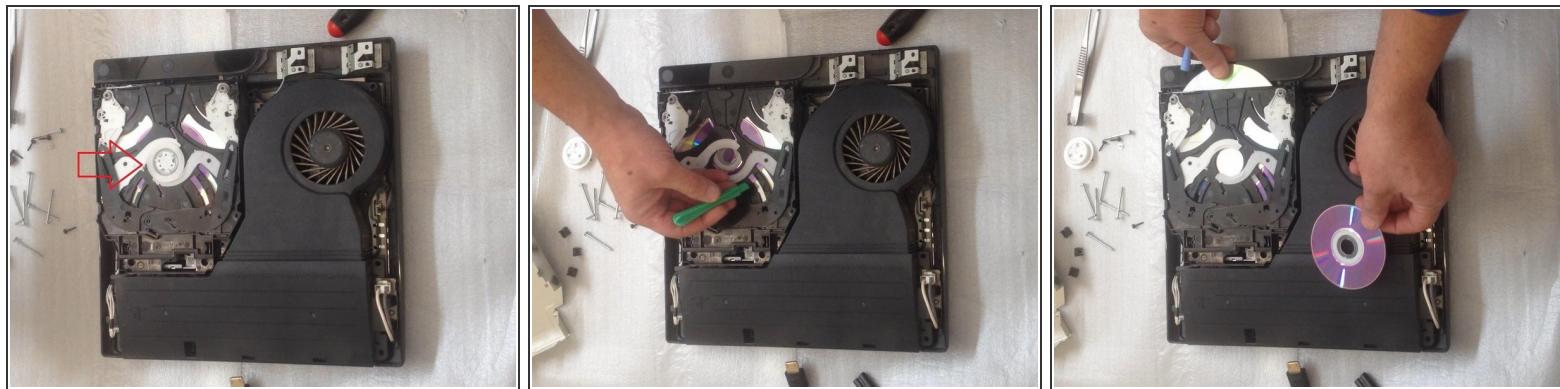

- First remove the spindle disc magnet. Now use plastic tool and slowly extrude the disk from inside.


## Step 4

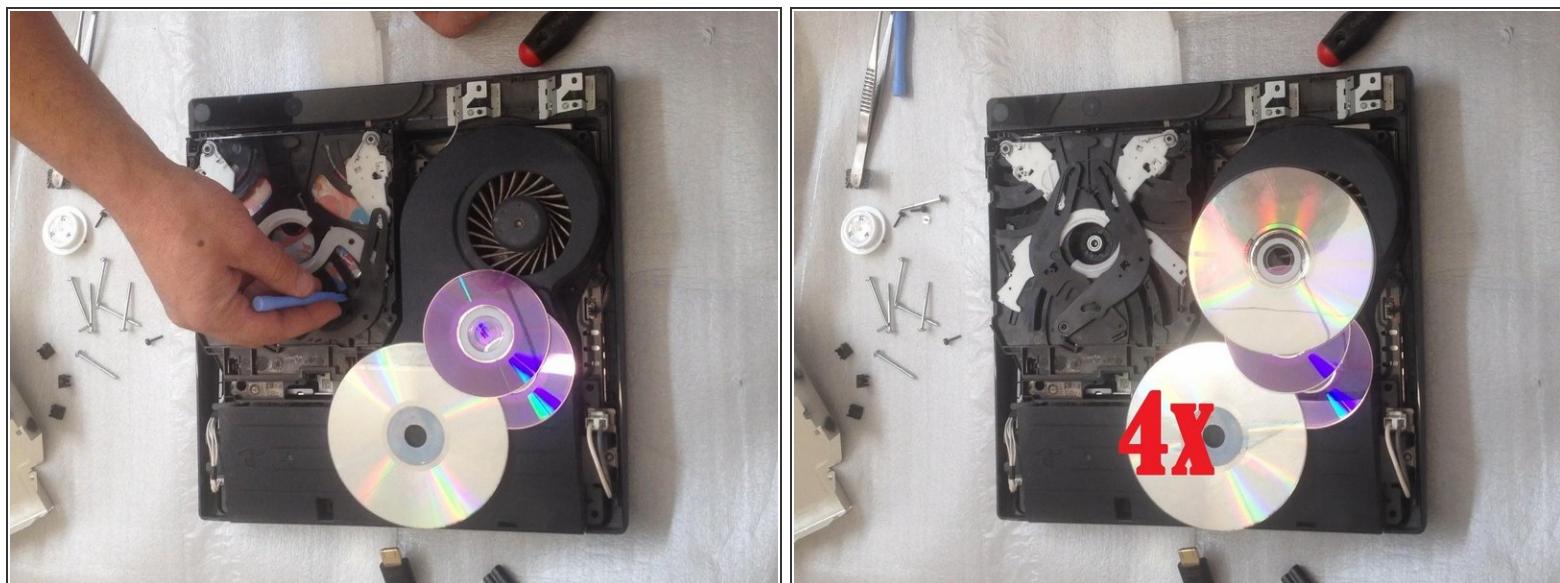

- In this case we have ... 4x disks. :)

Did you do it successfully?

## Step 5

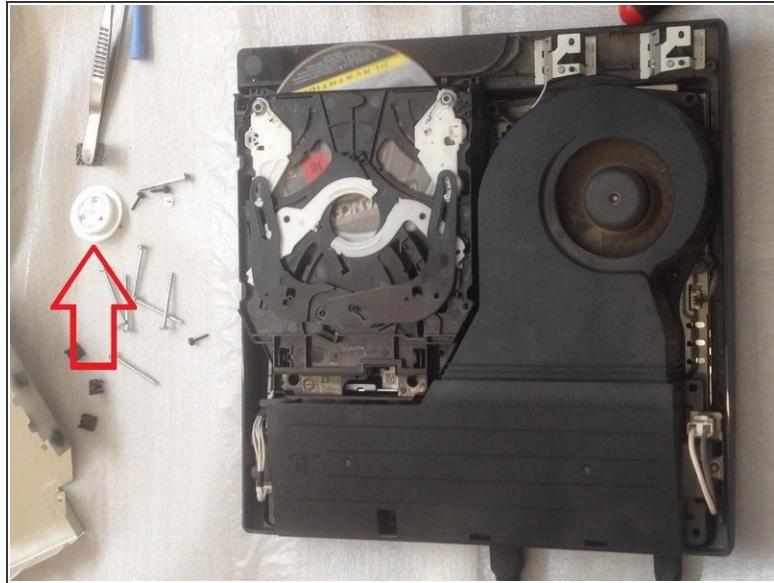

- **Test the console before assembling. And don't forget to put the spindle disc magnet.**

To reassemble your device, follow these instructions in reverse order.