



# PlayStation 3 Super Slim Laser Unit Replacement

How to disassemble and change the Laser Unit.

Written By: ZFix



## Laser Unit replacement

# INTRODUCTION

How to disassemble and change the Laser Unit.

[video: [https://www.youtube.com/watch?v=qXvM\\_xy4kKU](https://www.youtube.com/watch?v=qXvM_xy4kKU)]

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Laser Unit / Deck replacement



- Turn off the console and disconnect all cables.

## Step 2



- You must remove the warranty sticker and 4 screws.

## Step 3




- After removing HDD bay cover, you will see another 3 screw.

## Step 4



- Push there to release and remove upper back bezel.

## Step 5

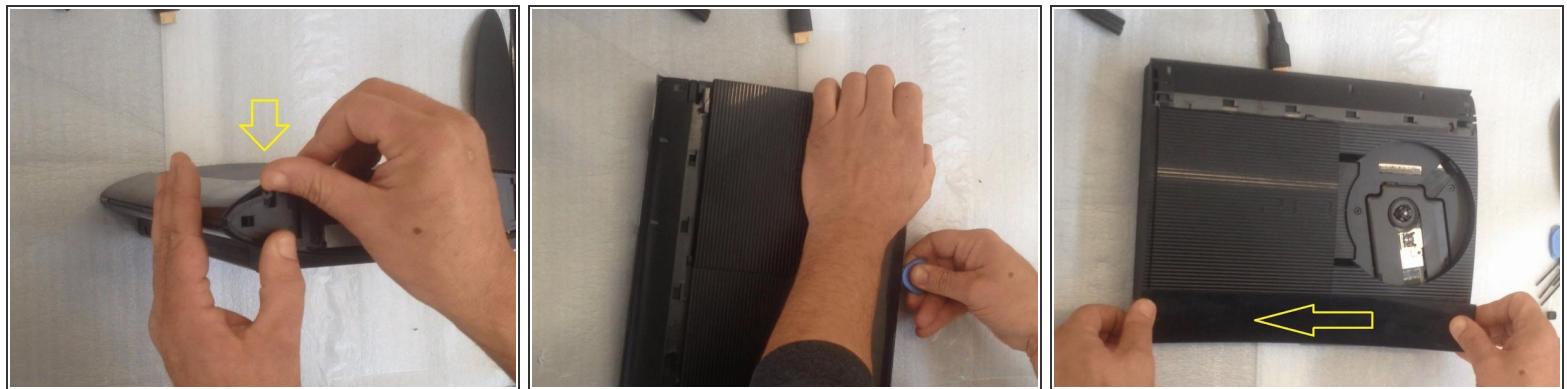


- The upper front bezel is harder to remove.

## Step 6



- Remove 7 screws to release top cover.

## Step 7

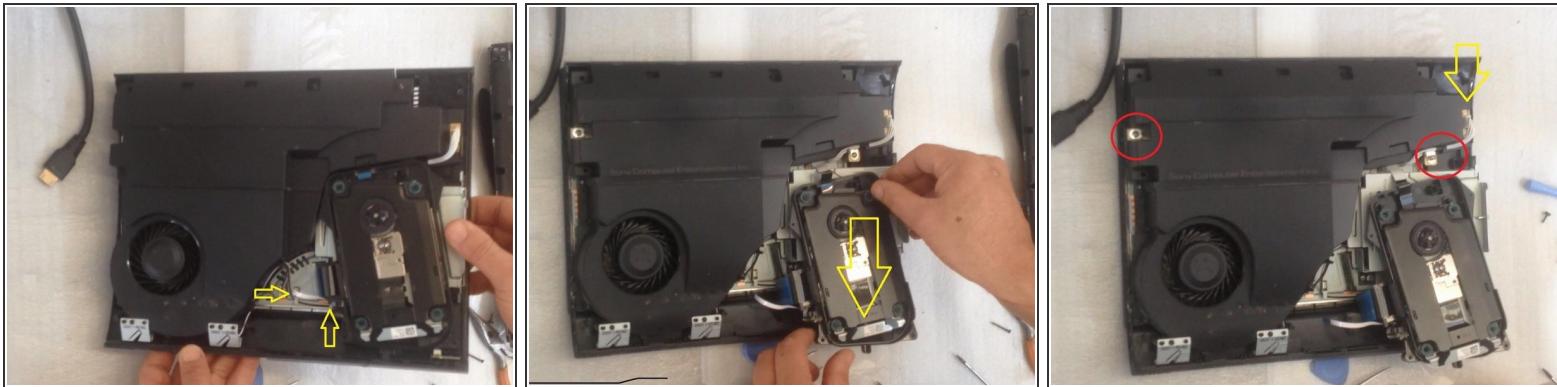


- Disconnect two flex-cables and move the Laser Unit. Remove the two screws and the small cable and then take out the Power Supply Unit.

## Step 8




- To release the laser unit disconnect this flex-cable.

## Step 9

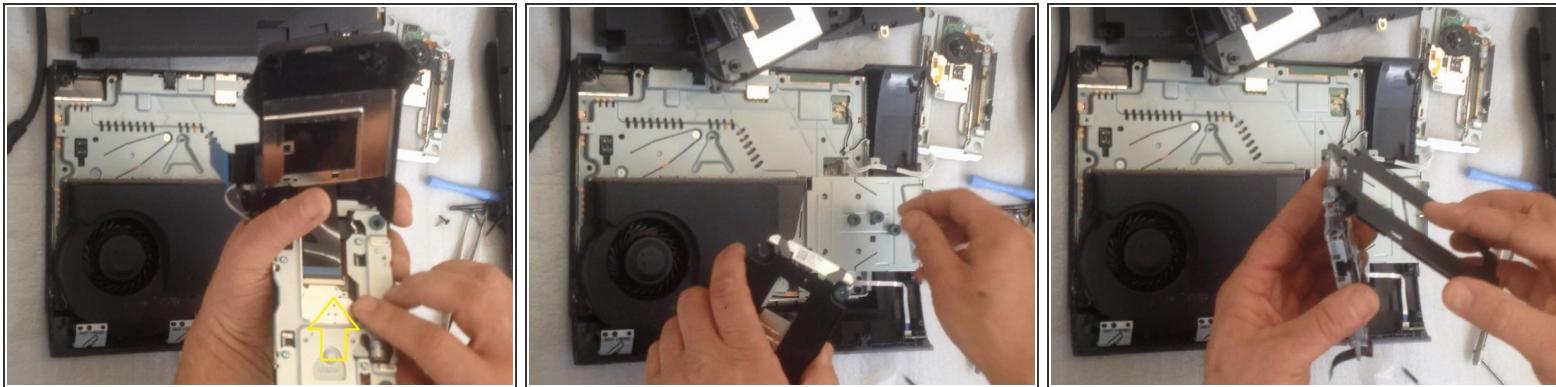

- One flex-cable, for rubbers and the metal bezel.

## Step 10

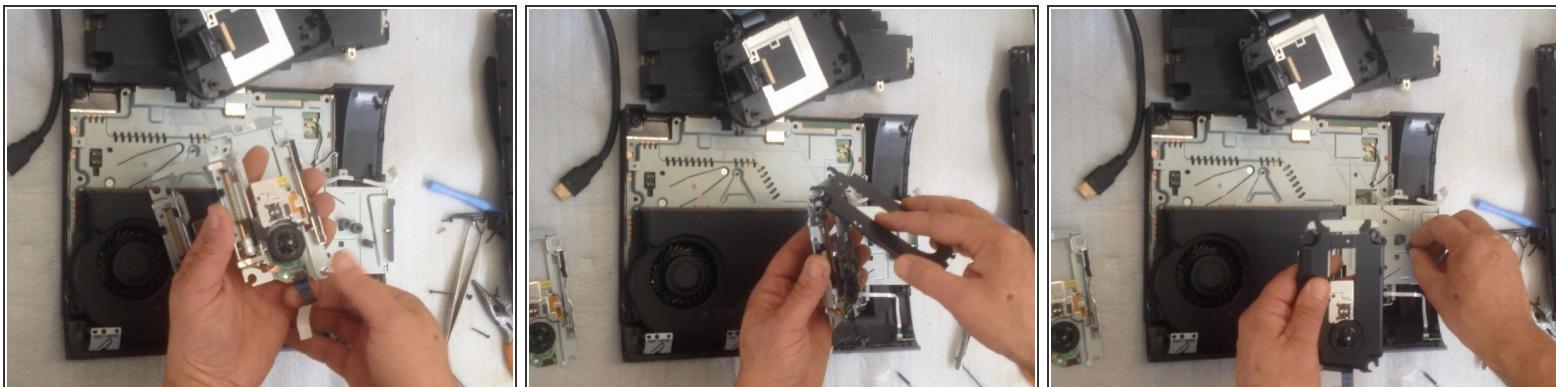

- Disconnect this flex-cable and attach it to the new spare part. Let's start assembling.

## Step 11



- **Assembling, assembling...**

## Step 12



- **Let's test the device before fully assembling it.**

To reassemble your device, follow these instructions in reverse order.