


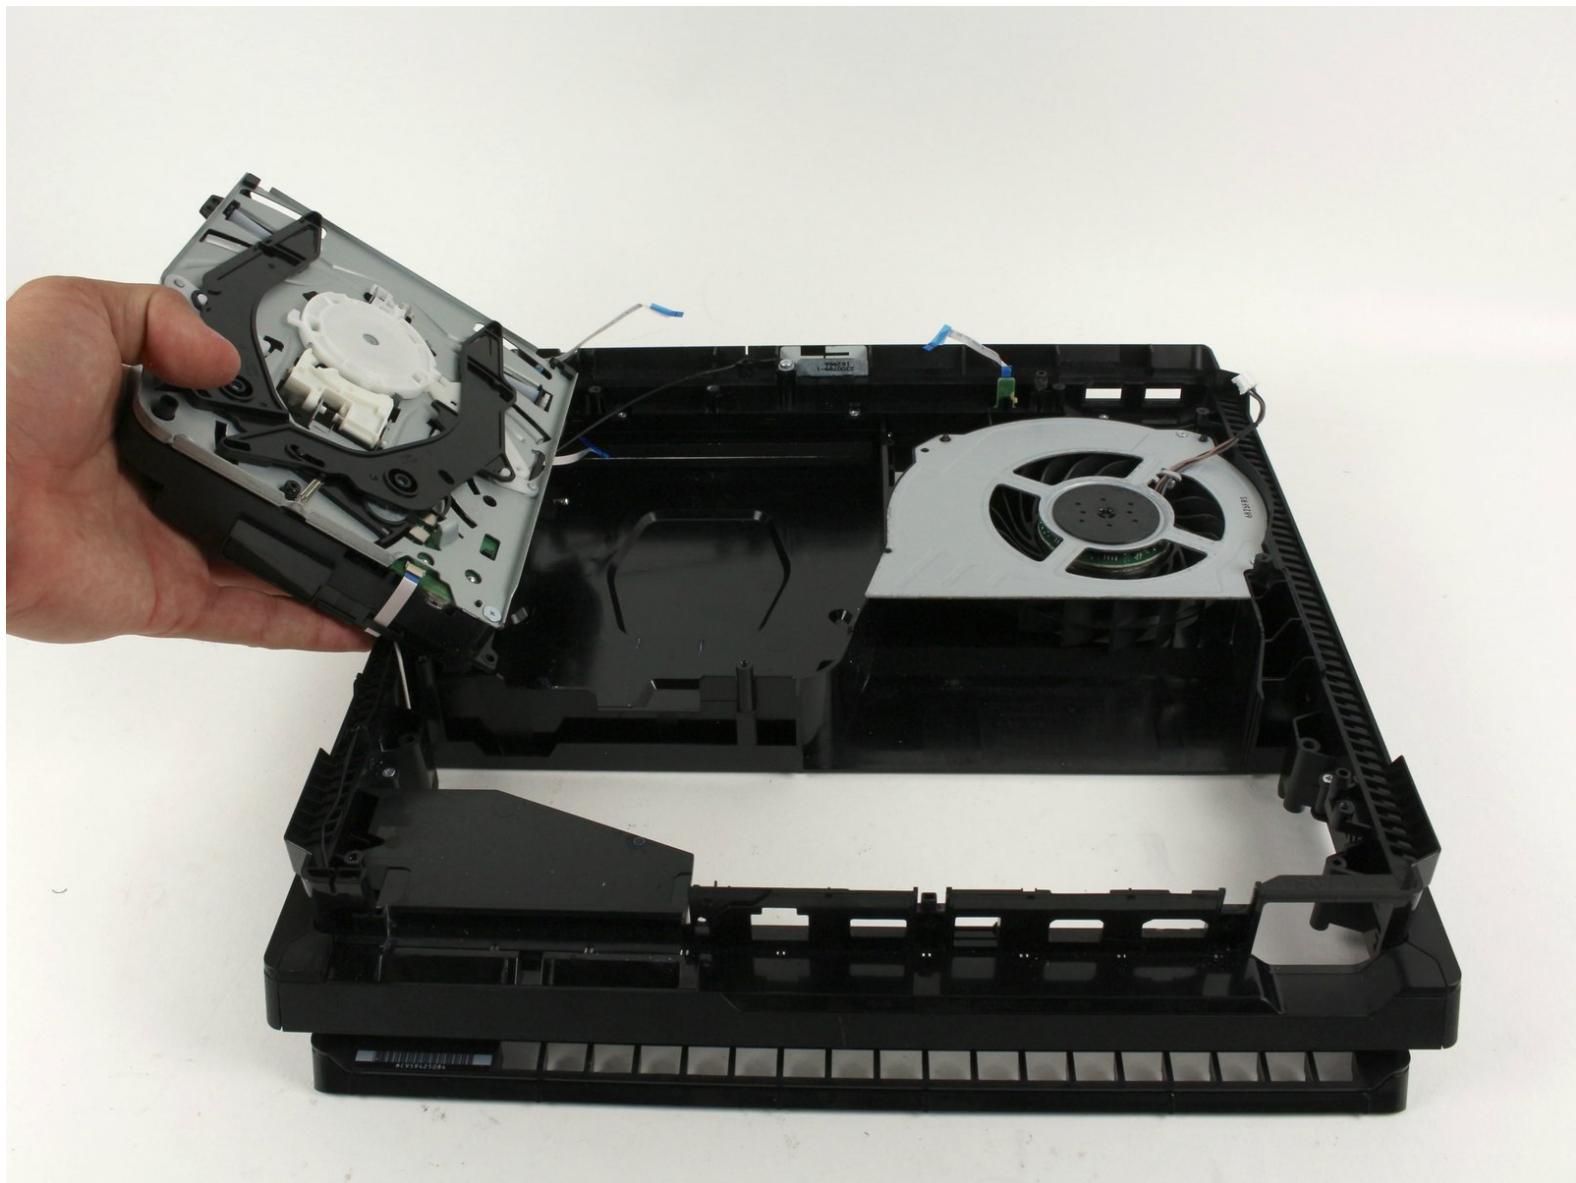

PlayStation 4 Pro Optical Drive Replacement

This guide will show you how to replace the optical drive in your Playstation 4 Pro.

Written By: Thomas



INTRODUCTION

This guide includes the steps necessary to remove the optical drive in the PlayStation 4 Pro. This is one of the last things that is removable in the PS4 Pro, which means that just about everything else has to be removed first. This guide includes a large amount of disassembly, as well as warranty-voiding steps.

TOOLS:

- [T8 Torx Security Bit Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [PlayStation 4 Pro Optical Drive](#) (1)

Step 1 — Hard Drive Caddy



- Flip the console upside down.
- Use your finger to pull and snap off the plastic cover over the hard drive.

Step 2



- Use a Phillips #0 Screwdriver to remove the single screw securing the hard drive caddy.
- Pull the hard drive caddy straight out.

Step 3 — Power Supply Assembly



- Flip the console right side up.
- Grip the two corners located at the front of the device.
- Pull upwards until a loud click is heard.

(i) This may require a lot of force, so do not be afraid to get a little rough with your console.

- After both corners detach, slide the cover backwards and lift off.

Step 4



- Use a T8 Torx Security screwdriver to remove five screws from the rear of the device.
 - Two 31mm screws.
 - Three 10mm screws.
- Remove the metal plate by pulling it up.

Step 5




- Flip the console over so the bottom is facing up.
- Use a T8 Torx Security screwdriver to remove the three black 7mm screws in the back panel.
- Remove the bottom cover in the same way as the top cover. Grip the cover on both sides and pull up until it clicks. Then slide the cover off.

Step 6





- Use a T8 Torx security screwdriver to remove the eleven 10mm silver screws from the metal plate.
- Use a Phillips #1 screwdriver to remove the eleven 4mm black screws from the metal plate.
- Use a spudger to disconnect the three antenna cables (two black and one white) by prying them straight up from their sockets.

Step 7

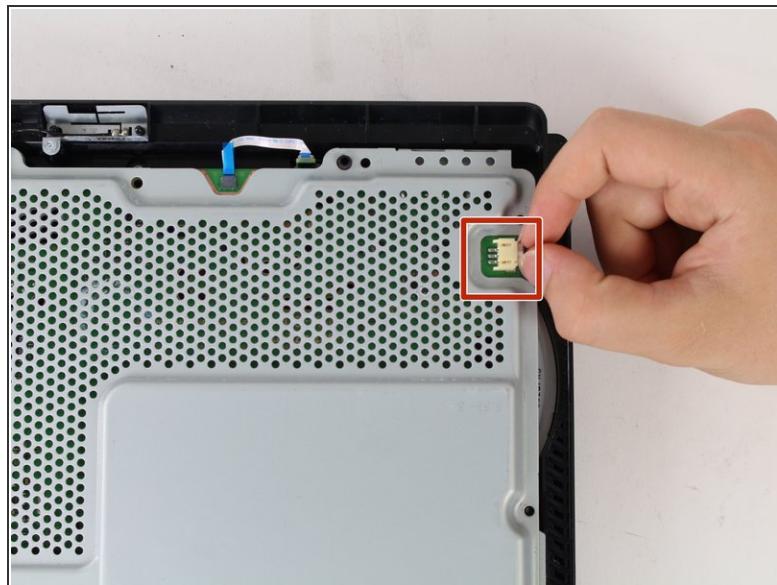

- Pull the white fan connector straight out of the yellow mount on the motherboard.

Step 8

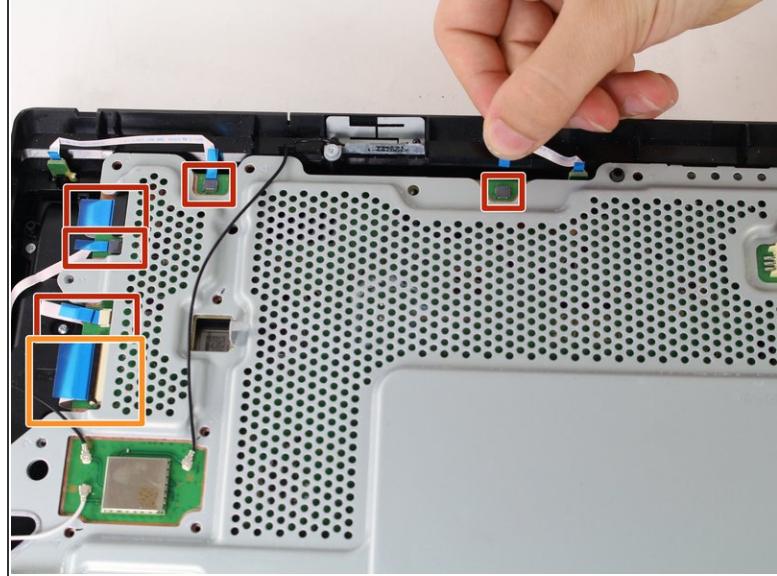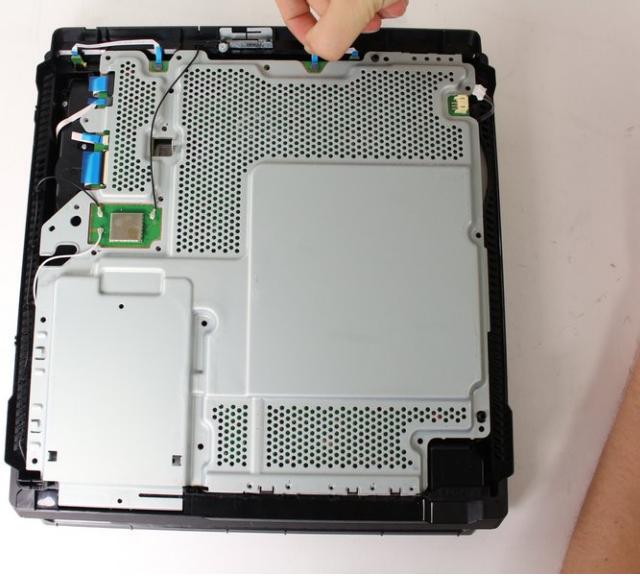

- Pull out the five small, blue low profile cables connected to the metal plate.
- Lift the retaining flap on the ZIF connector of the large ribbon cable.
- Pull the large ribbon cable from its socket.

⚠ Do not pull on the biggest blue cable without lifting the tab first. Doing so can damage the connection.

Step 9



- Pull up and remove the metal plate.

Step 10



- Flip the console over to continue working on the top side.
- Pull up on the power supply unit and set it on the console.

 Be careful not to pull too far, the assembly is still connected at one point.

- Grip the connector behind the power supply and pull straight out.

Step 11 — Motherboard




- Carefully flip the console over so the bottom is facing up.
- Use a Phillips #1 screwdriver to remove the eight 4mm screws on the metal plate with the X-like symbol.
- Use a plastic opening tool to remove the metal plate with the X-like shape.

Step 12




- Use a Phillips #1 screwdriver to remove the four 13mm screws on the X-shaped metal plate underneath.
- Grip the X-shaped retaining bracket and lift straight up.

Step 13

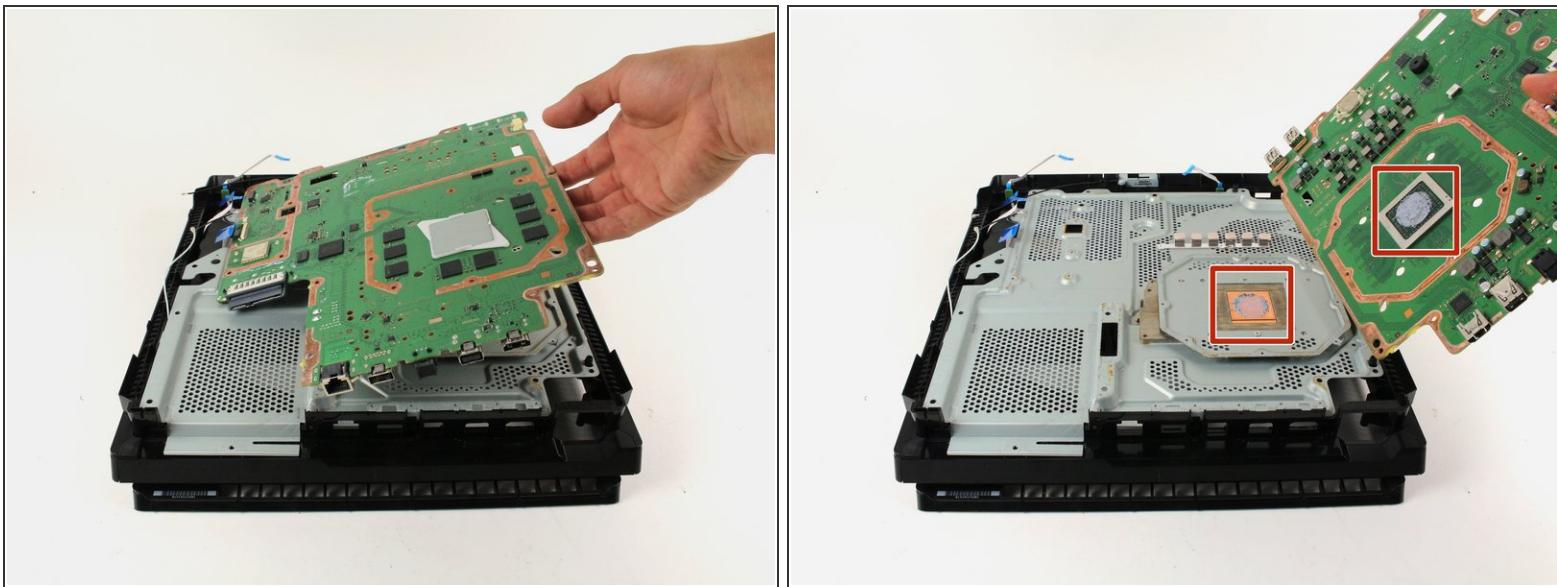


- Grip the edge of the motherboard and slowly lift upwards to remove it from the device.
- ★ For reassembly, use [this guide](#) to reapply thermal paste between the motherboard and the metal plate underneath.

Step 14 — Heat Pipe

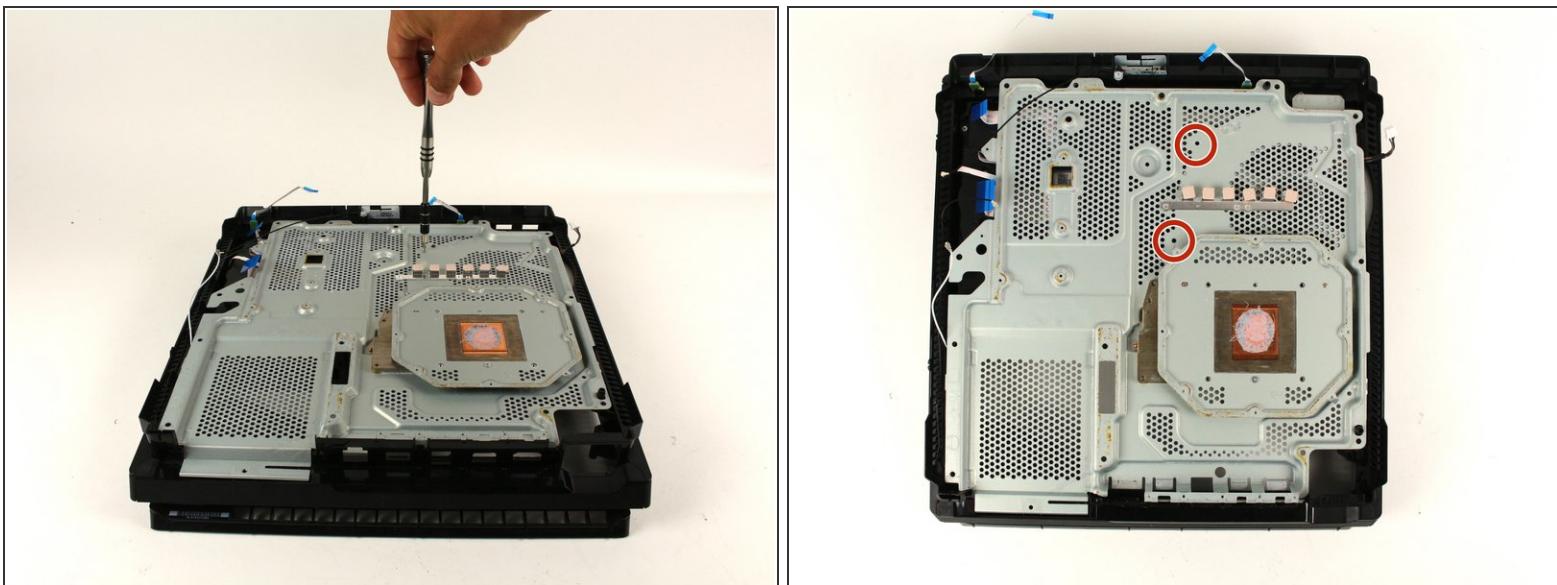

- Use a Phillips #0 screwdriver to remove the two 6 mm silver screws from the metal plate.

Step 15

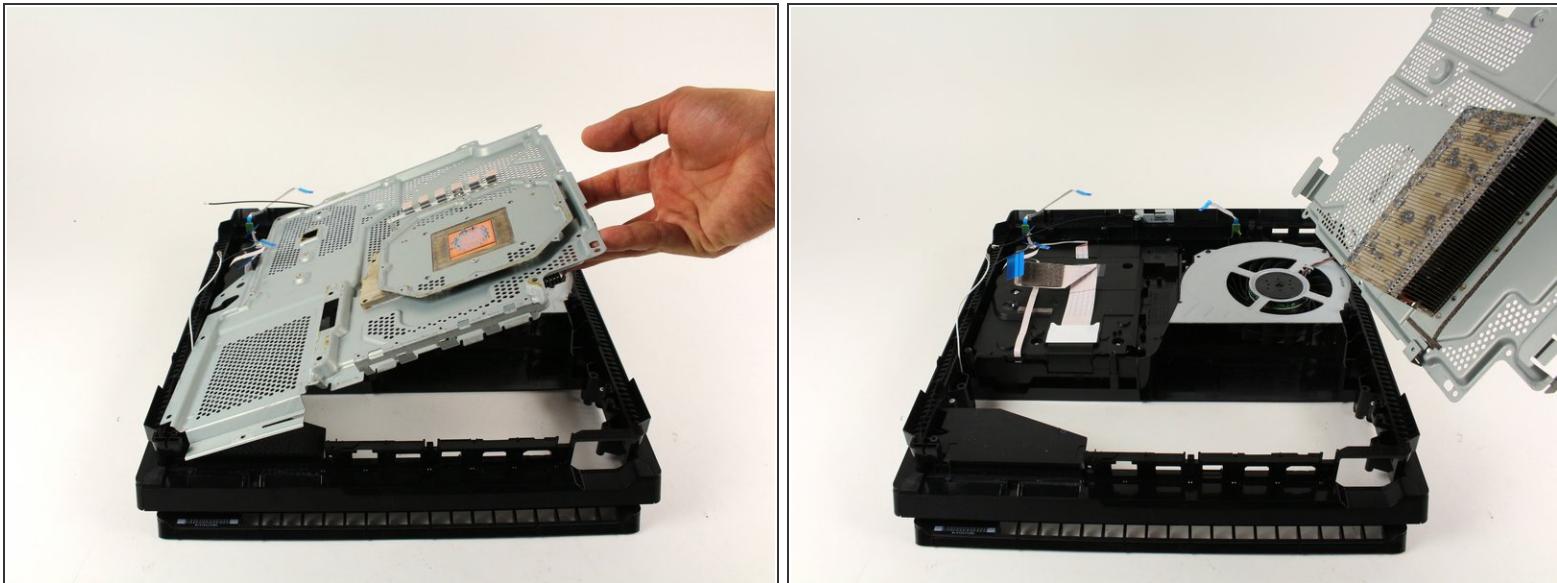

- Lift the metal plate that is connected to the heat pipe straight up to remove it.

Step 16 — Optical Drive



- Use a Phillips #0 screwdriver to remove the four screws.
 - One 30 mm screw.
 - Three 6mm screws.
- Grab the optical drive and lift up to remove.

To reassemble your device, follow these instructions in reverse order.

