



PlayStation 4 Slim Power Supply Replacement

This guide will walk you through on how to remove and replace the power supply on your Playstation 4 Slim.

Written By: Hernan Rodriguez



INTRODUCTION

Use this guide to remove or replace your Playstation 4 Slim's power supply.

TOOLS:

- T8 Torx Screwdriver (1)
- Metal Spudger (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:

- PlayStation 4 Slim N15-160P1A Power Supply (1)
- PlayStation 4 Slim ADP-160CR Power Supply (1)
- PlayStation 4 Slim N16-160P1A Power Supply (1)
- PlayStation 4 Slim ADP-160ER Power Supply (1)
- PlayStation 4 Slim ADP-160FR Power Supply (1)

Step 1 — Bottom Cover



- Locate the plastic warranty sticker next to the three ports on the side of the console.
- Remove the warranty sticker by peeling it off with any kind of spudger.

⚠ Removing the warranty sticker will NOT cause your warranty to be null and void.

Step 2



- Unscrew and remove the 5.0mm screw that was behind the sticker using a T8 security Torx screwdriver with a counter-clockwise motion.

Step 3



- Place the Playstation 4 Slim upside down with the side of the screw you just removed facing you.
- Pry up on the two corners that are facing you with your fingers.

(i) This may take a bit of force to open up and you will hear a fairly loud click when the bottom cover detaches.

- Remove the bottom cover by sliding it towards the back corners and lifting up.

Step 4 — Power Supply




- Place the Playstation 4 Slim right side up, with the PS logo on top and the side with the words "SONY" and "PS4" facing you.
- Pry up on the two corners that are facing you with your fingers.

(i) This may take a bit of force to open and you will hear a fairly loud click when the top cover detaches.


- Remove the top cover by sliding it towards the back corners and lifting up.

Step 5

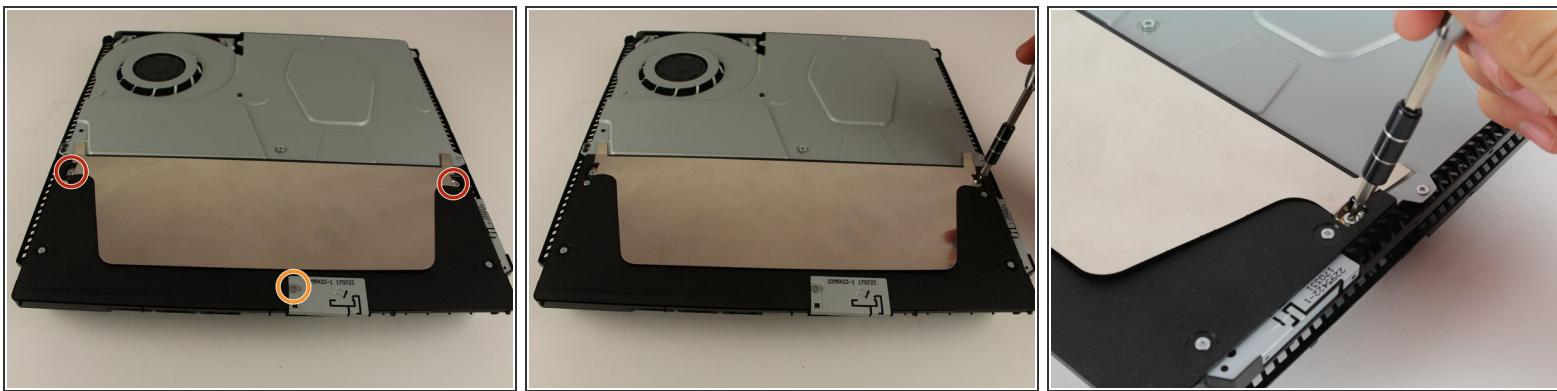


- Unscrew and remove the two screws (left one 31.0mm and right one 24.0mm) using a T8 screwdriver with a counter-clockwise motion.
- Unscrew and remove the 3.0mm screw using a Phillips #1 screwdriver with a counter-clockwise motion.

Step 6

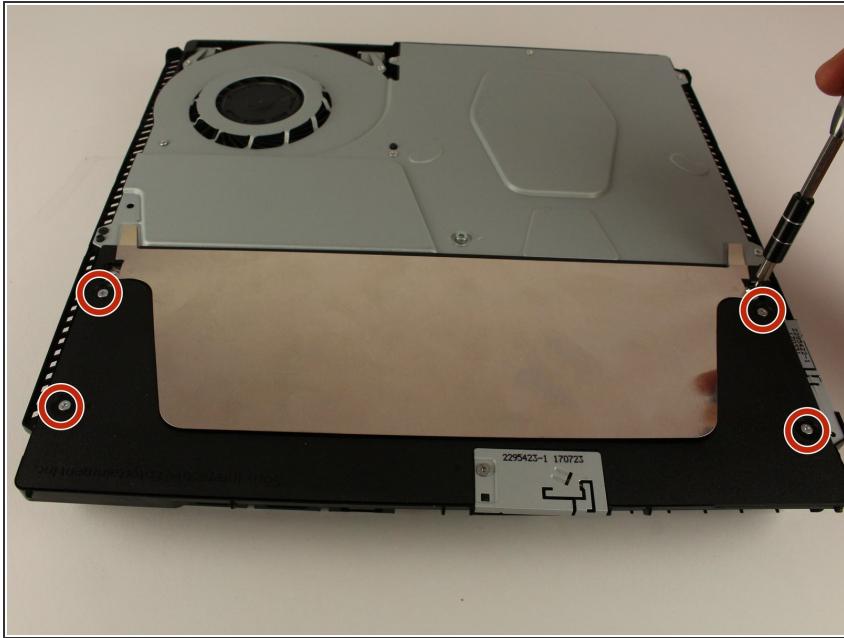


- Remove the four 16mm Philips screws holding the power supply in place.

Step 7

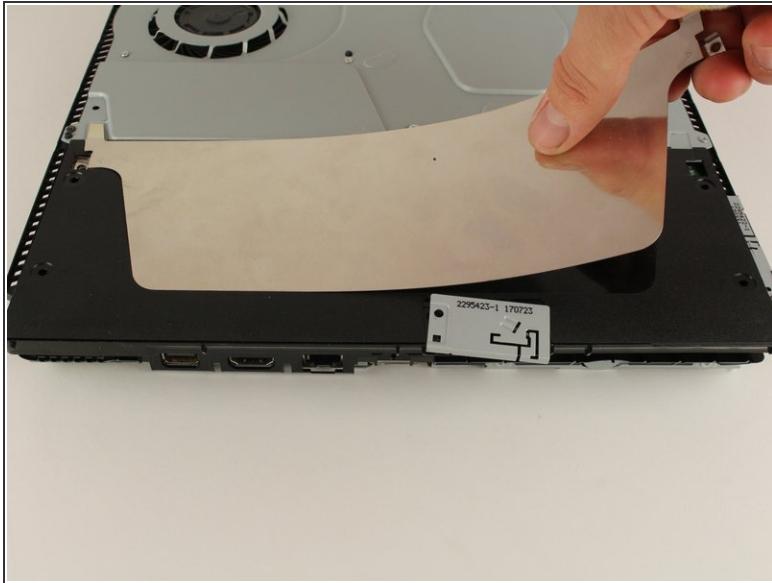


- Remove the metal sheet from the top of the power supply by grabbing and lifting up with your hands.

Step 8

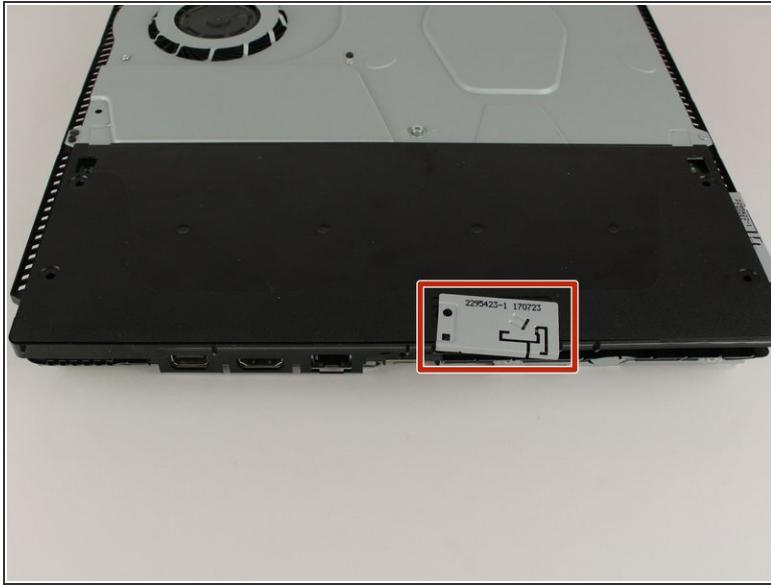

- Remove the antenna from the top of the power supply by guiding the wire with your fingers through the grooves underneath the metal panel.

Step 9

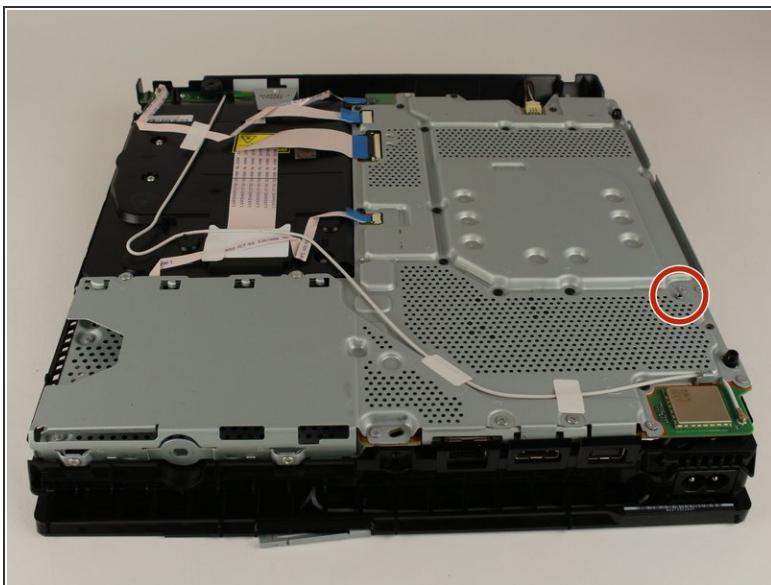

- Flip the Playstation 4 Slim onto its back.
- Unscrew and remove the 4.0mm screw using a Phillips #1 screwdriver with a counter-clockwise motion.

This document was generated on 2020-03-26 08:35:32 PM (MST).

Step 10



- Use a plastic opening tool to make space between the power supply and console by wedging and wiggling it in-between the two.
- Lift the power supply up and onto the metal sheet using your hands.

Step 11



- Disconnect the wire connection from the power supply by firmly gripping it with your fingers or tweezers and pulling out.
- Remove the power supply completely by grabbing and lifting up with your hands.

To reassemble your device, follow these instructions in reverse order.