




PlayStation Move LED Light Replacement

This guide will walk you through replacing LED Light on the Playstation Move.

Written By: Maritza Martinez

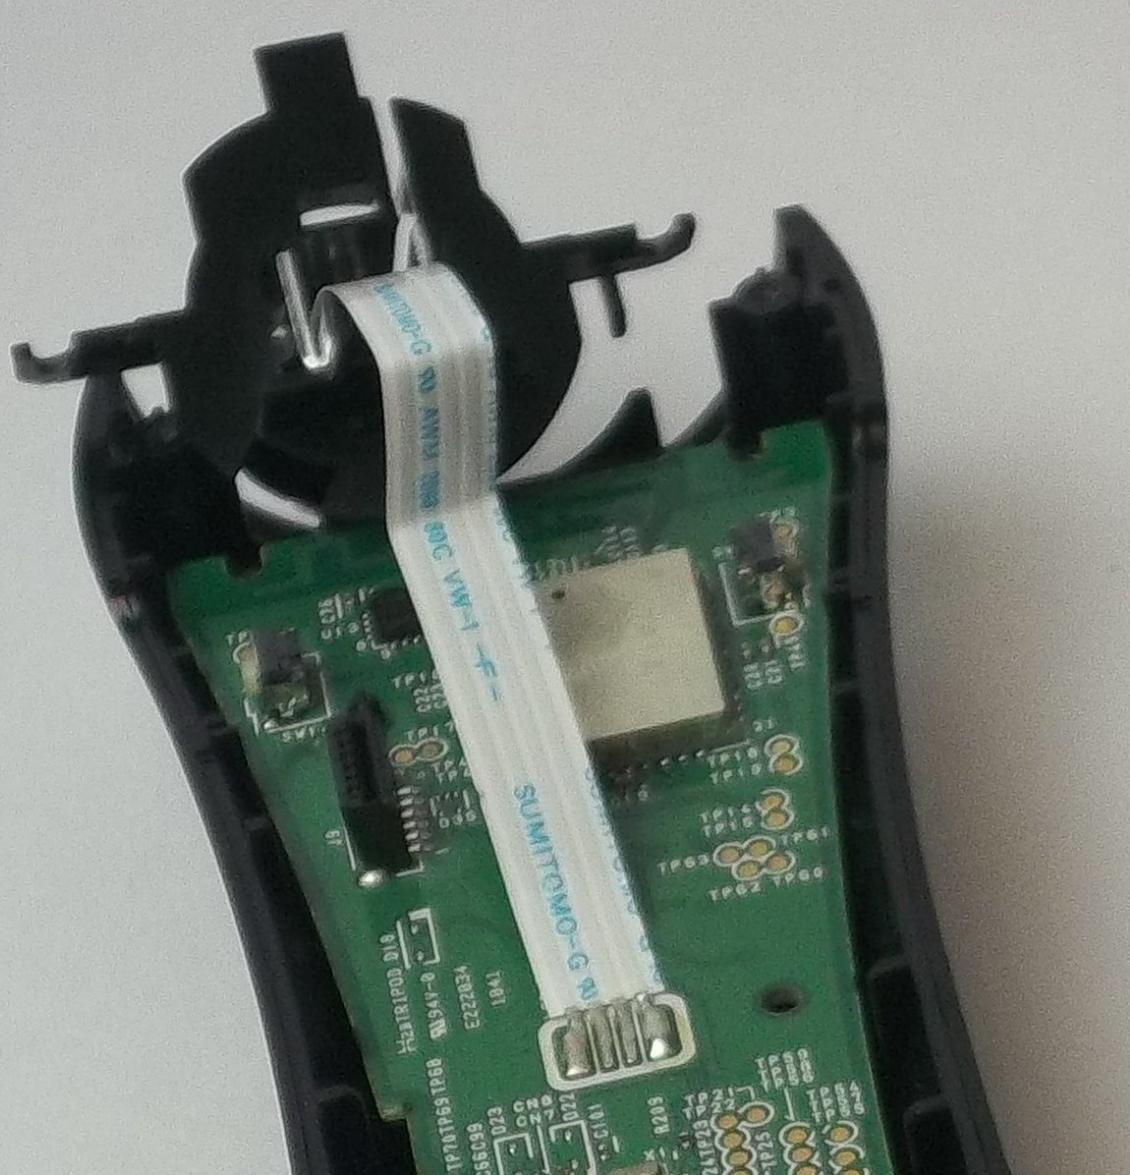

INTRODUCTION

Use this guide to replace the LED light on the Playstation Move

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery





- Using a Phillips #1 screwdriver, remove the four 10mm screws from the corners of the trigger button.

Step 2




- Using a Phillips #0 screwdriver, remove the four 10mm screws located at the back of the device.

Step 3

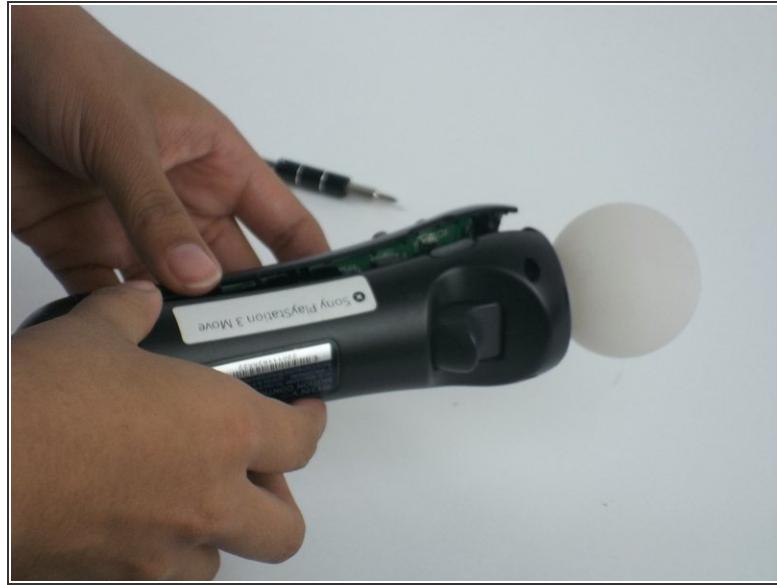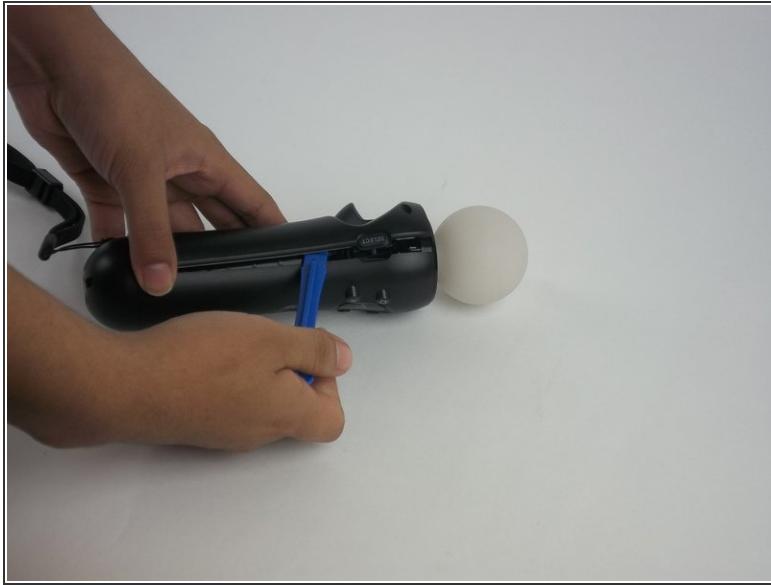

- Insert the plastic opening tool at the indent along the front and back surfaces of the controller.
- Gently use a forward and backward motion to safely pop open the cover.
- Use your hands to further pull it apart and pop it open.

Step 4

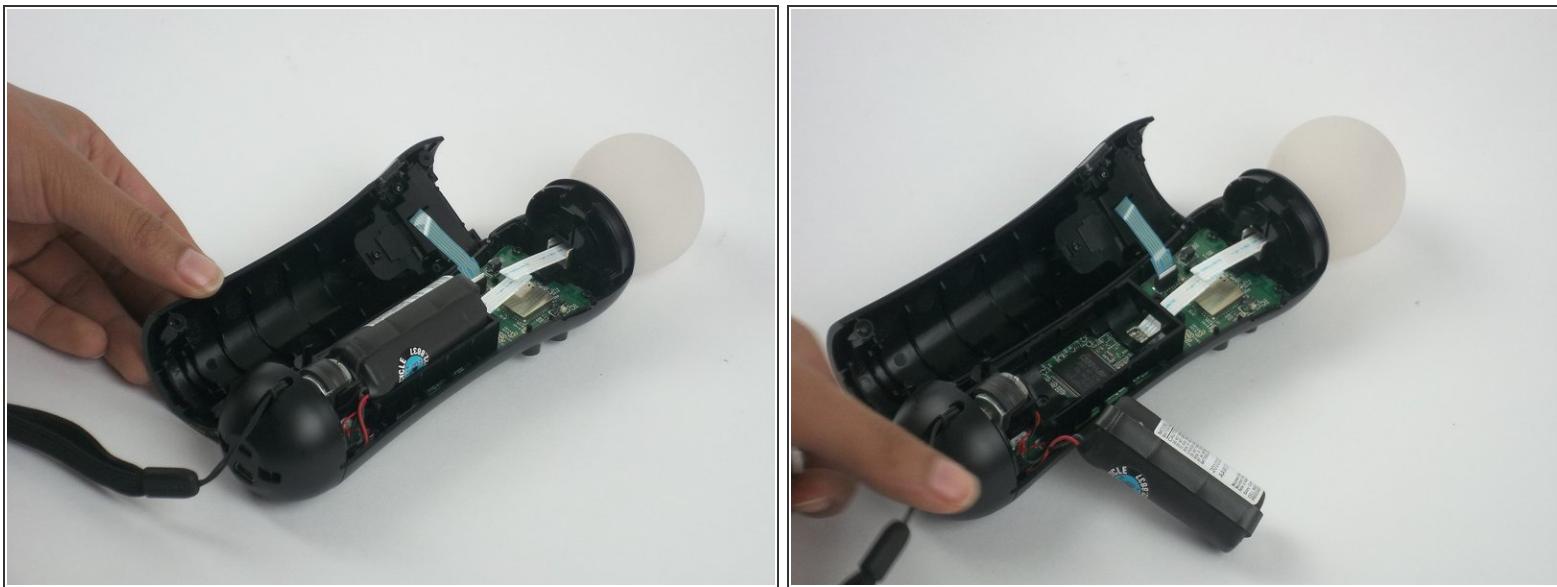

- Once the device is opened, lift the battery out of the black plastic holder.



⚠ Carefully pull the battery out and ensure that its wires are still connected to the inside.

Step 5





- Using a Phillips head screwdriver, remove the 9mm screw located to the right of the battery, which is connected to the inner plastic frame.
- Use the plastic opening tool to carefully take out the grey cylindrical piece (vibrator) that is also attached to a wire.

Step 6

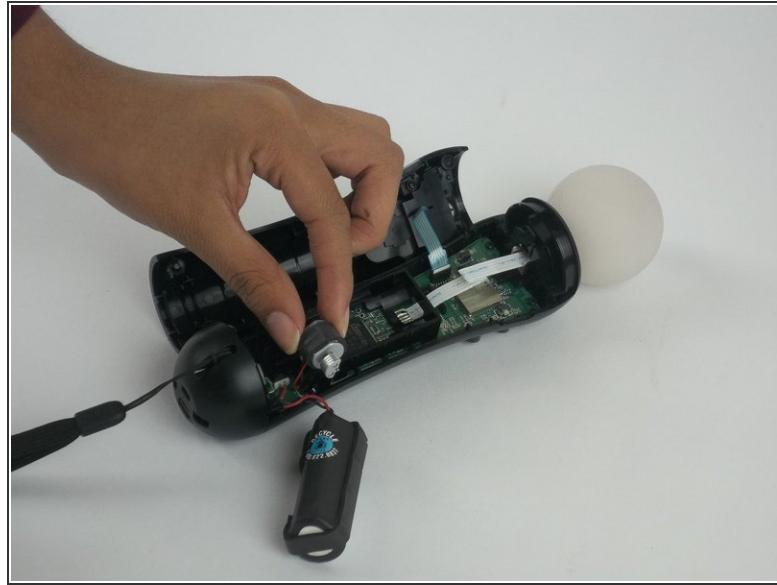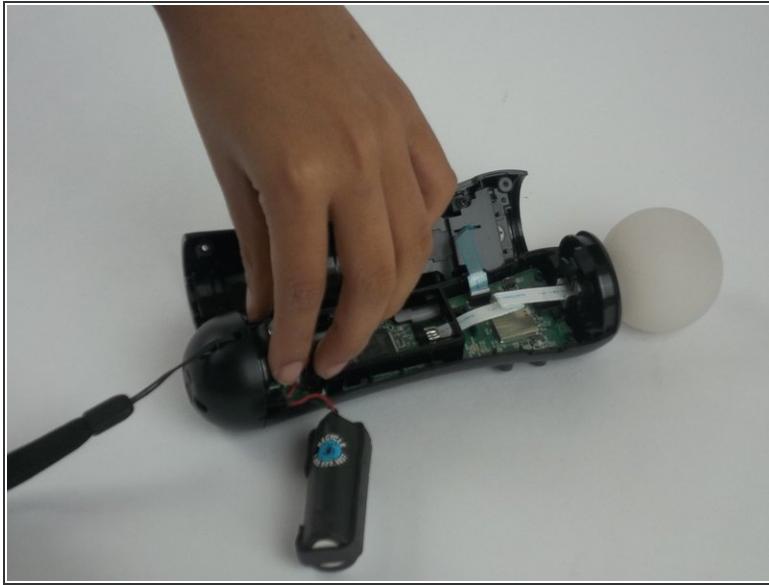


- Gently pull out the small cylindrical grey piece (vibrator).
- ⓘ Removing this piece makes it easier to access the wire connection of the battery and remove it.

Step 7

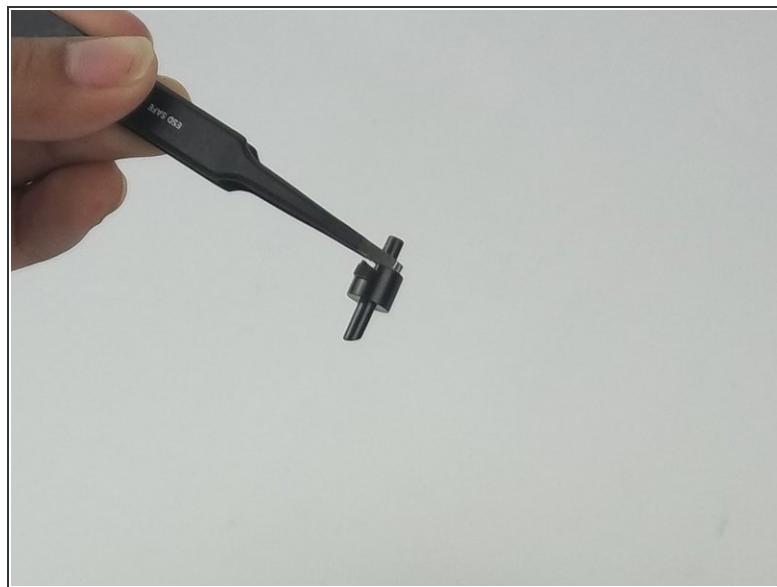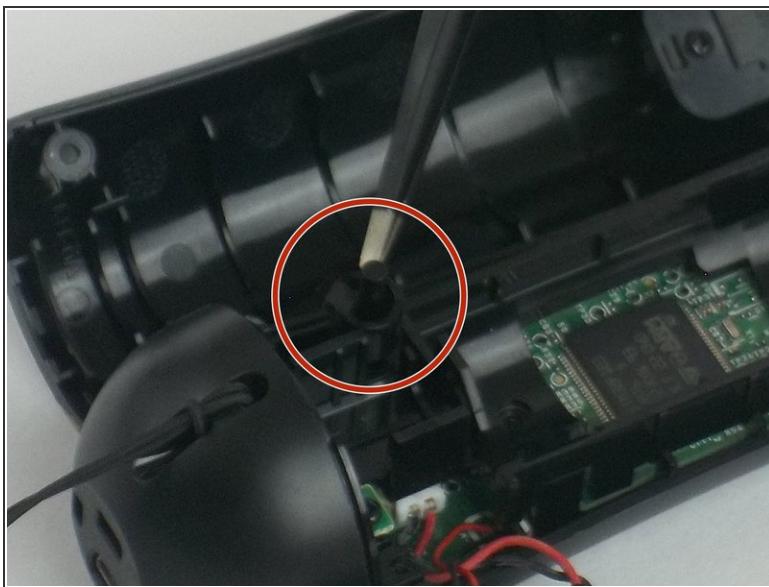

- Use tweezers to remove the small piece with a cylindrical top that is located to the left of the inner plastic frame.


Step 8

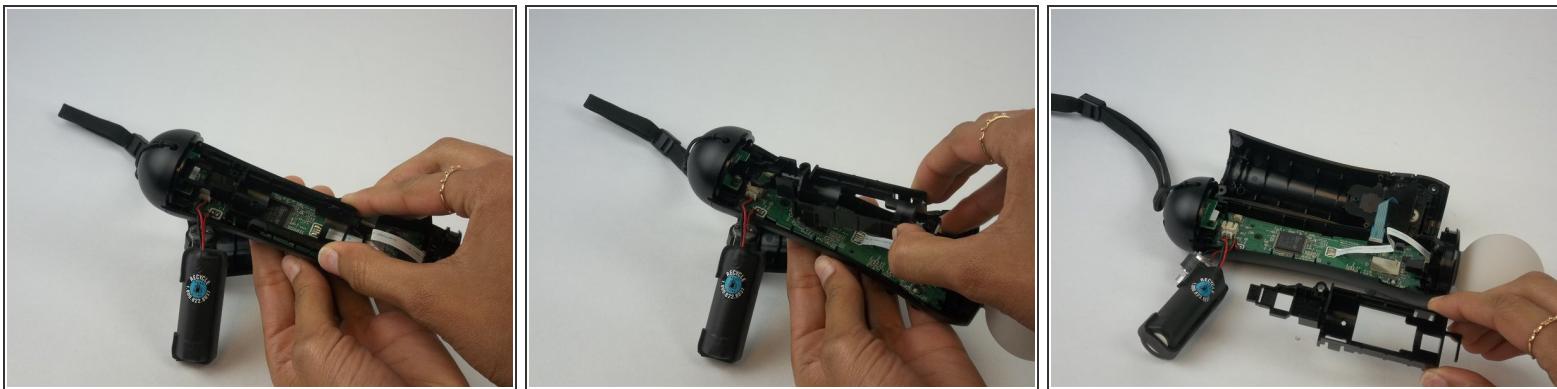

- Use one hand to hold the bottom of the device, and the other hand to squeeze the inner plastic frame.
- While squeezing the inner plastic frame, pull it up and then pull it towards you to detach it.


⚠ While removing the frame, be extremely careful because it could damage the frame or the motherboard.

Step 9

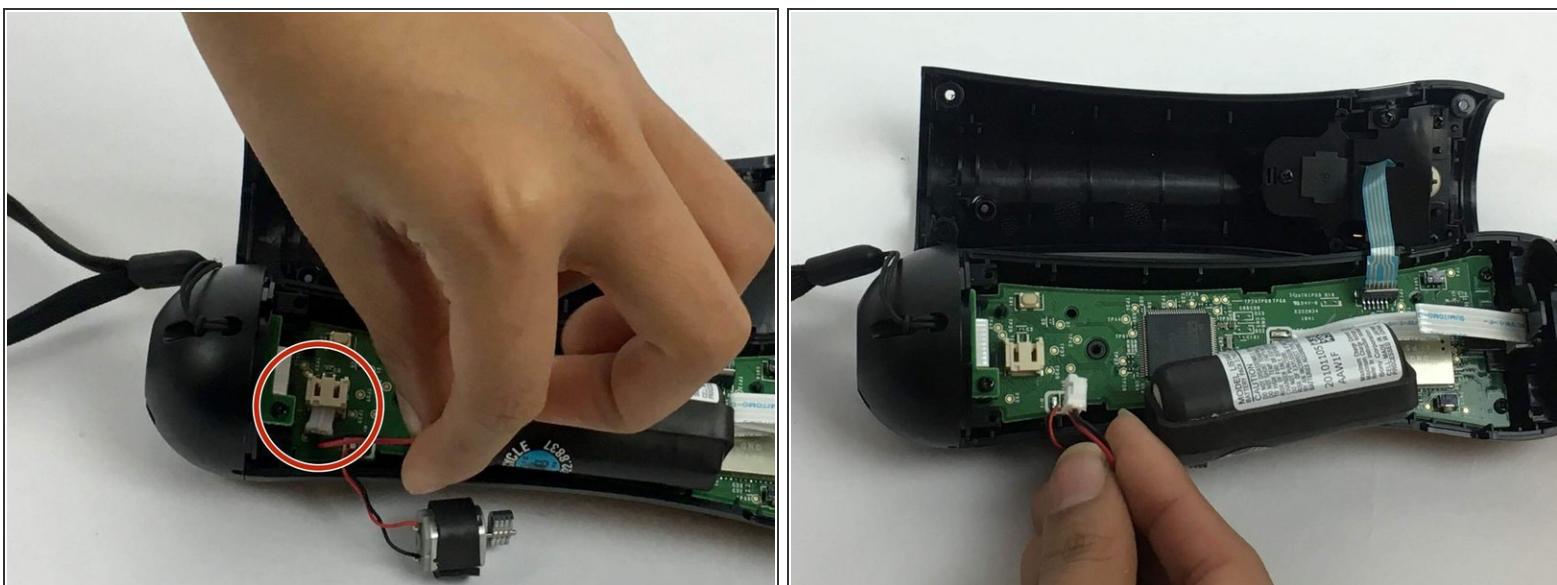


- Gently pull on the end of the red and black wires which is closest to the connector to disconnect the battery.

Step 10 — Motherboard

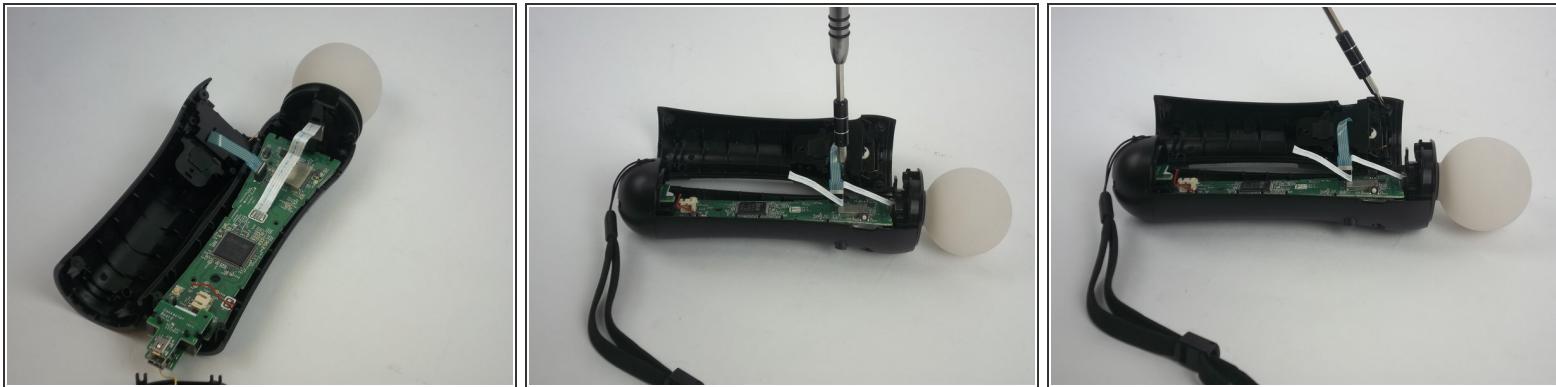


- Remove the five 1.2 mm screws from upper portion of the controller.
- *i* If you are replacing the **trigger button**, continue to step 13.

Step 11

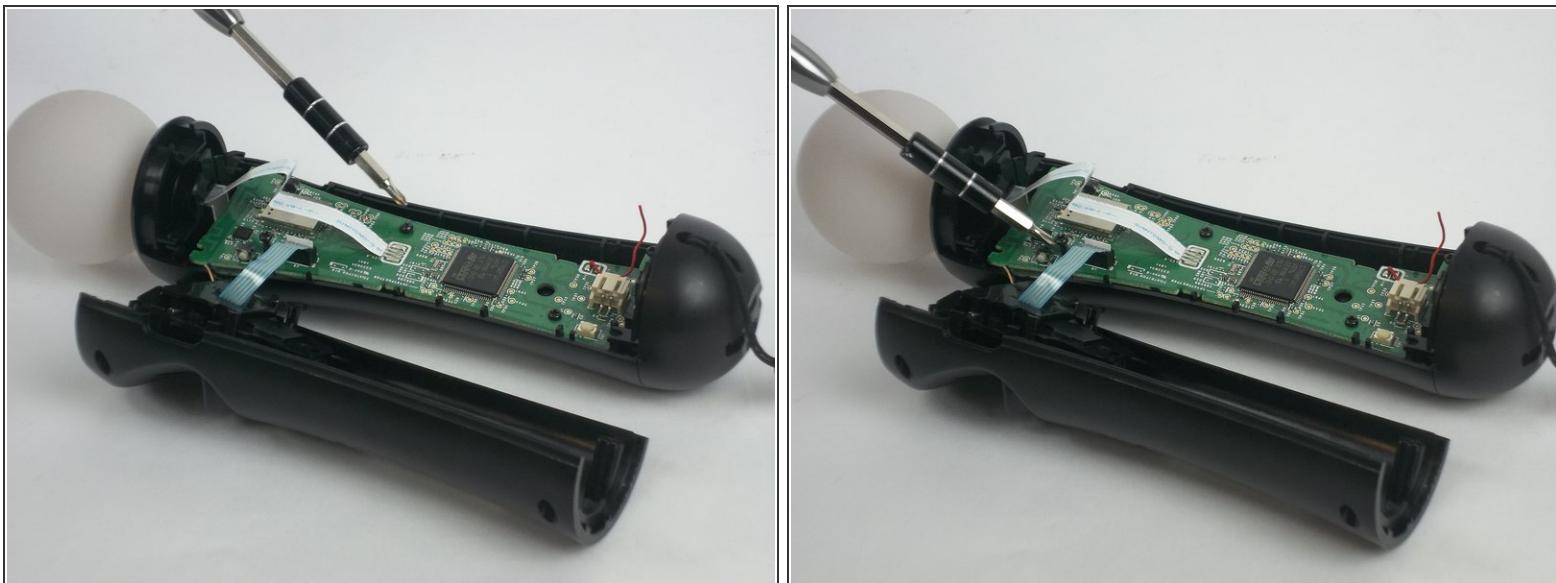

- Remove the two 1.2mm Phillips #1 screws.

Step 12

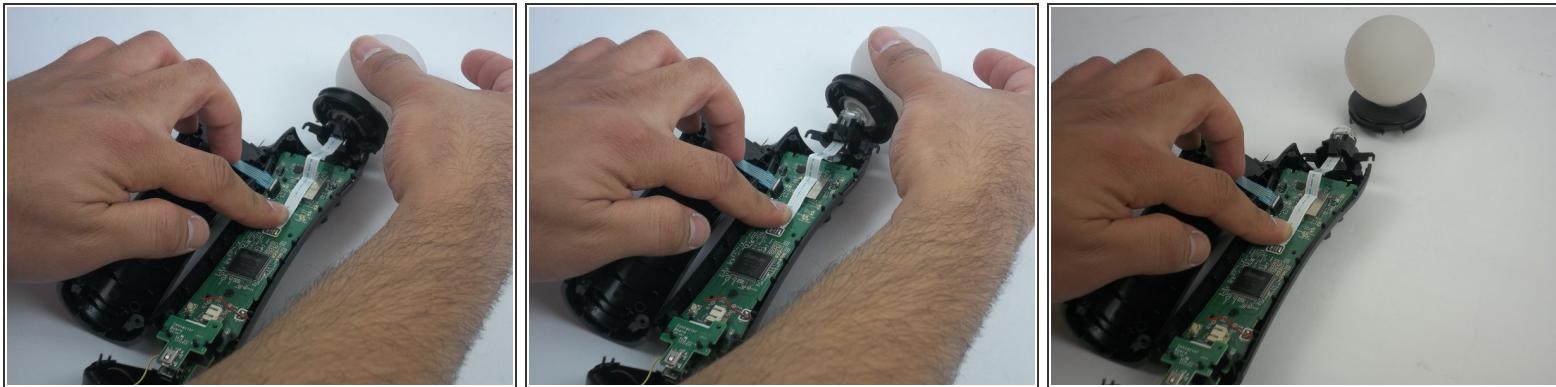

- Cautiously remove the circular white piece at the top without removing the LED inside.



Step 13



- Remove the blue strip that is connected to the trigger button from the motherboard


⚠ Be careful to gently detach it from the motherboard. The strip may rip if too much strength is applied.

Step 14

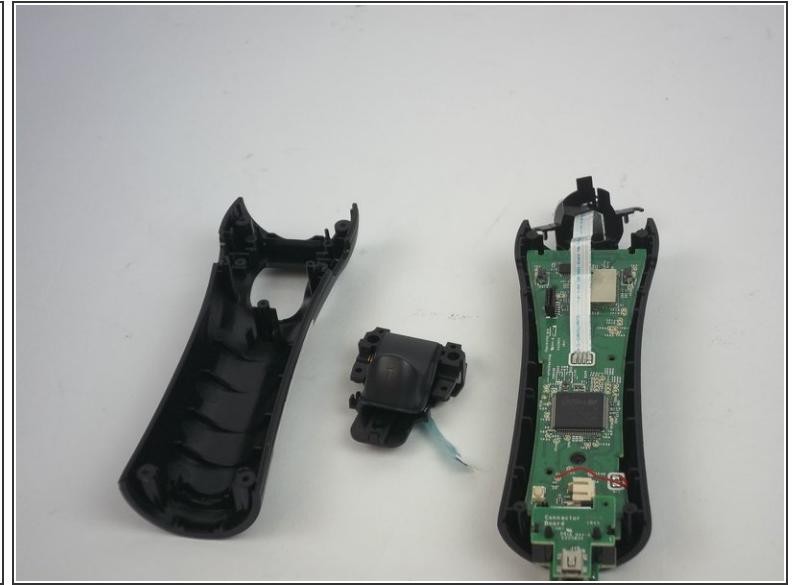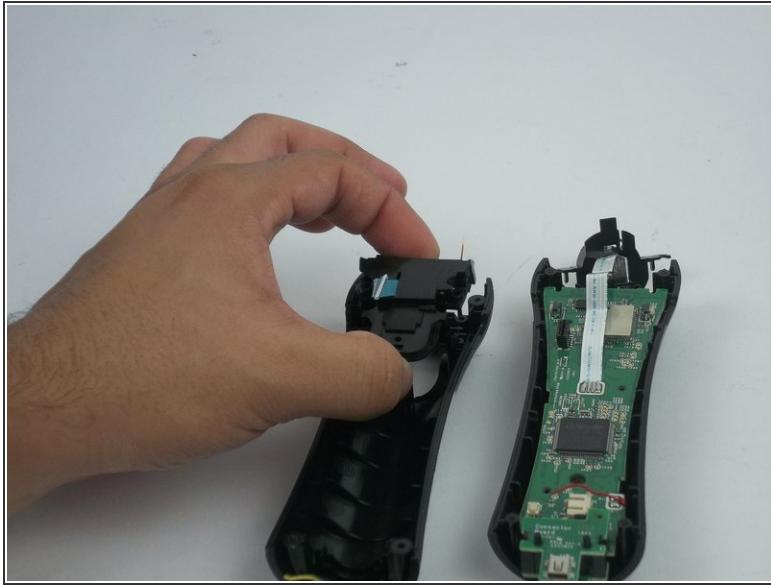

- Remove the trigger button from the controller.


Step 15

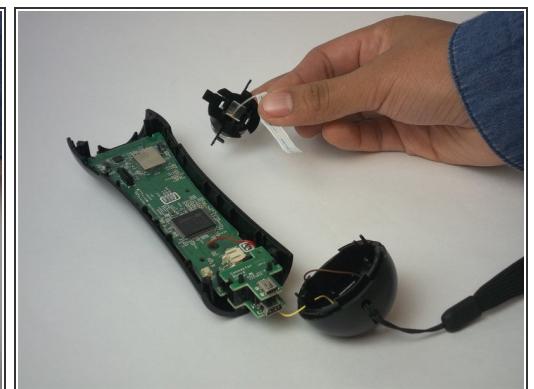

- Remove the LED light by removing the white strip.

(i) If you are replacing the **LED light**, continue to [Step 17](#).

Step 16

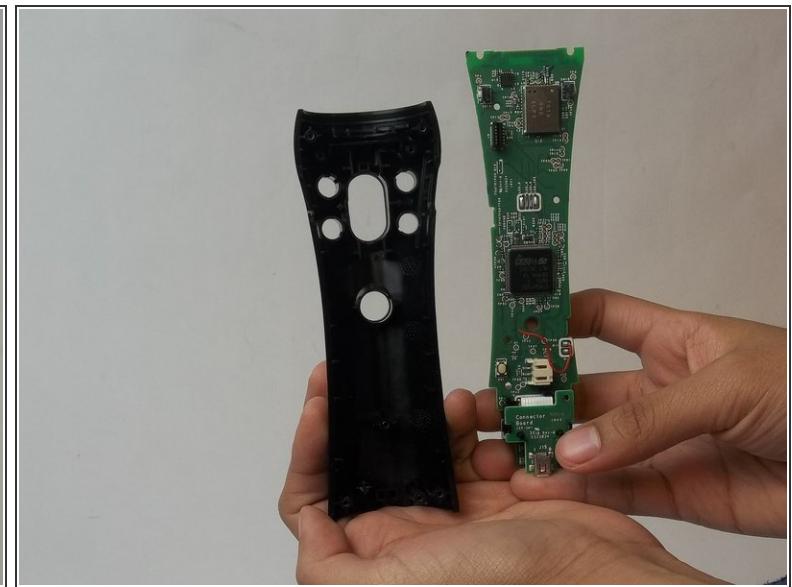



- Remove the motherboard from the plastic case.

Step 17 — LED Light



- Insert tweezers between the LED case and the LED clear plastic cover.
- Lift the edge of the LED clear cover clip to be able to remove the cover.
- Repeat the previous step to the other side.
- Remove the LED cover.

Step 18

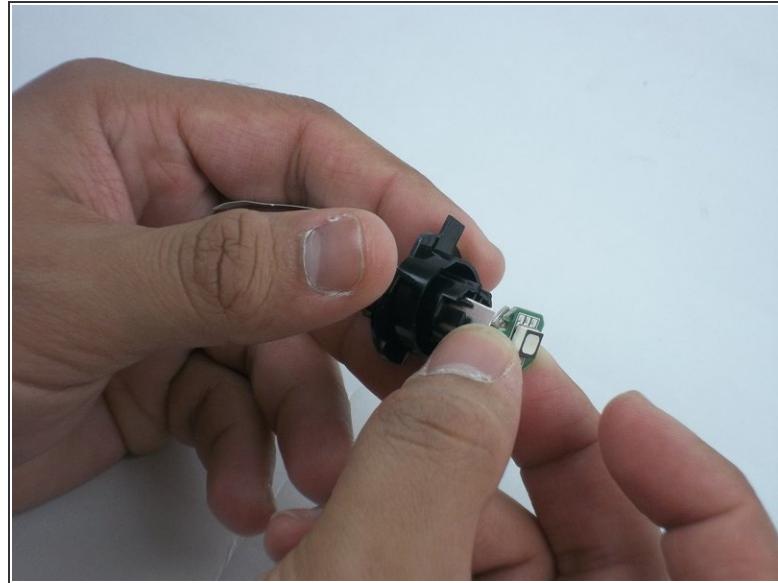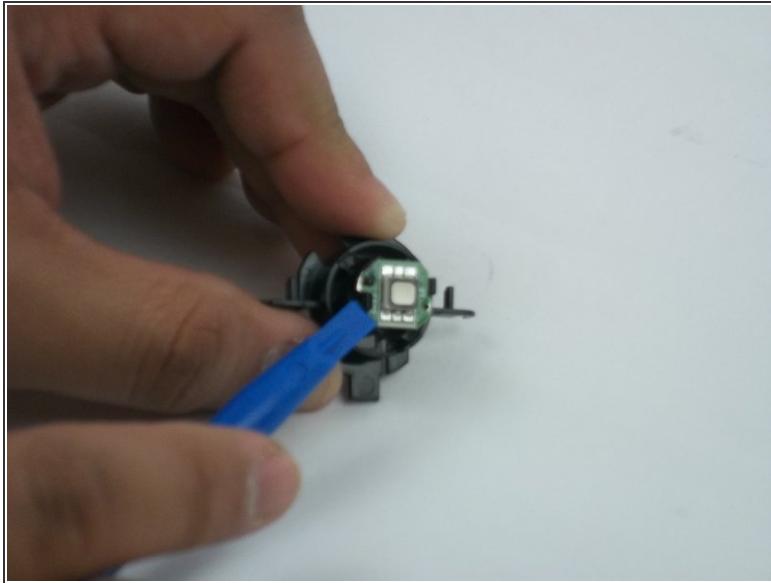

- Remove the LED board using a blue opening tool to lift the board.
- After the board is loose, remove the LED board.

To reassemble your device, follow these instructions in reverse order.