


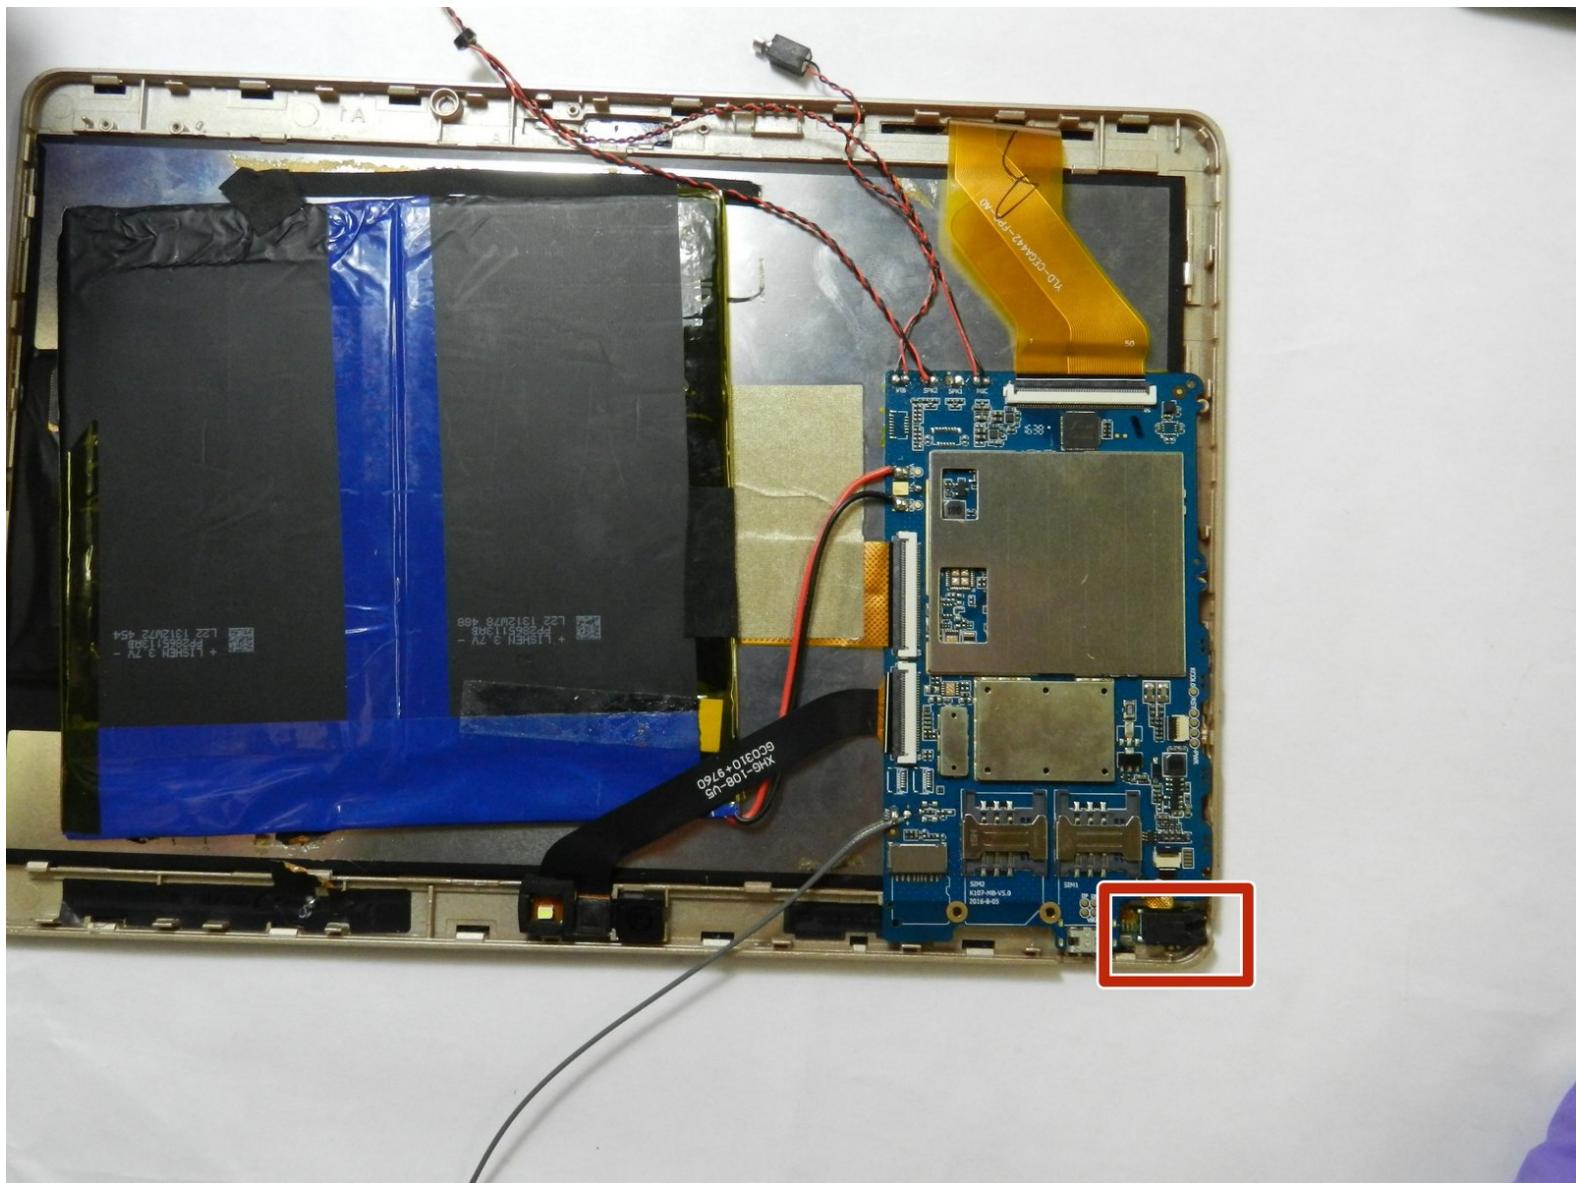

Plum Optimax 10 Headphone Jack Replacement

In this guide you will be shown step-by-step how to replace the headphone jack in your Plum Optimax 10.

Written By: Michael Glennon Graupner



This document was generated on 2020-04-05 03:38:46 PM (MST).


INTRODUCTION

Please follow each step closely and if you are having trouble, go back a step and see where your issue is. May this guide be in your favor!

TOOLS:



- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Back Cover

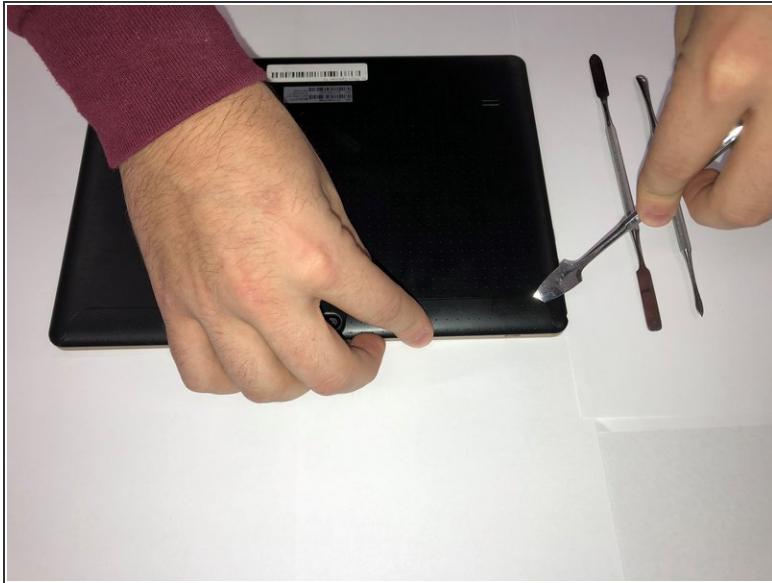




- Use a metal spudger to remove the small panels to the immediate left and right side of the camera.

Step 2

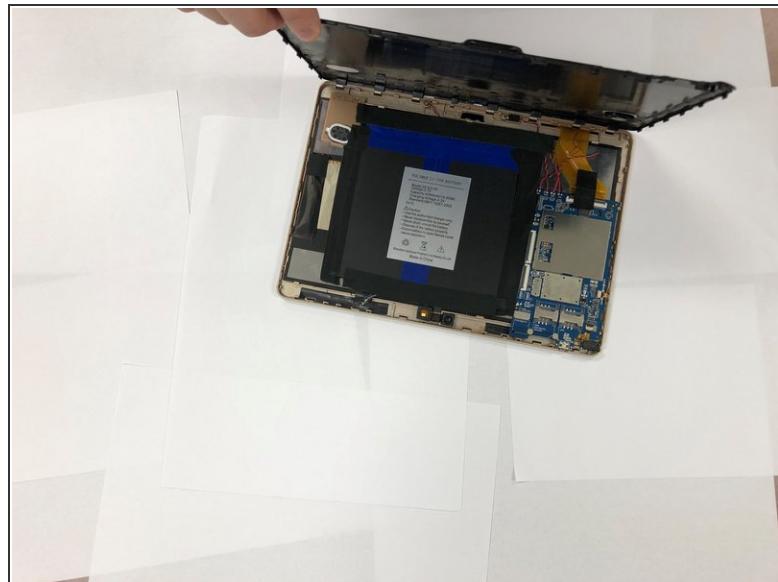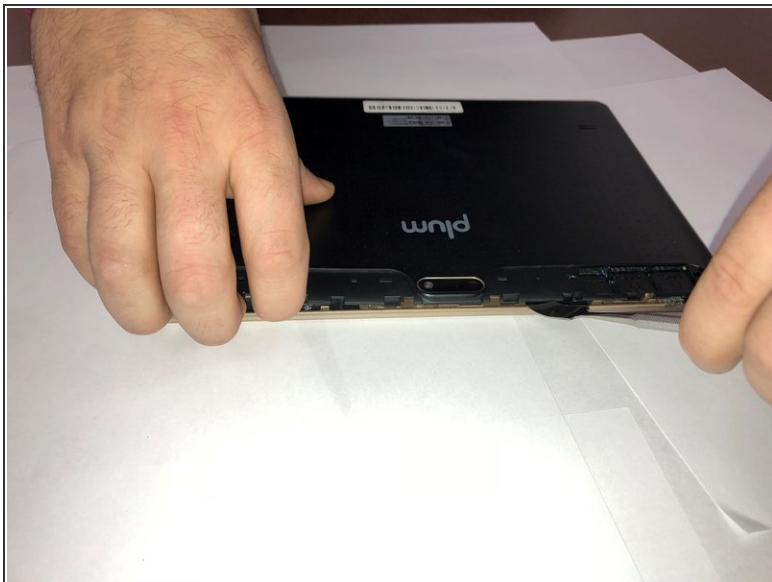

- Use a metal spudger to begin lifting the back cover.
- Then, create leverage and gently remove the entire cover.

Step 3 — Headphone Jack

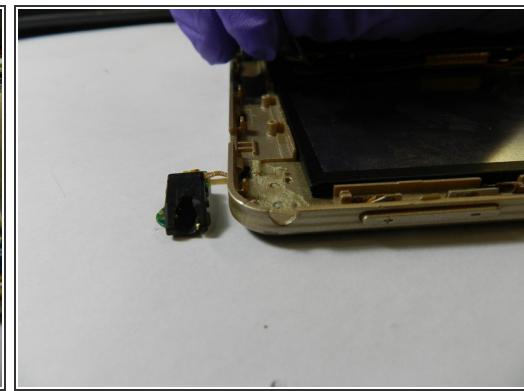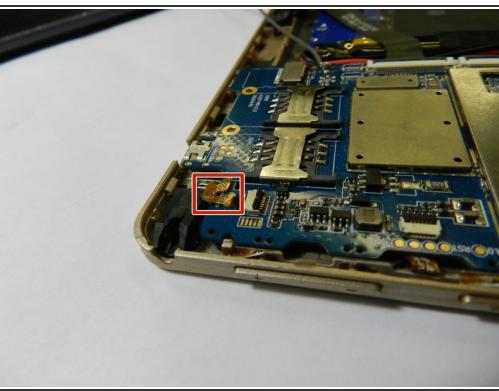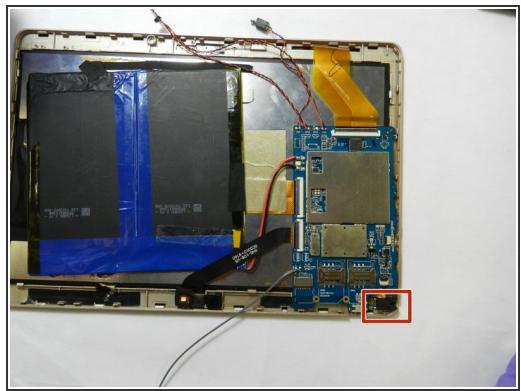

- Disconnect the ribbon cable connecting the headphone jack on the motherboard by lifting up on the black press fit connector with a plastic opening tool.
- Use a plastic opening tool to pry up the headphone jack from its place in the case.

i The headphone jack is lightly adhered to the back case.

! When removing the jack, be gentle with the ribbon wire because it is capable of tearing.

To reassemble your device, follow these instructions in reverse order.