




Polaroid Onestep Close Up Forward Viewfinder Replacement

This guide will show you how to replace the forward viewfinder lens. It is also a way to show you how to access it in case you just want to clean it off.

Written By: Jordan

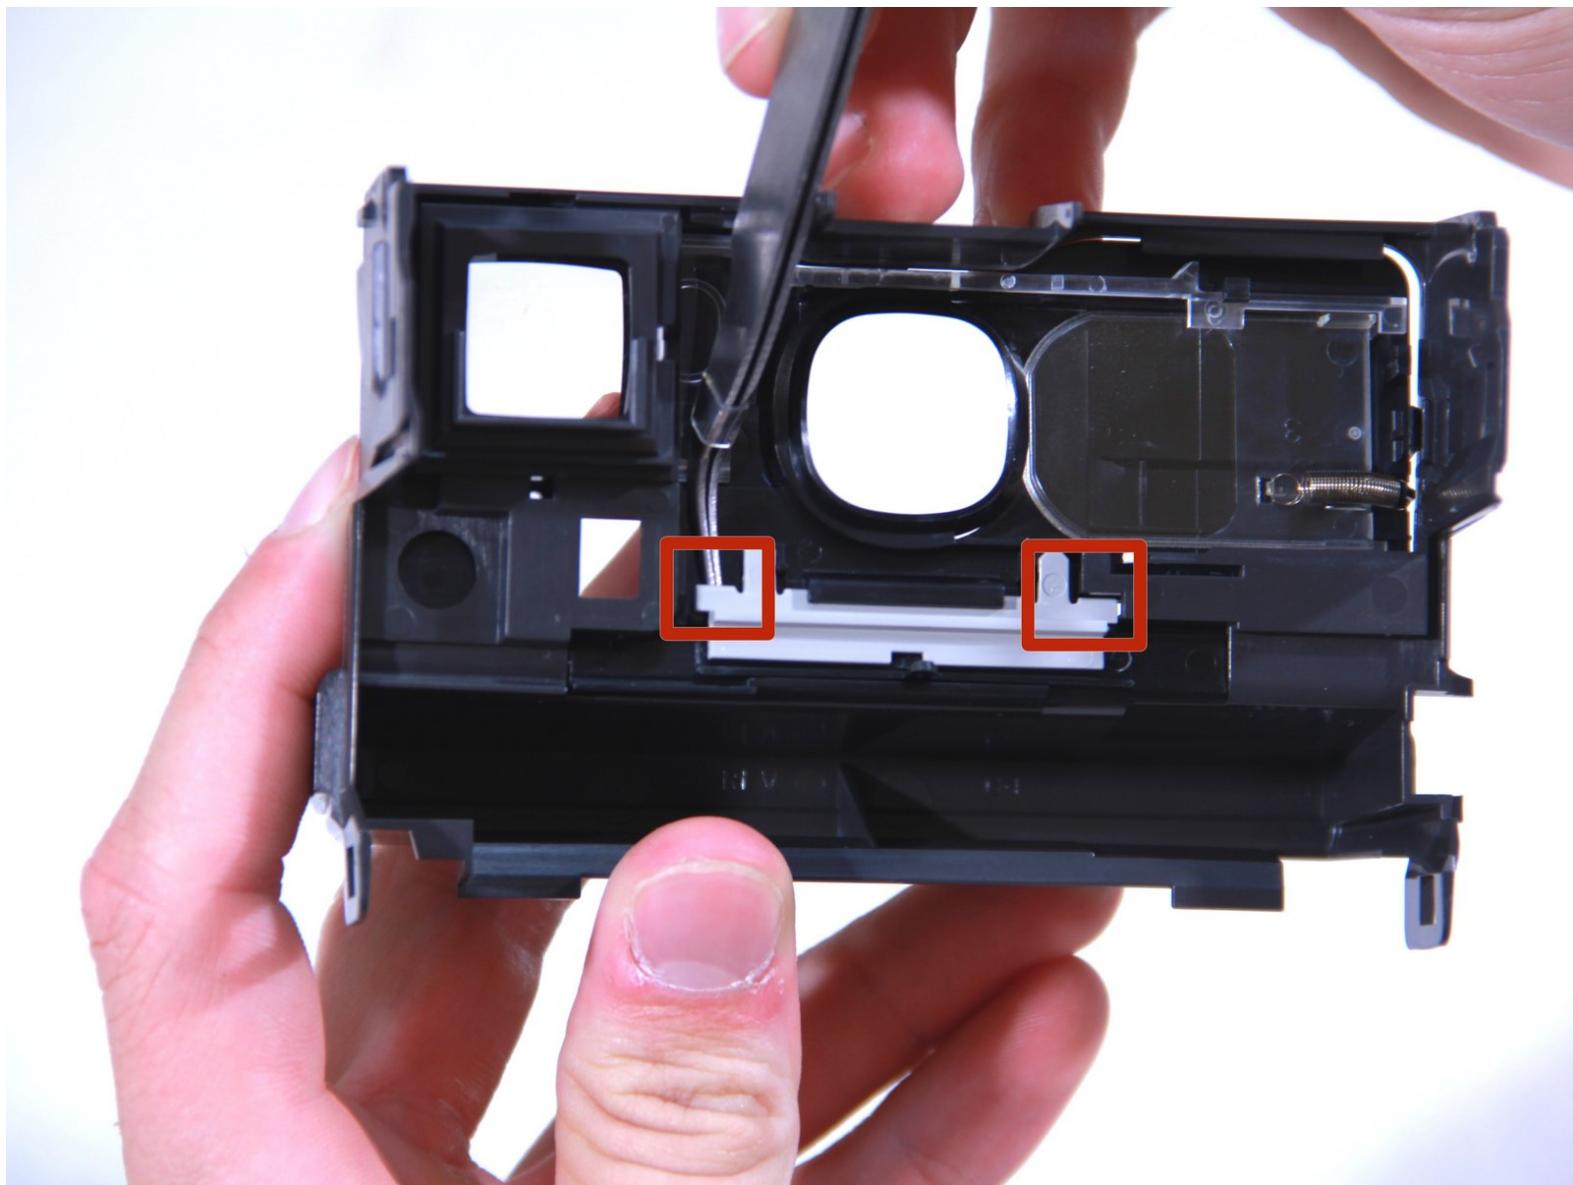

This document was generated on 2019-09-20 01:27:36 PM (MST).

INTRODUCTION

This guide will teach you how to face off the face plate of the camera to and take out the forward viewfinder.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)


Step 1 — Flash Assembly Removal



- Begin by opening the top of the camera (flash assembly) to a slight angle.
- Next, angle the flash assembly slightly upward and pry off the connections carefully.

 Be careful not to damage the ribbon cable. This is essential to the operation of the flash.

Step 2 — Opening Film Tray

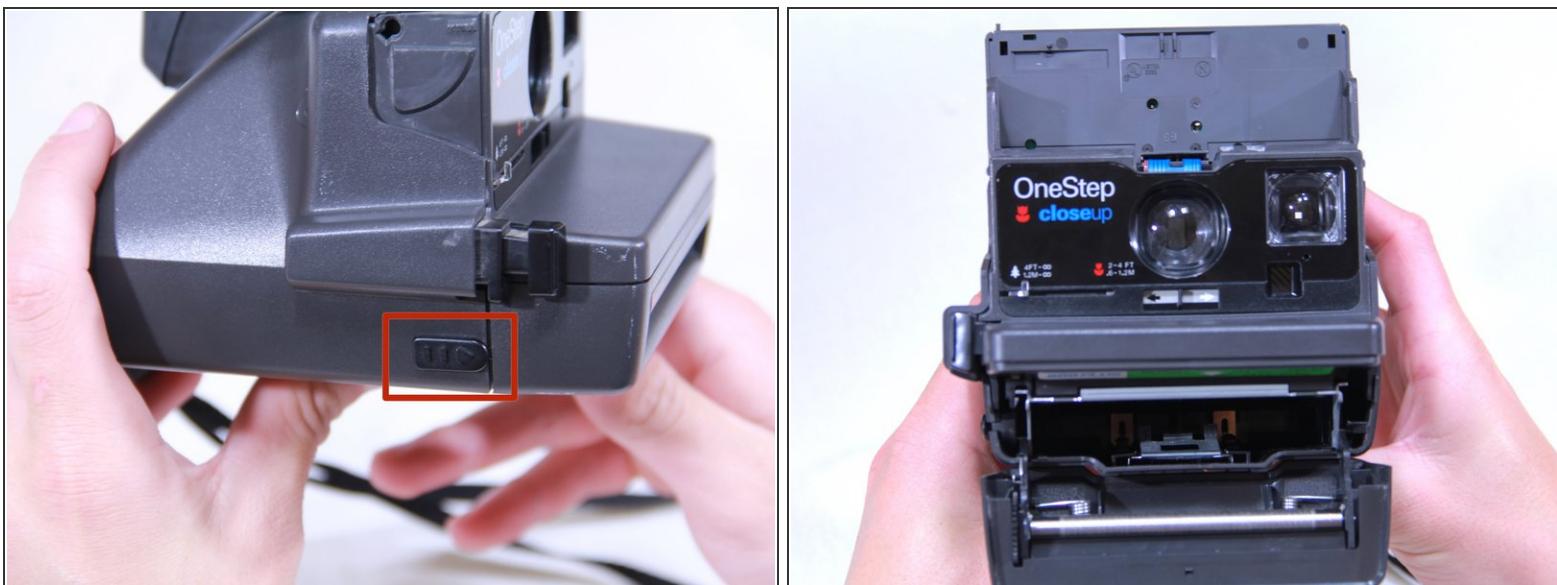


- Slide the action button, on the bottom of the camera, to open the bottom.

Step 3 — Removing Face Plate



- Insert the blue plastic opening tool between the rear case and the plastic tabs directly under the shelf, and pry it loose.
- Pull off the face plate.


Step 4 — Removing the Slider

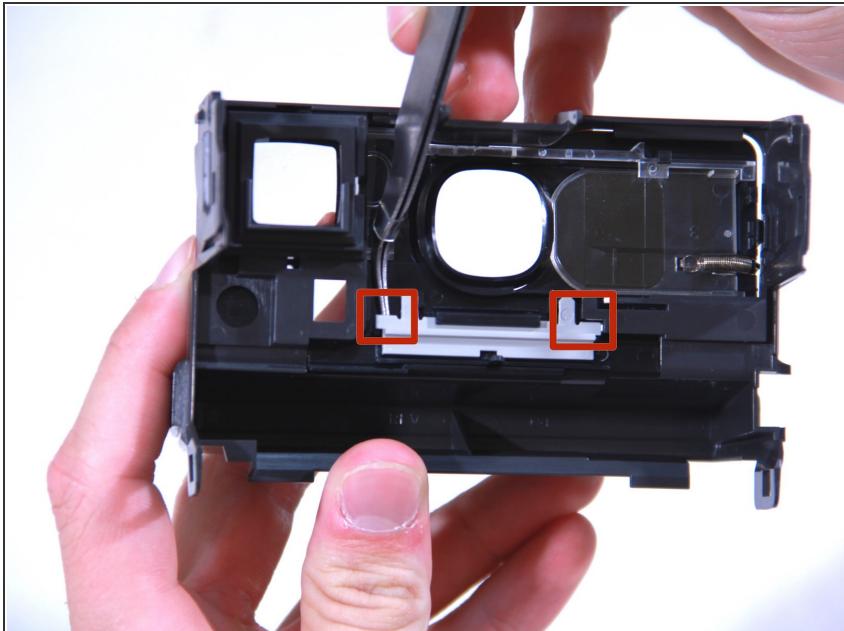

- Once you have the face plate removed the first thing to do is pry off the slider (the light grey bar near the bottom). The easiest way to

accomplish this is to place the tweezers where the red circles are to pop the piece out.

Step 5 — Removing the Face Plate

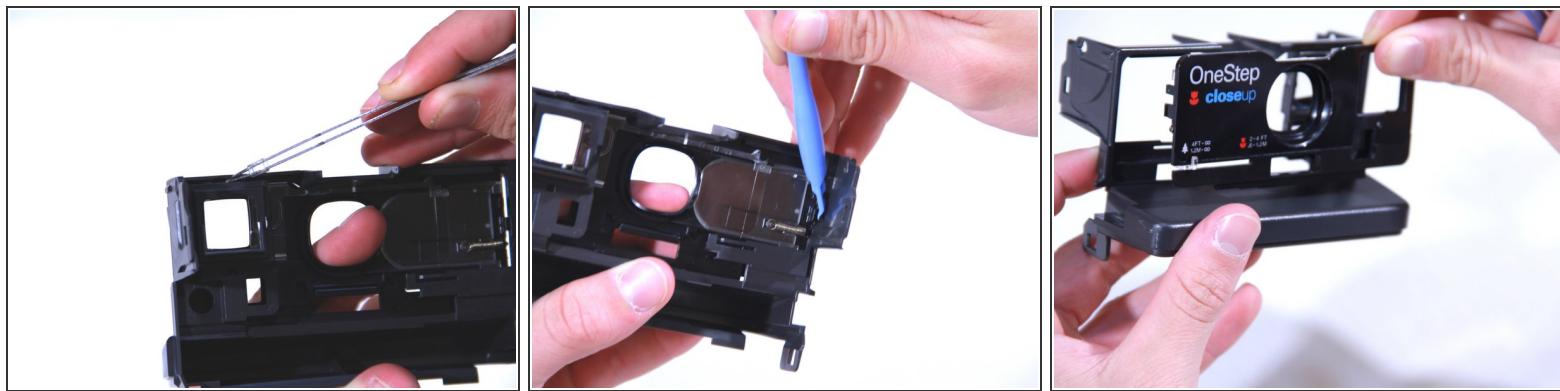

- Use the tweezers at the locations shown in the first two pictures to remove the face plate shown in the third picture.
- This is a pretty secure fit in most cases so it might take a bit of tinkering to get the plate to pop off.

Step 6 — Removing the Forward Viewfinder



- With the plate removed the lens should be easy enough to pop out.
- *i* If you don't want to dirty the lens it would be best to put on gloves or handle the lens with a rag of some kind.

To reassemble your device, follow these instructions in reverse order.