




# Polaroid S10 Speaker Dissassembly

prerequisite only


Written By: Christofer

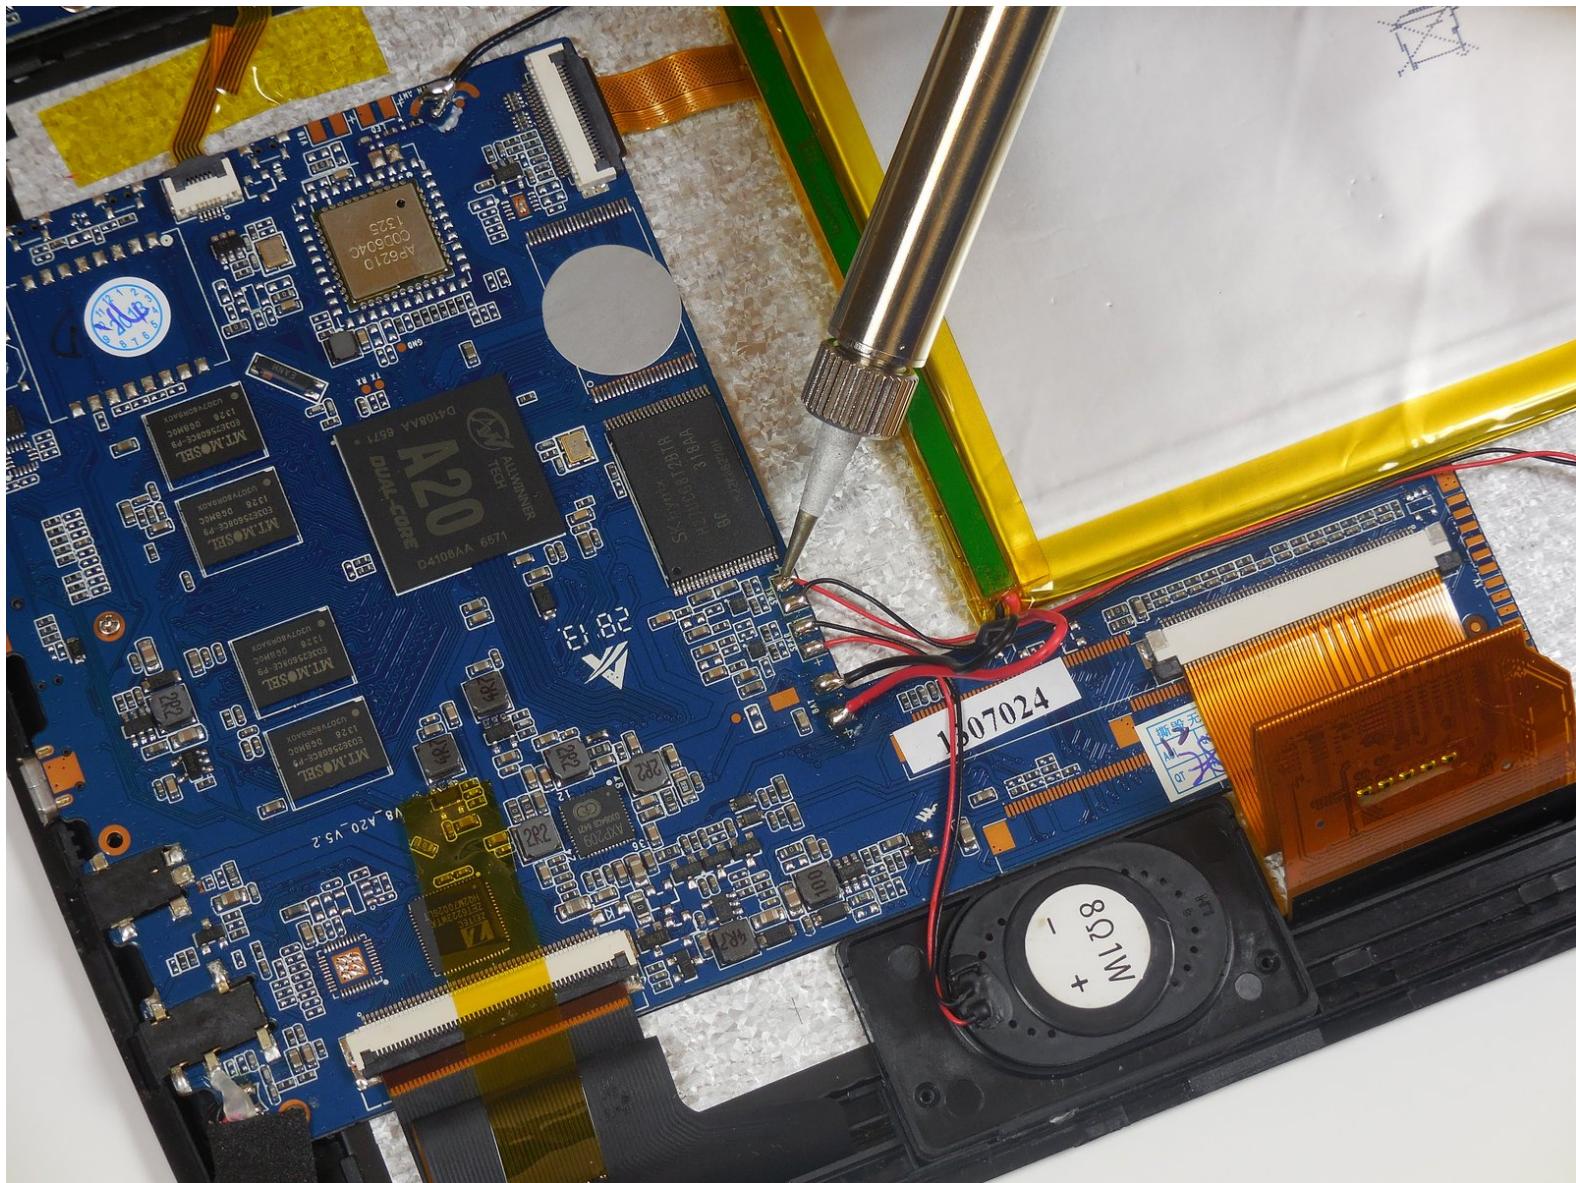

 **TOOLS:**

- [Soldering Iron \(1\)](#)

## Step 1 — Desoldering the Speakers

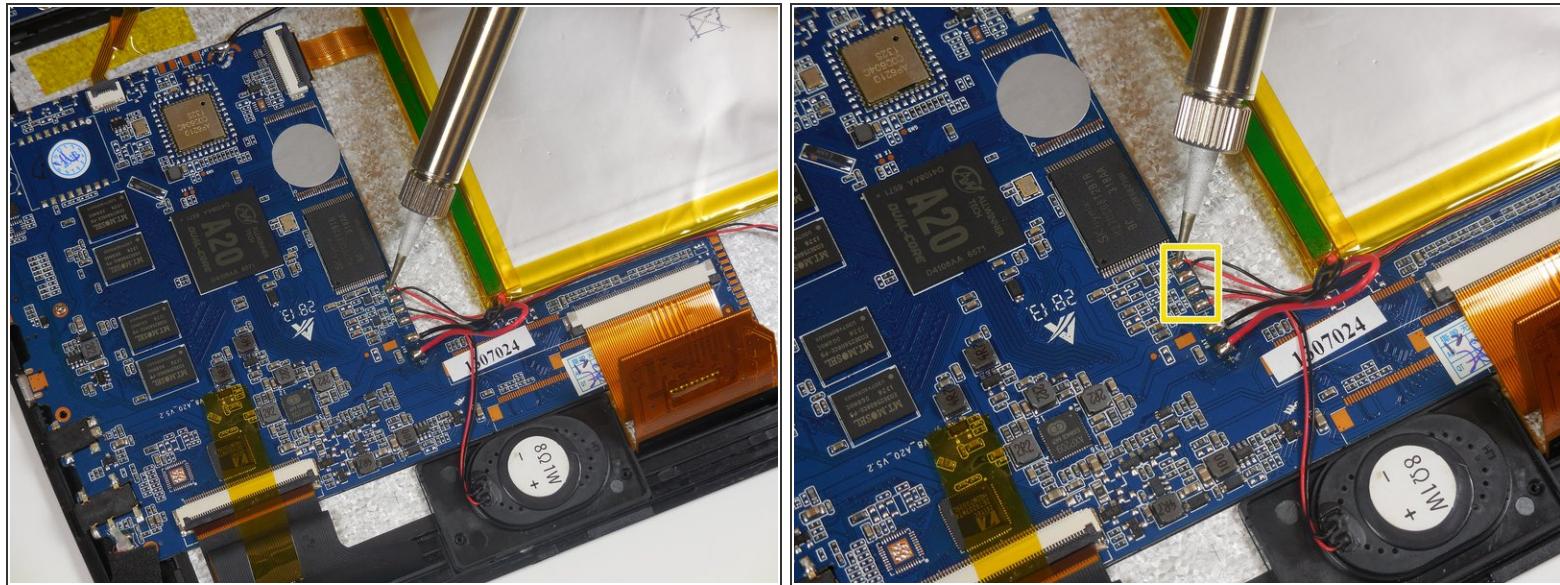

- Carefully desolder the 4 connections of the speakers.
- ⚠ Do not touch the soldering iron to the motherboard or LCD screen.

To reassemble your device, follow these instructions in reverse order.