




Polaroid S10 volume button Replacement

This will replace the speaker and volume board replacement.


Written By: James

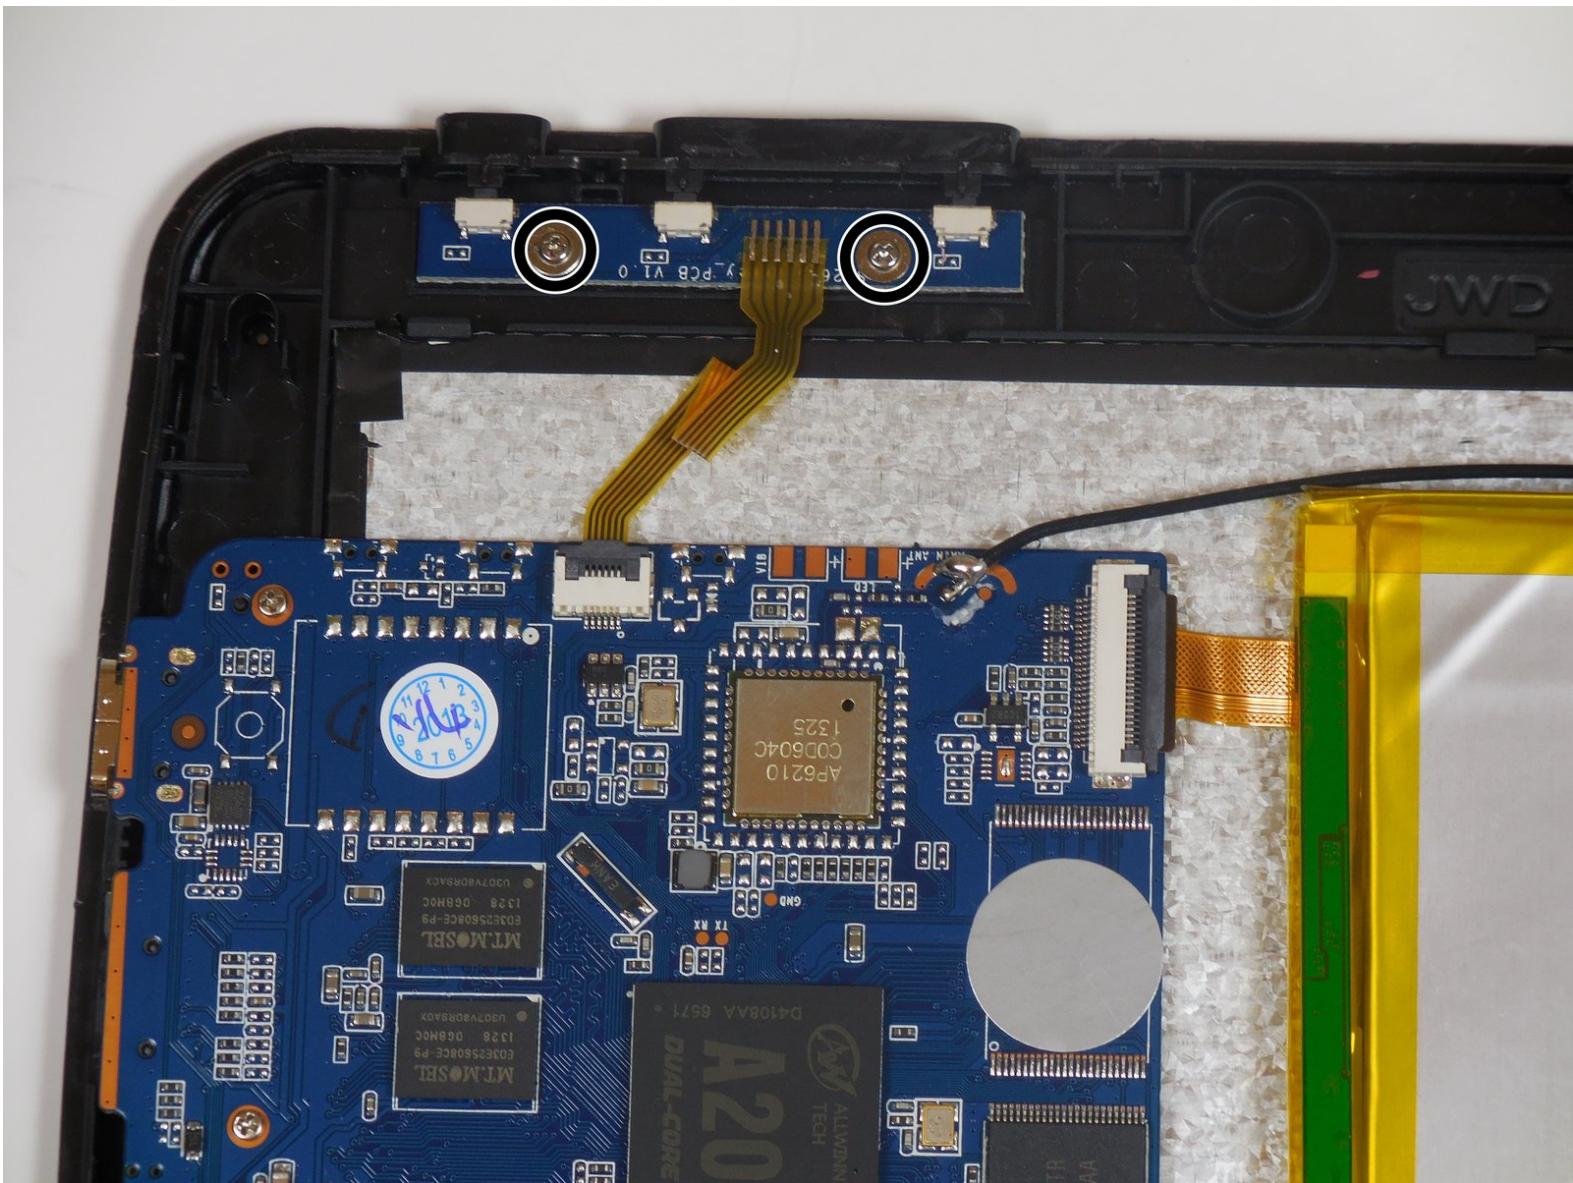

 **TOOLS:**



- [iFixit Opening Picks set of 6 \(1\)](#)
- [Spudger \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)
- [Metal Spudger Set \(1\)](#)

Step 1 — Removing the backcover

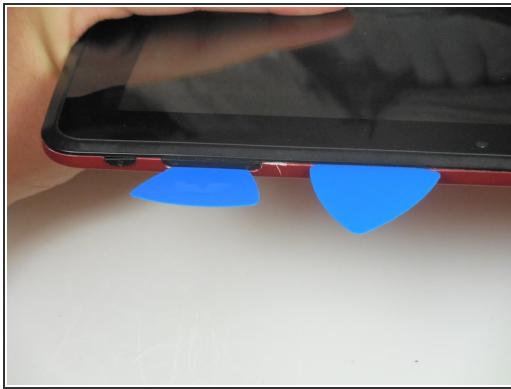

- Place an opening pick between the volume button and the back cover.
- More than one pick may be needed, but avoid placing more than two picks in the same space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully remove the back cover using the metal spudger.
- It is normal to hear a snapping noise due to the plastic tabs on the back cover.

Step 2 — Volume and Power Button Board

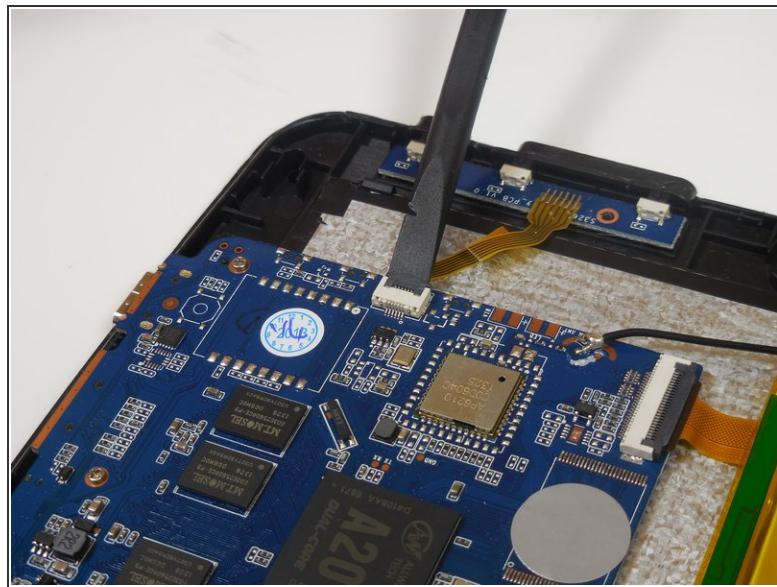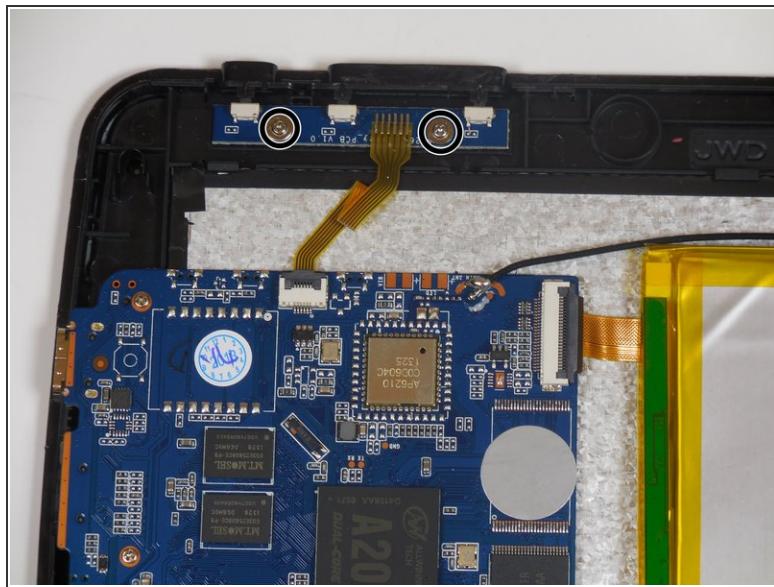

- Use the spudger to remove the tape.
- Remove the 2 J000 4 mm screws using a J000 screwdriver.
- Carefully disconnect the connector port.

To reassemble your device, follow these instructions in reverse order.