




Polaroid S7 Digitizer Replacement

If your screen is cracked or it is not responding to touch, follow this guide to replace the screen.

Written By: Thiago Guedes

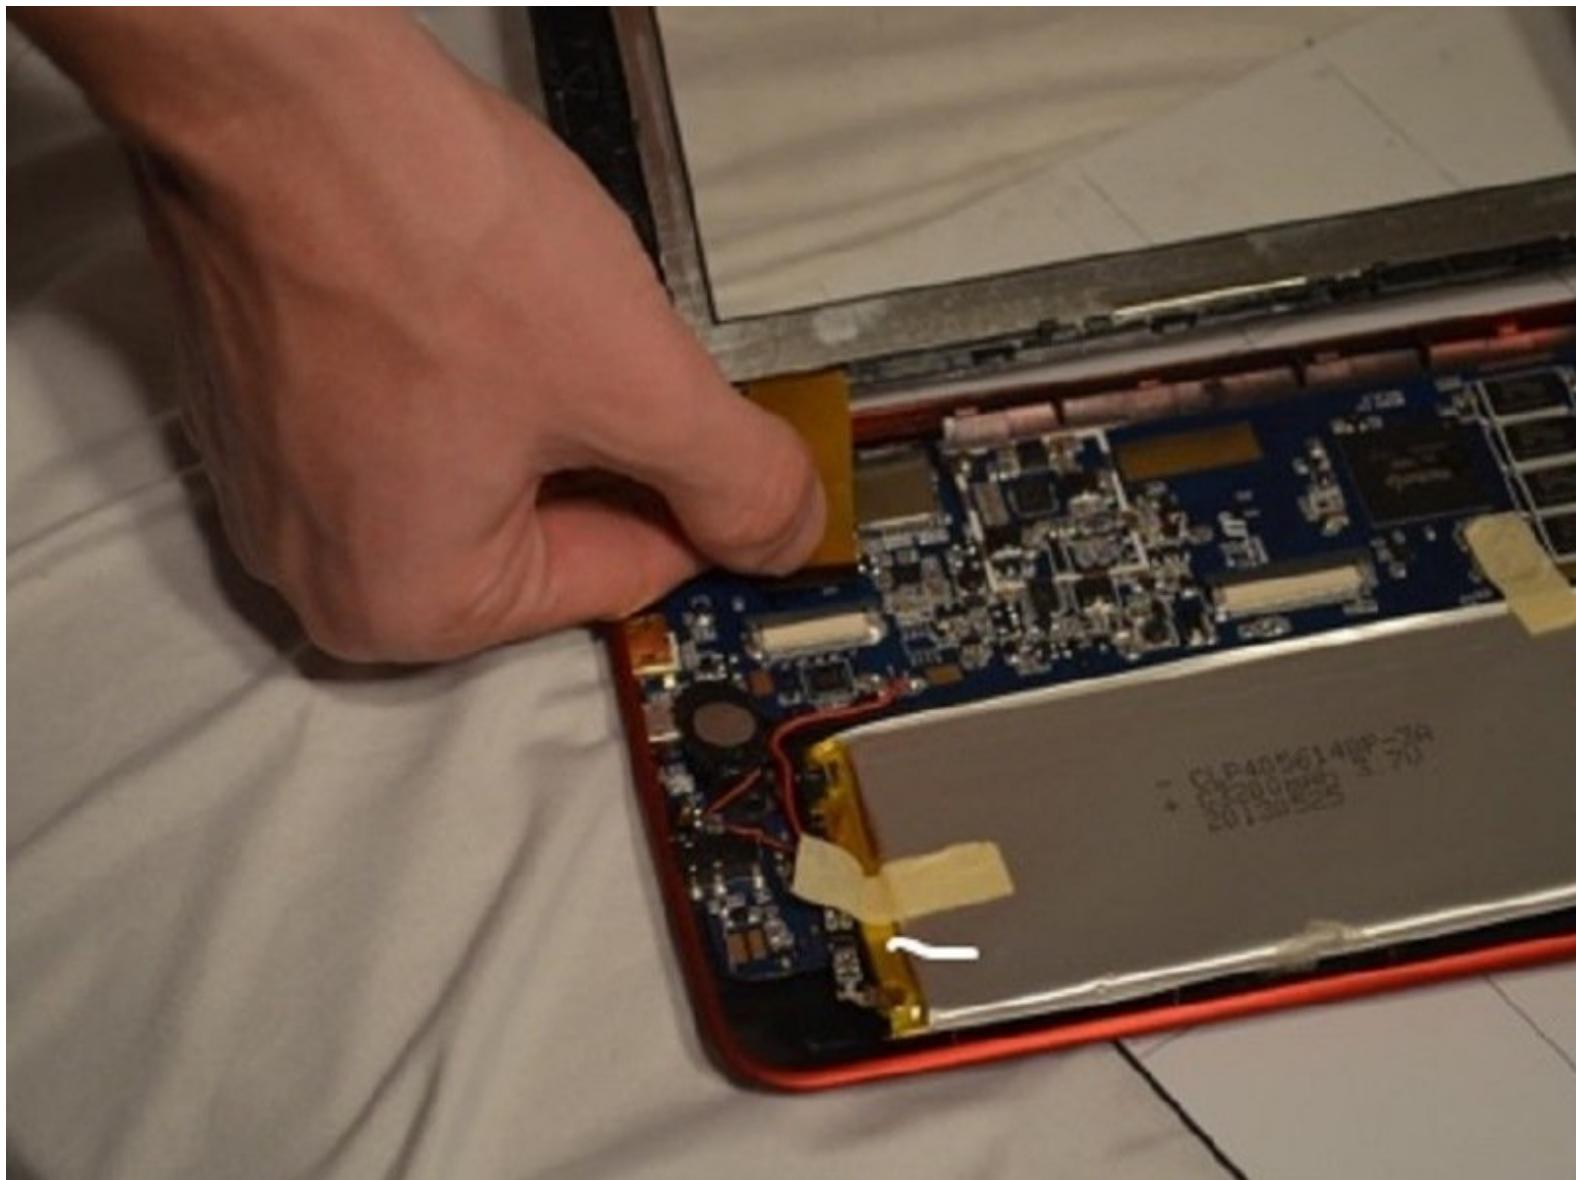


INTRODUCTION

If your screen is cracked or it is not responding to touch, follow this guide to replace the screen.

TOOLS:



- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Remove the back

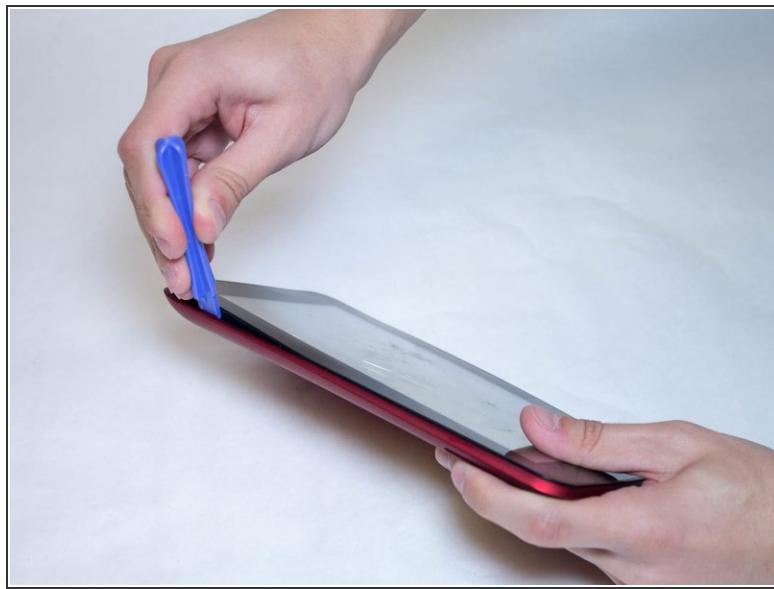


- Insert the flat end of one of the plastic opening tools between the screen and the colored back cover. Gently pry apart the pieces.
- Carefully separate the screen from the back, taking care not to rip the ribbons connecting them.

Step 2

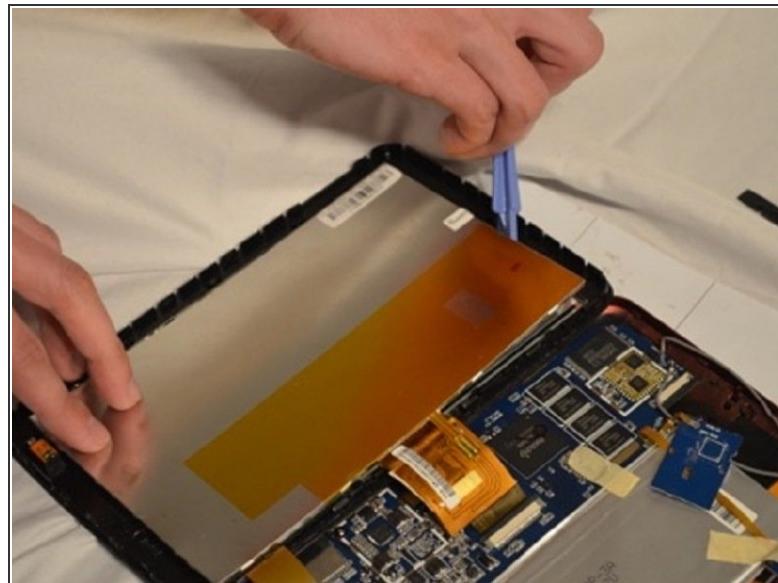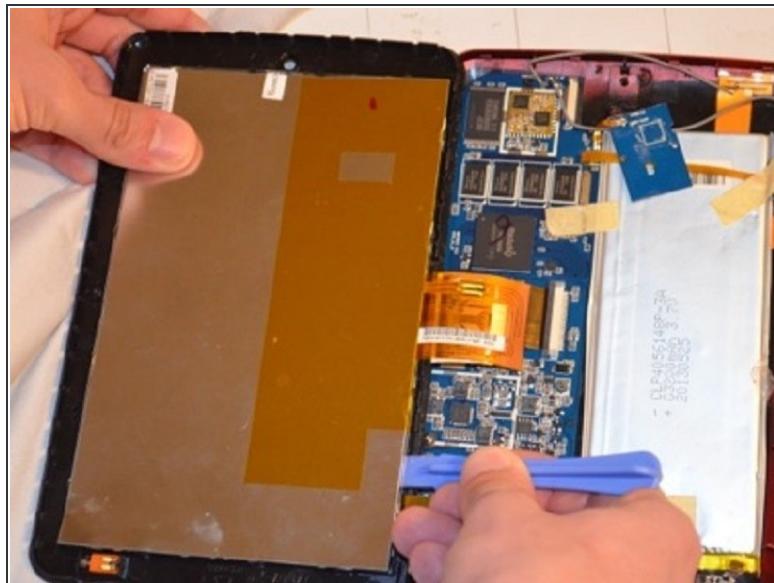


- Insert the plastic opening tool into the wedge and pry it open.

Step 3

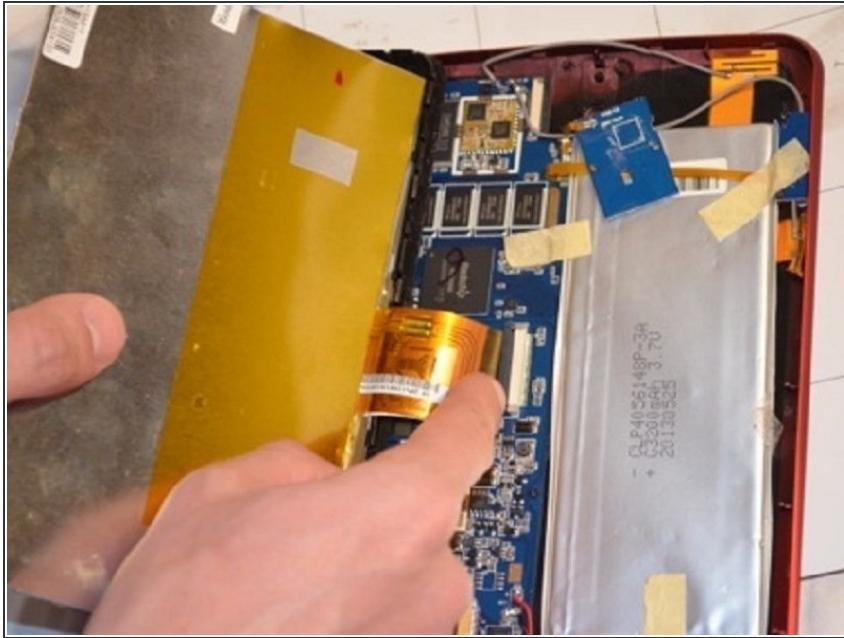


- Open the latch and pull to remove the LCD.

Step 4 — Digitizer

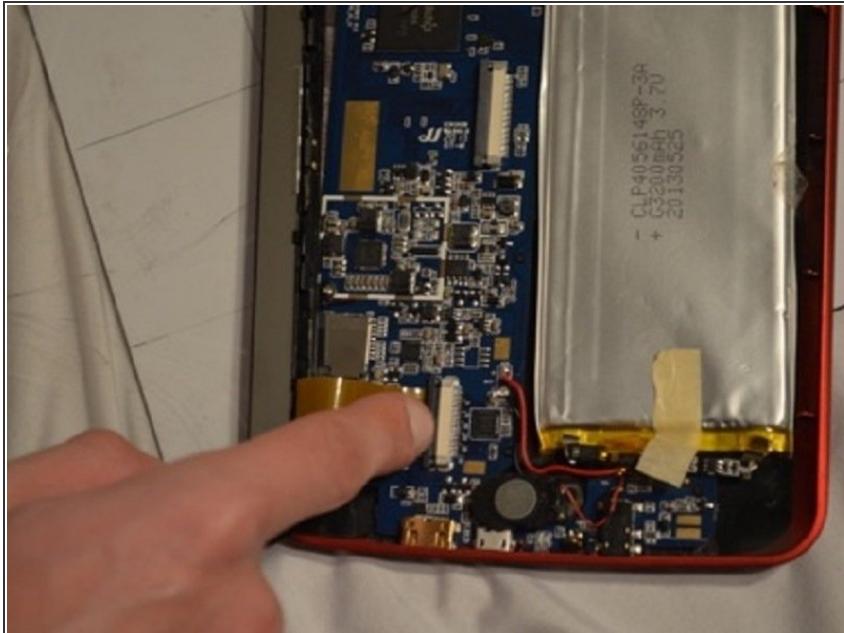

- After you remove the digitizer, open the latch and remove the screen.

Step 5

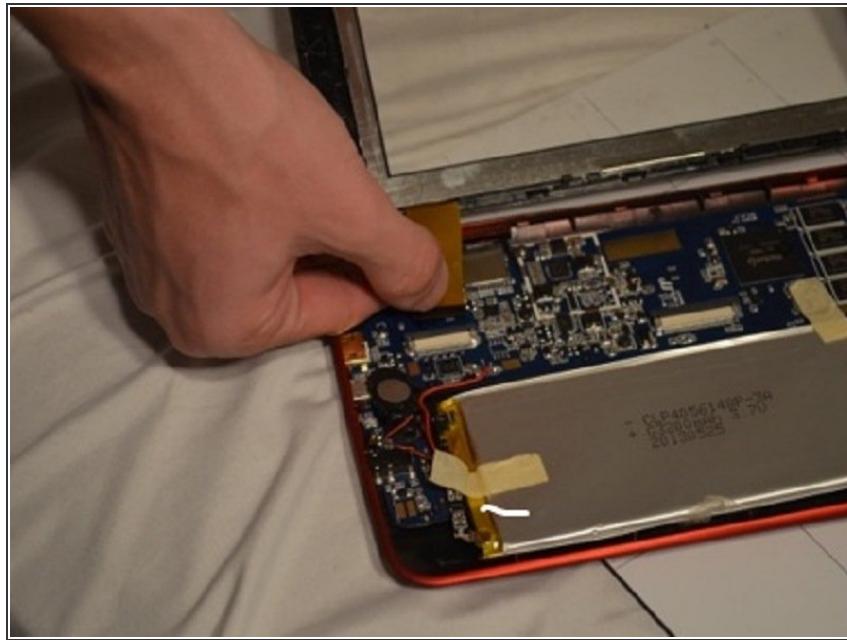

- To install the new screen, insert the digitizer into the new screen and latch them back in.

To reassemble your device, follow these instructions in reverse order.