




# Power Mac G4 M5183 Heat Sink Replacement

Written By: Justin Petrilli

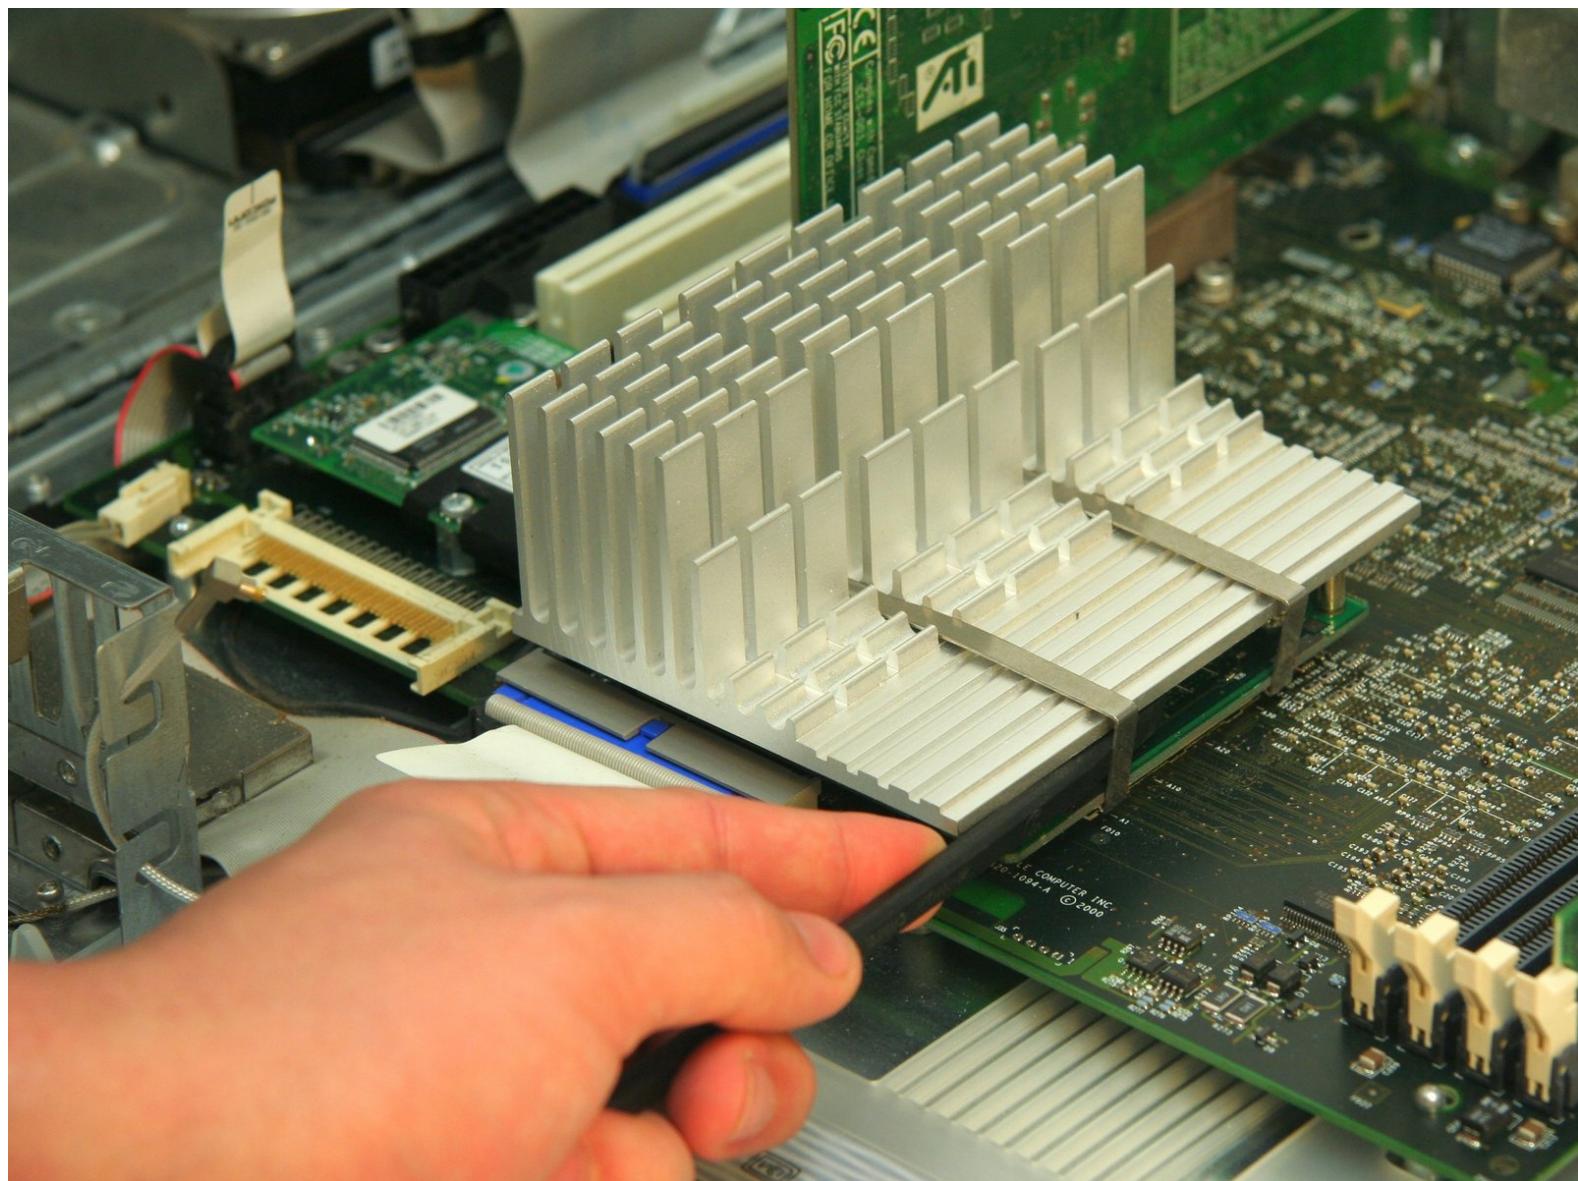


## INTRODUCTION

This guide will illustrate how to remove the heat sink from your PowerMac.

### TOOLS:

- [Spudger \(1\)](#)


## Step 1 — Opening PowerMac G4 M5183 Case

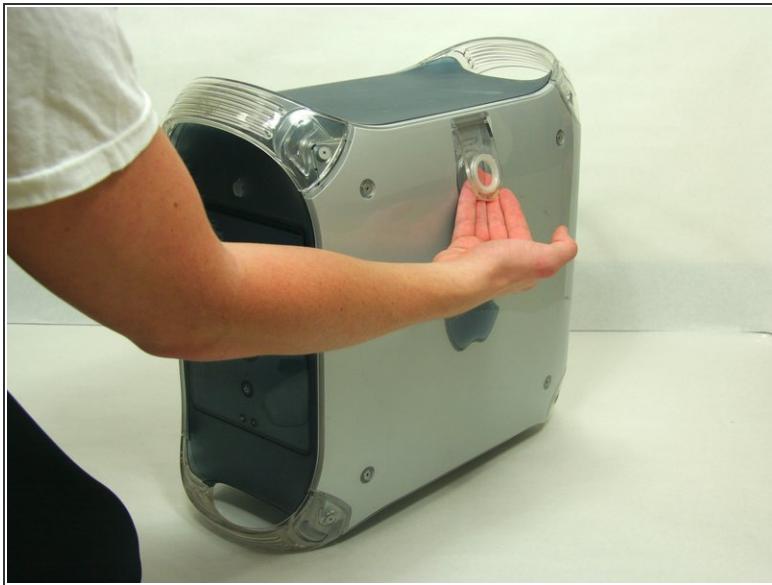

- Pull on outer latch.
- Lower door until it is level with your work surface.


**⚠** Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

## Step 2 — Heat Sink

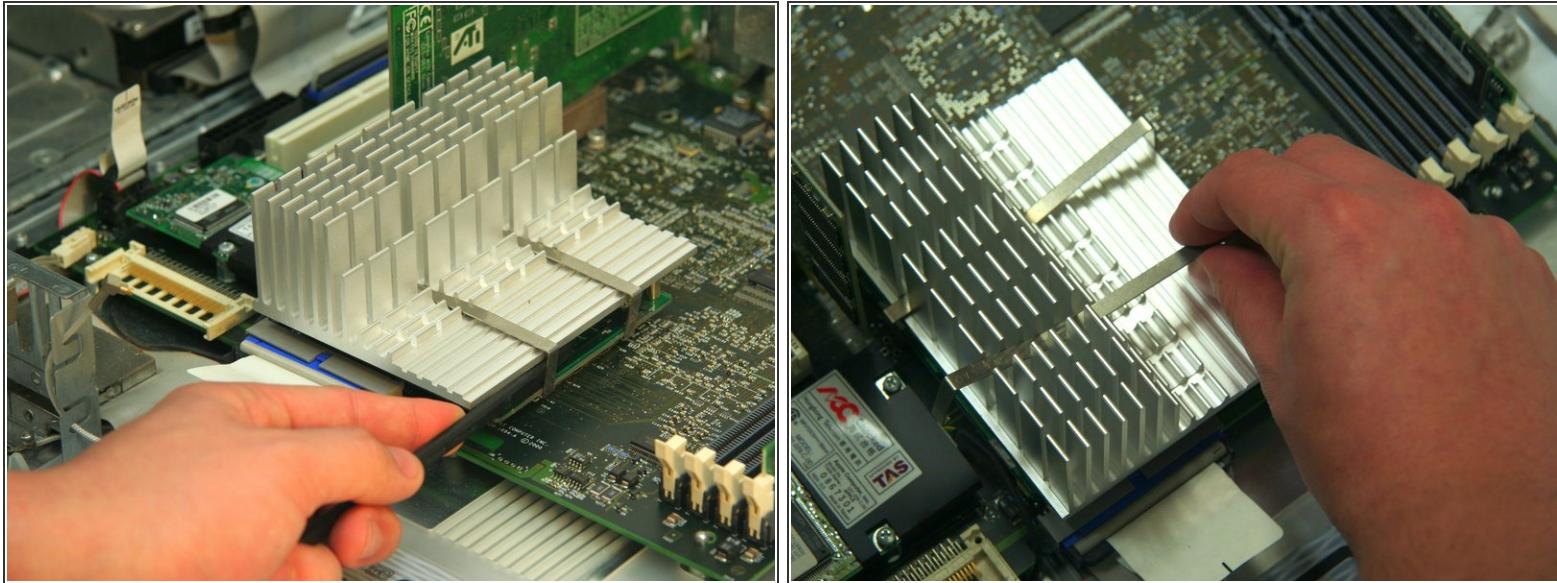

- Use the spudger to pry the clips horizontally off of the heat sink.
- Fully remove the clips by lifting upwards.

## Step 3

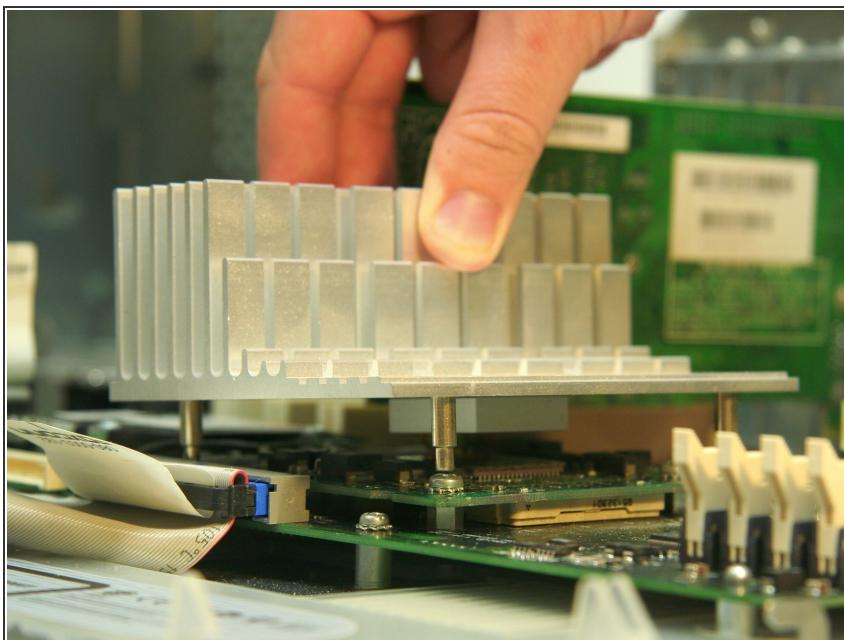

- Remove the heat sink by pulling upwards, off of the logic board.