




# Power Mac G4 M5183 Main Fan Replacement

Written By: Stephen Scruggs

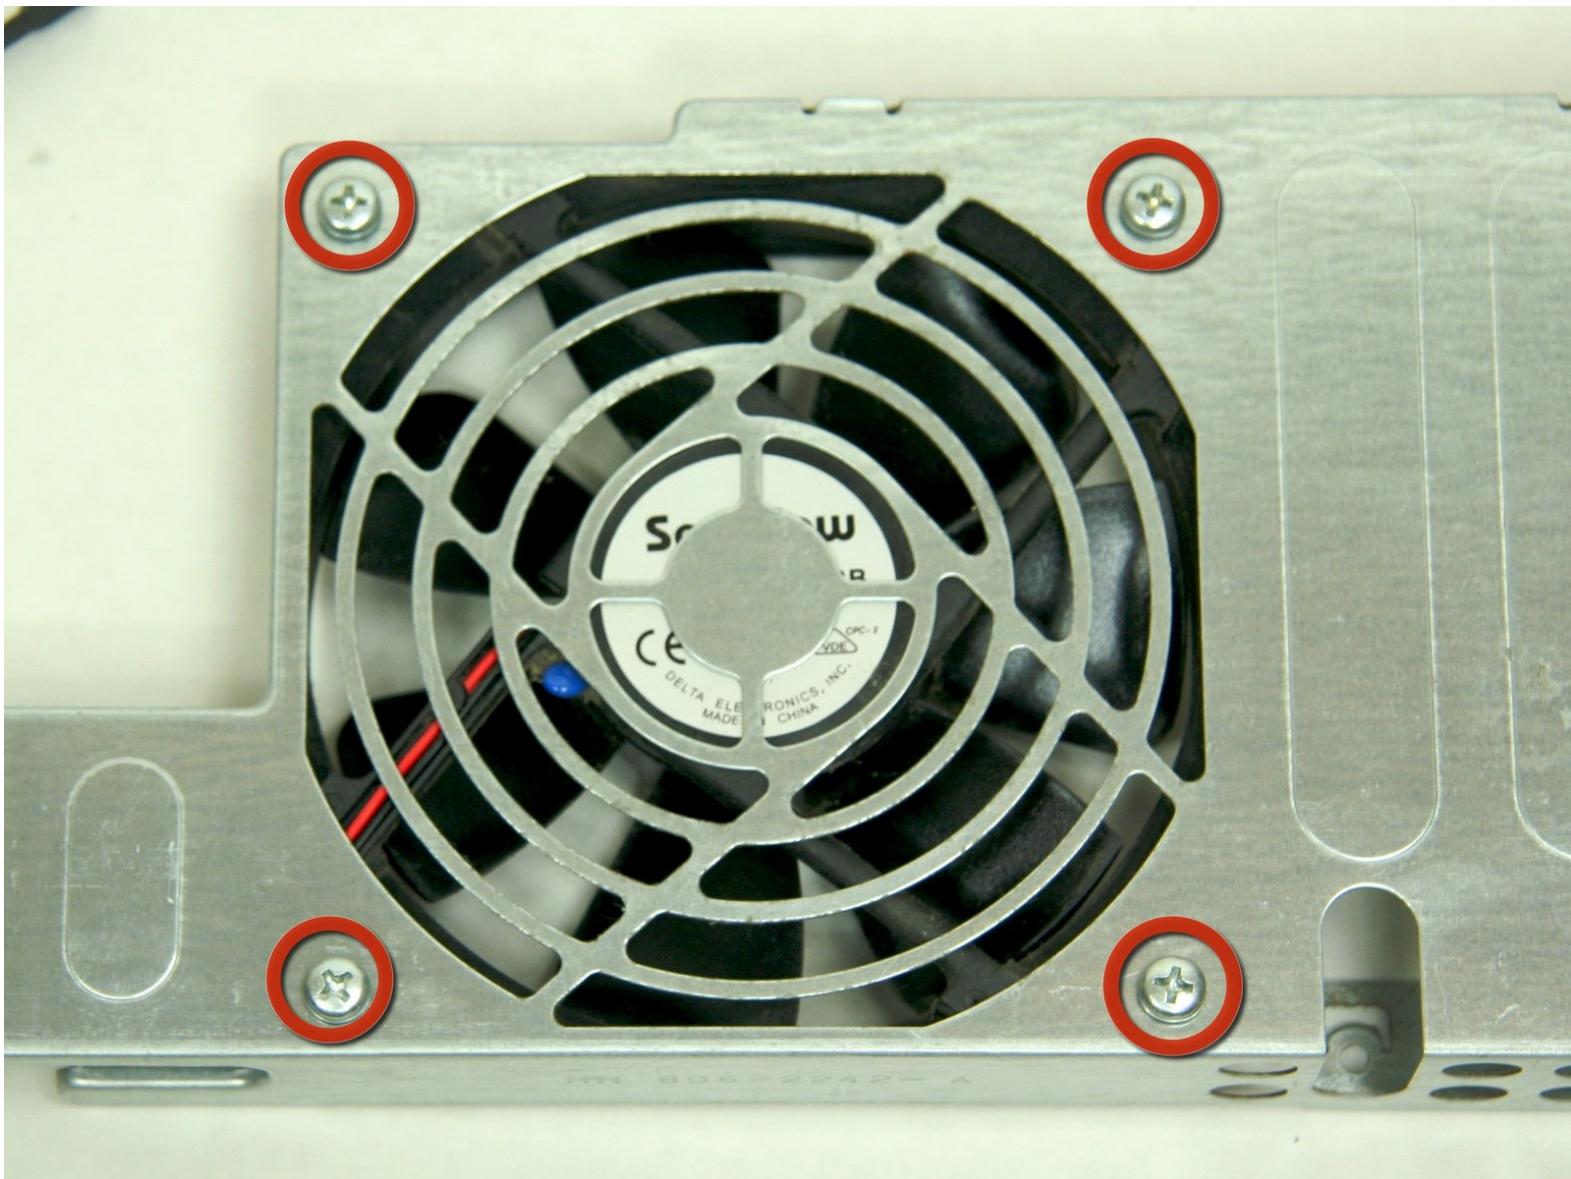

## INTRODUCTION

This guide details the removal of the main fan from the fan housing.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)



## Step 1 — Opening PowerMac G4 M5183 Case



- Pull on outer latch.
- Lower door until it is level with your work surface.


**⚠** Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

## Step 2 — Main Fan

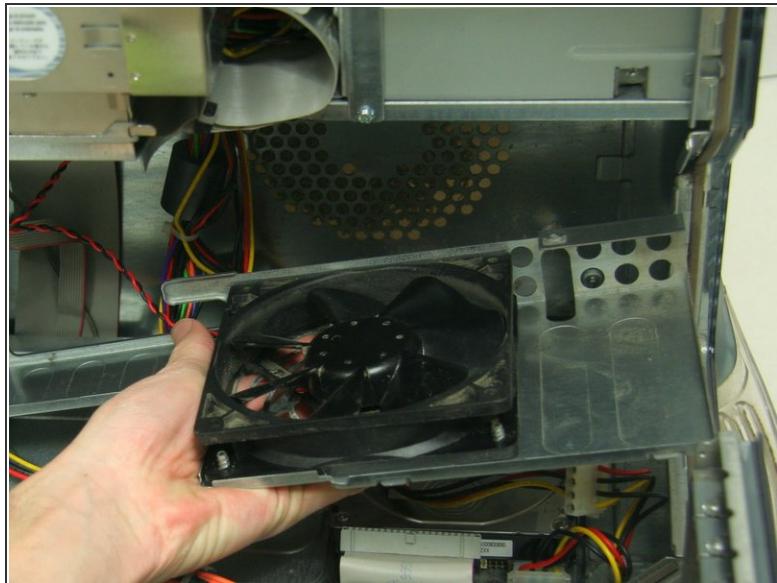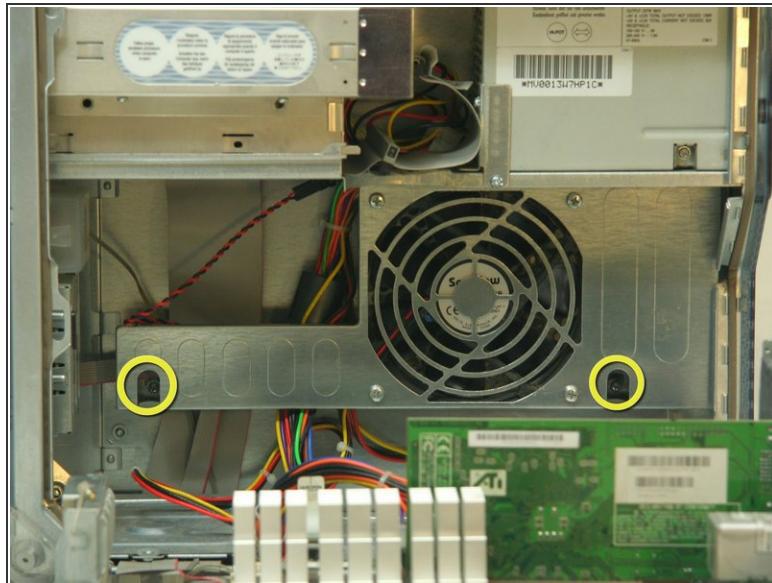

- Remove the screw from each of the two niches on lower part of fan using the Phillips #1 screwdriver.
- (i)* The fan housing will still be connected to the computer by a power cable which will be removed in the next step.

## Step 3

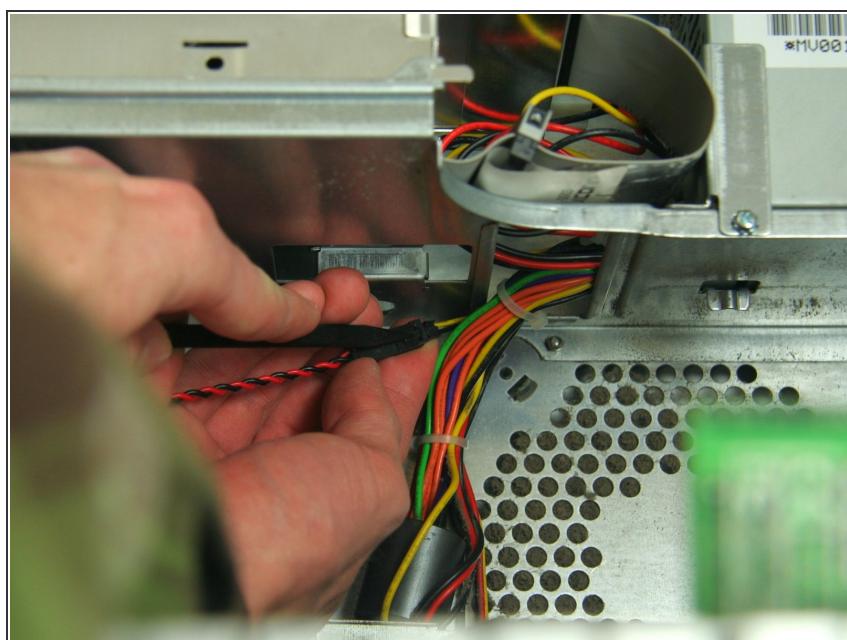

- Remove the power cable from the fan and detach bracing.

## Step 4 — Main Fan



- To fully remove the fan, unfasten the 4 screws on the front of the bracing using the Phillips #2 screwdriver.

To reassemble your device, follow these instructions in reverse order.