



# Power Removal

This is a guide that will be a prerequisite for other Insignia Flex 11.6 guides that deal with electrical connectors.

Written By: Connor Sweeney



## INTRODUCTION

In order for you to remove components with power supplied to them, you need to remove the power from the device by disconnecting from the main power source.

### TOOLS:

- Plastic Cards (1)
- Philips Head Screwdriver: Size J1 (1)
- iFixit Opening Tools (1)

## Step 1 — Power Removal



**⚠** Before working on the device, make sure the device is off and not plugged into any power source for safety reasons. Failure to comply could result in injury.

- Place the device on a firm surface with the device screen facing down.


## Step 2



- Remove 2, 6.1 mm Phillips J000 screws from the back of the device.


**ⓘ** If any screws are stripped, refer to the ifixit guide for how to remove a stripped screw. [How to Remove a Stripped Screw](#)

## Step 3

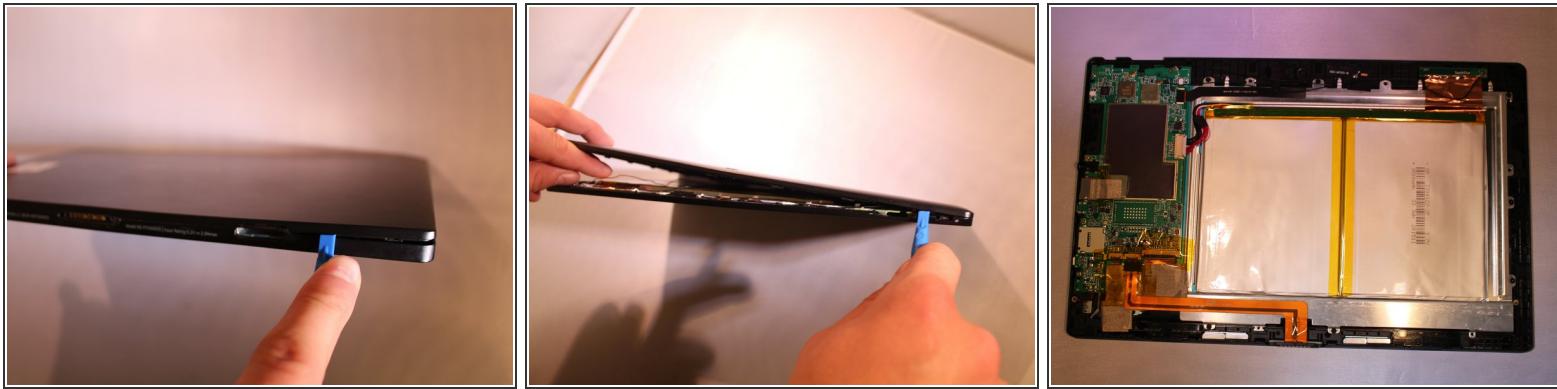

- Using a plastic tool and the plastic card, gently pry off the back cover.

## Step 4

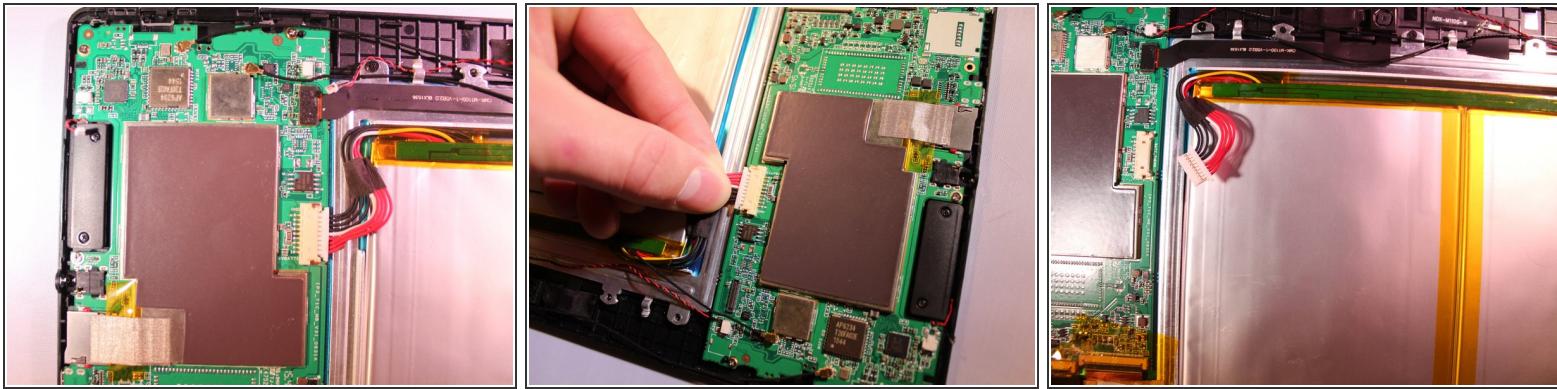

- Using tweezers, remove the electrical connector that connects to the battery to remove the power to the battery.

To reassemble your device, follow these instructions in reverse order.