




# PowerBook 3400 M3553 Floppy Disk Drive Replacement

How to remove the floppy disk drive from the PowerBook 3400

Written By: Michael Mondragon

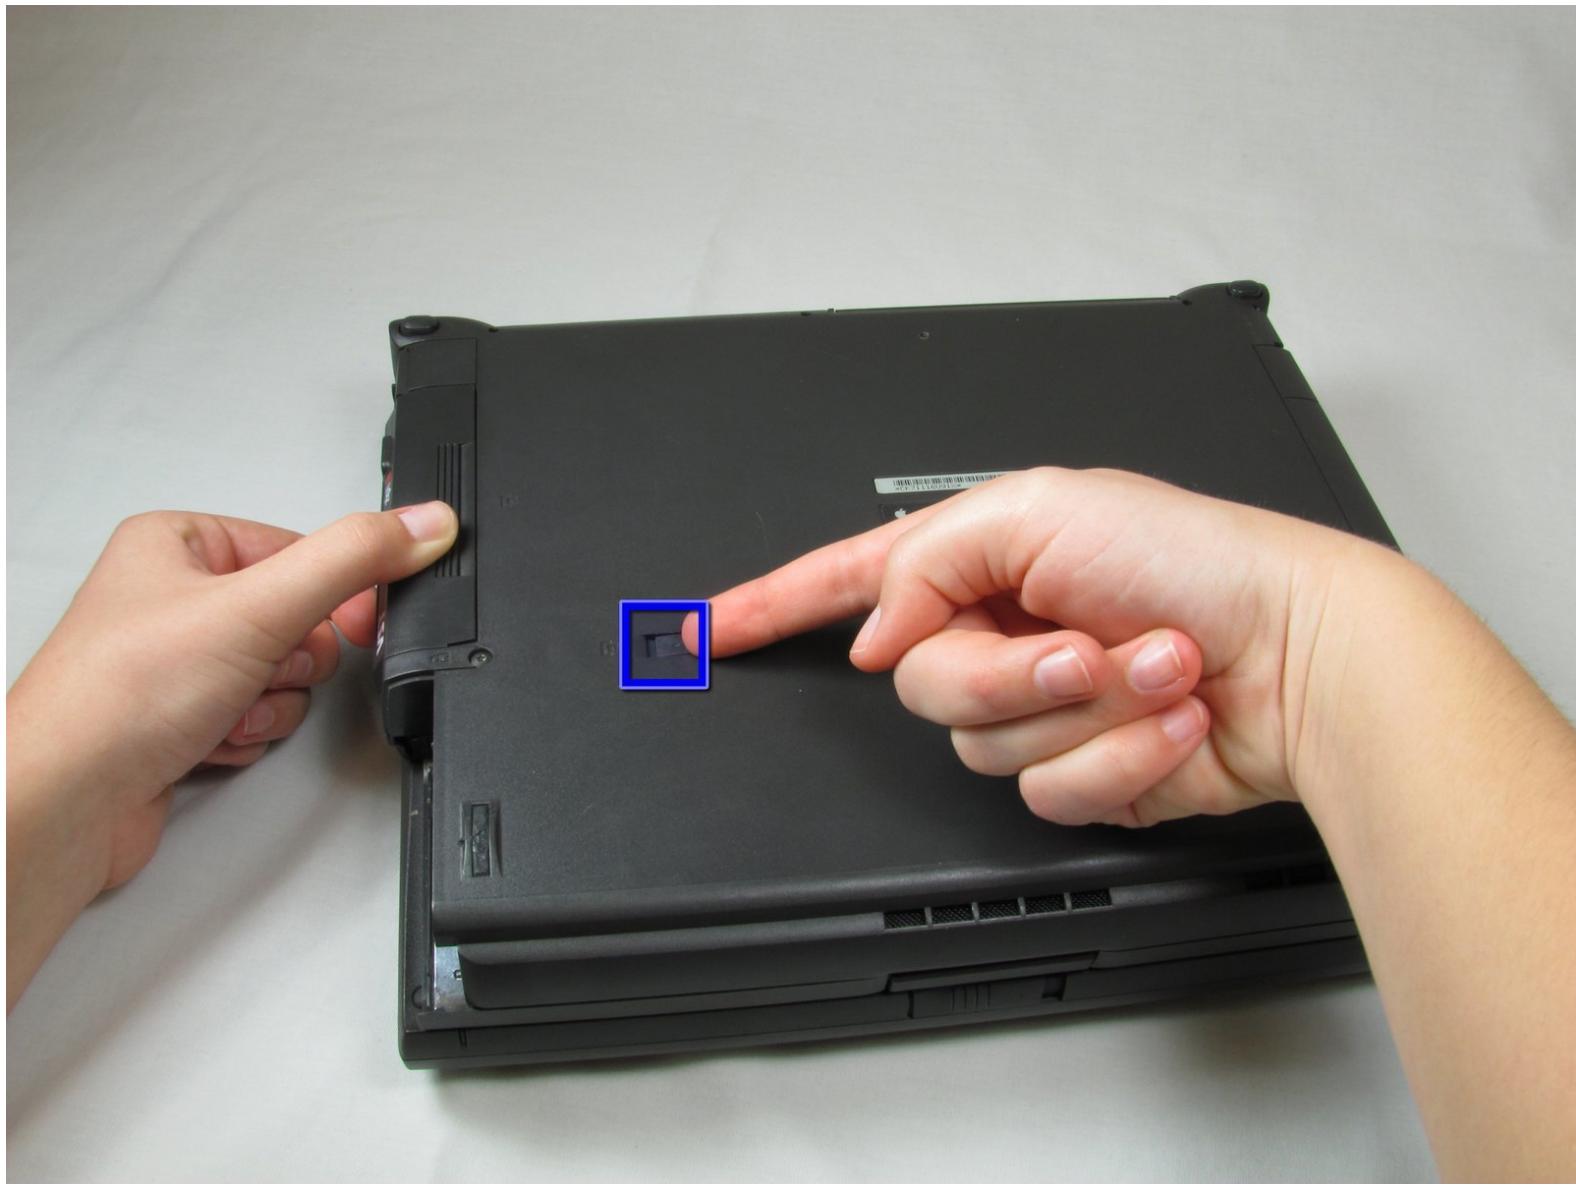

## INTRODUCTION

You can easily remove the floppy drive in order to repair or upgrade it.

## Step 1 — Battery



- Close the screen and turn the PowerBook over. Orient the computer so the text of the label is right side up.

## Step 2



- Press and hold the button on the left of the front side, and slide the battery out.

## Step 3 — Floppy Disk Drive



- First, slide the switch on the back of the computer to the left.
- Then pull the floppy drive out of the computer.

To reassemble your device, follow these instructions in reverse order.