



# PowerShot G7 X Mark II LCD Screen Replacement

This guide will show you how to replace the rear LCD screen of the PowerShot G7 X Mark II camera.

Written By: Brandon



This document was generated on 2019-11-01 10:32:30 AM (MST).

## INTRODUCTION

This guide will show how to replace the LCD screen on the camera. This replacement is useful if the LCD screen has been cracked or has stopped working.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)

## Step 1 — LCD Screen




- Use a Philips #000 screwdriver to remove the three 2mm screws on the bottom of the LCD screen.

## Step 2



- Tilt the LCD screen all the way up and use a Phillips #000 screwdriver to remove the three 4mm screws from the back of the LCD screen.

## Step 3

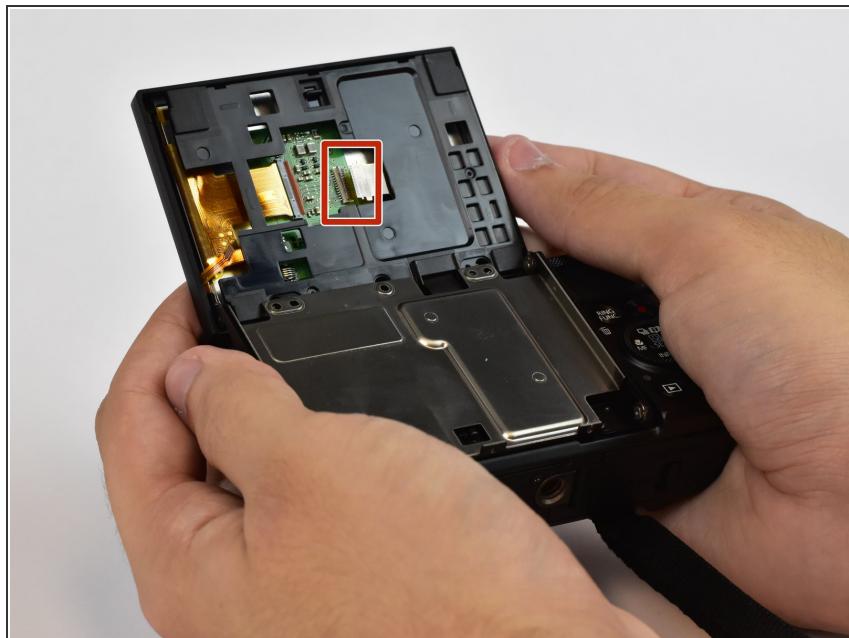

- Remove Back panel from LCD screen.
- Use a spudger tool to release ribbon cable from the ZIF connector.

**⚠** The cable is thin and delicate.  
Detach with care.

## Step 4



- The screen is detached and can now be replaced.

To reassemble your device, follow these instructions in reverse order.