



Printer doesn't have power

Will show you how to ensure that all wiring is connected

Written By: Kelly



Step 1 — Printer doesn't have power



- Make sure the power cord is attached properly.
 - The power cord connects to the printer on the back of the device.
 - When looking at the rear of the printer, the outlet will be in the lower right corner.
 - Ensure the other end of the power cord is firmly plugged into an outlet.

Step 2



- Ensure that the cord is in all the way, as sometimes it can get knocked loose.

To reassemble your device, follow these instructions in reverse order.