



# ProScan PLT7050 Battery Replacement

Is the life of your device getting shorter or not holding a charge? Use this guide to replace the battery.

Written By: Jazmine Jackson



## INTRODUCTION

This is the battery replacement guide for the Proscan PLT 7050. If you find the need to replace the battery, please follow these steps.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Open Device



- Make sure device is unplugged and turned off while working on the device.
- Remove 2 Phillips head, 4.3 mm screws from the bottom side of the tablet with a PH00 screwdriver.

## Step 2

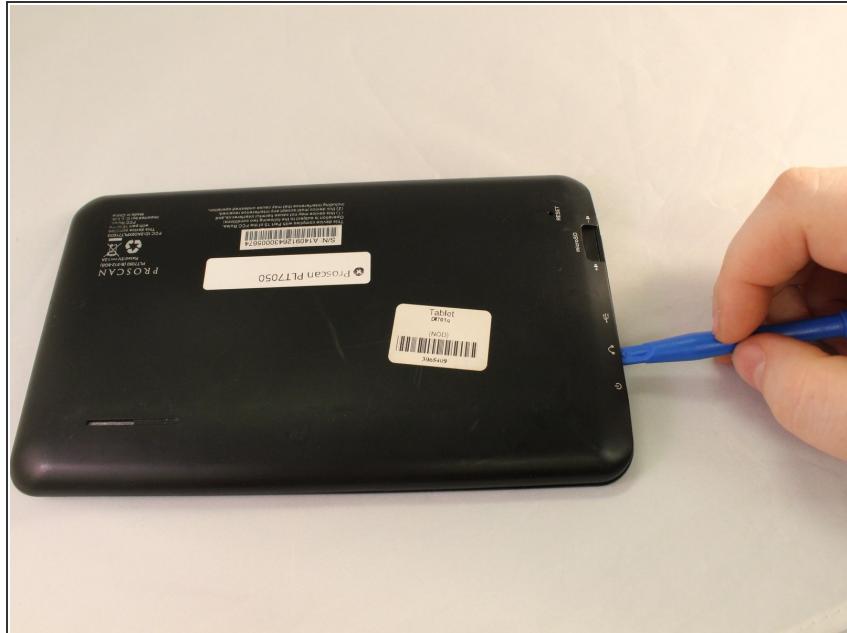

- Use the plastic opening tools to pry the back of the tablet open.
- You may need to slide the tool along the sides of the device to get it to open. You might hear some popping noises, it is okay.

*(i)* May be helpful if you start by the microSD slot.

## Step 3 — Battery



- Use the soldering tool to remove the wires from the motherboard. (Black and Red)

 The soldering tool is hot.


 *i* Take note of where the wires are located.

## Step 4



- Remove the black tape from the battery.
- Remove the three pieces of yellow tape from the battery.

## Step 5

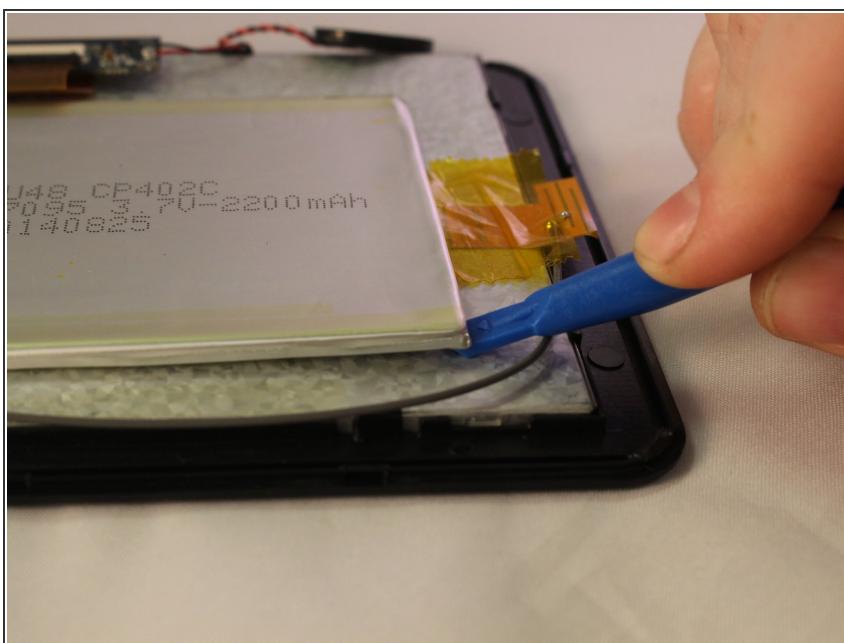

- Use the plastic opening tool to pry the battery from the device as it is attached by an adhesive.

Do not proceed if corrosion and/or swelling of the battery is visible.

To reassemble your device, follow these instructions in reverse order.