




Projector Adjustment

This guide is intended to help users resolve issues with the projector.

Written By: Gurleen Powar

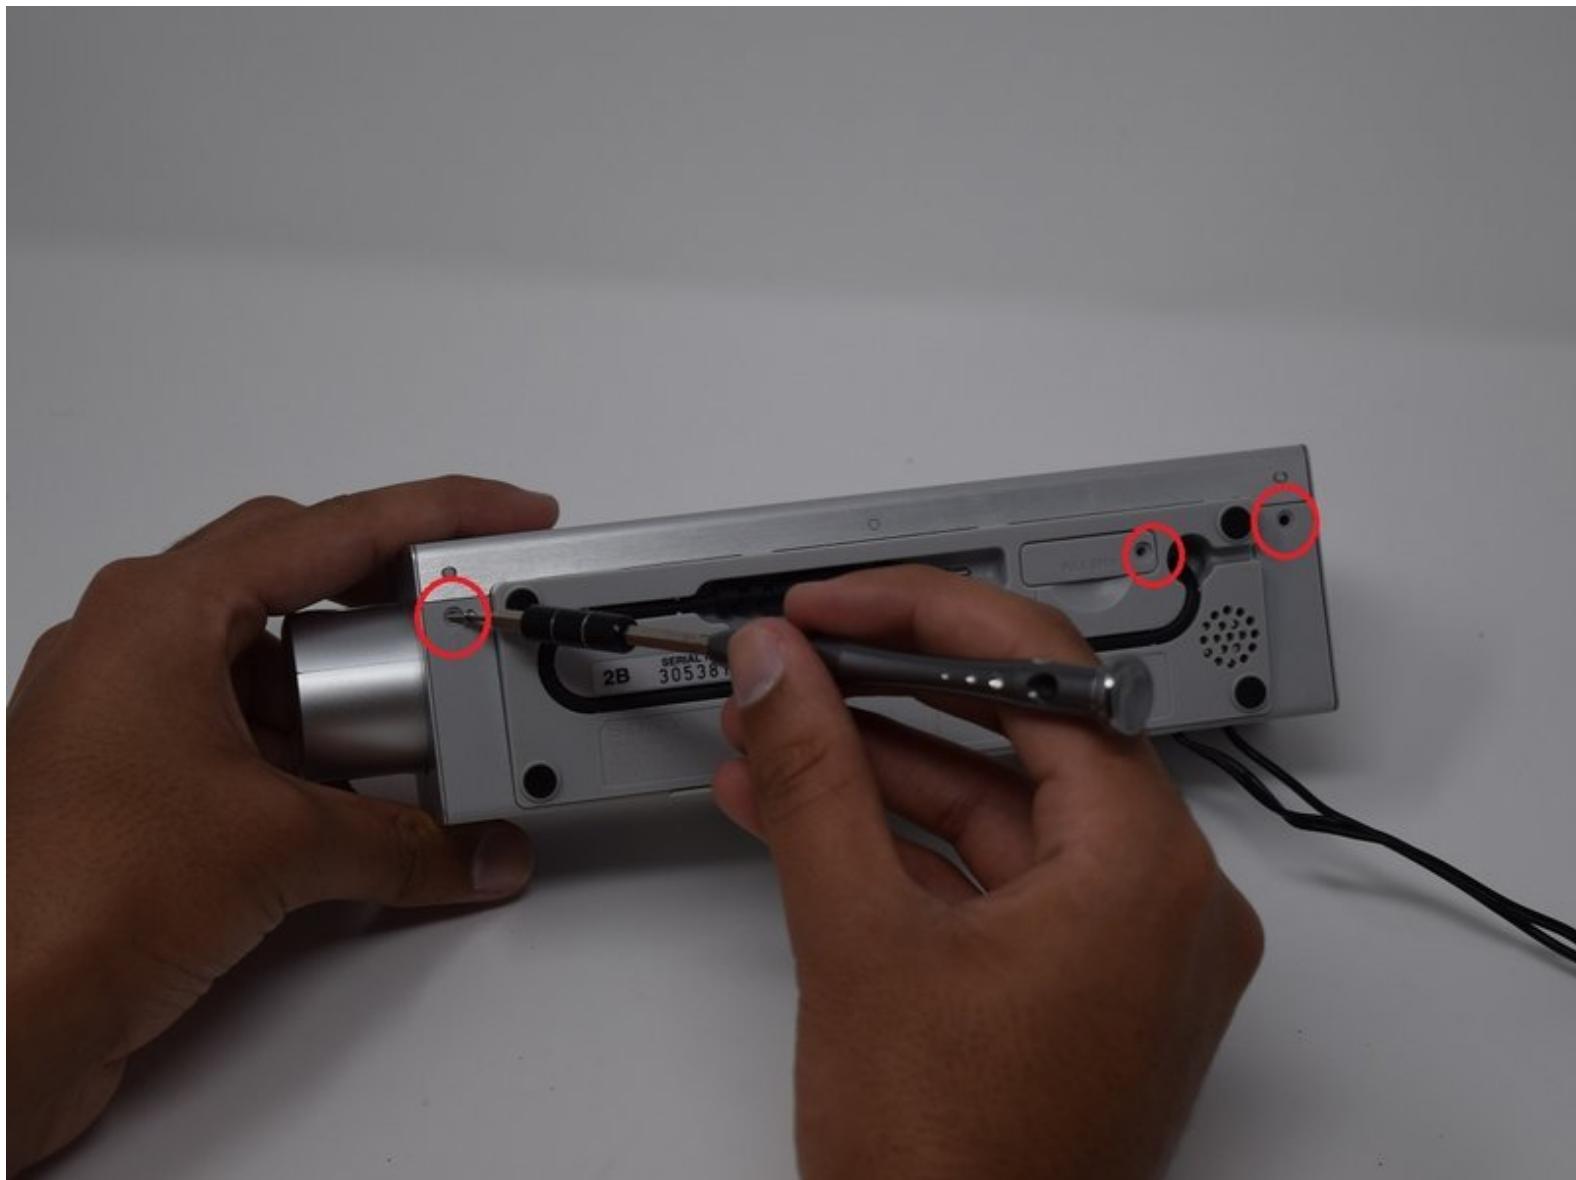


INTRODUCTION

This guide is intended to help users resolve issues with the projector. Please see the Sony Dream Machine ICF-C717PJ Troubleshooting page: [Sony Dream Machine ICF-C717PJ](#) to eliminate other possible issues before you begin. This guide will help assist you in repair the issues impacting the clarity of the projection display.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Projector Adjustment

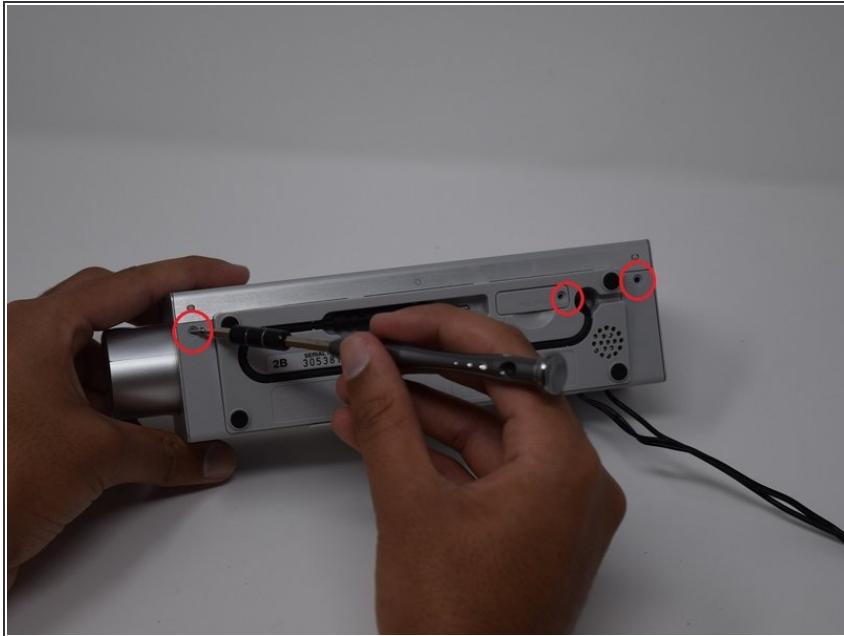


- Remove the screw from the backside cover of the Sony Dream Machine with a Phillips Screwdriver.

Step 2



- Remove the battery cover tab.

Step 3

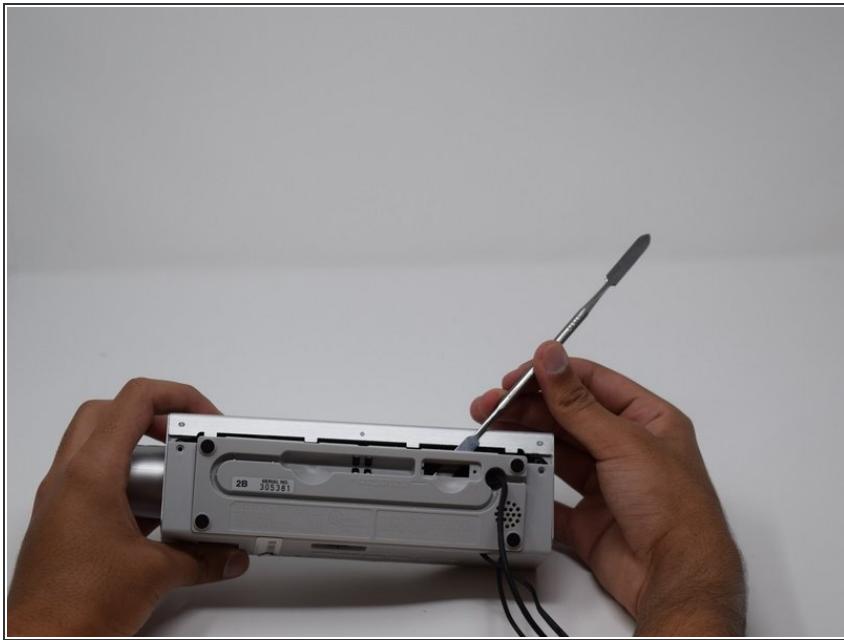


- Remove the backside cover of the device, pry open with a screwdriver if necessary.

Step 4



- Remove screws from motherboard, in order to detach it.

Step 5

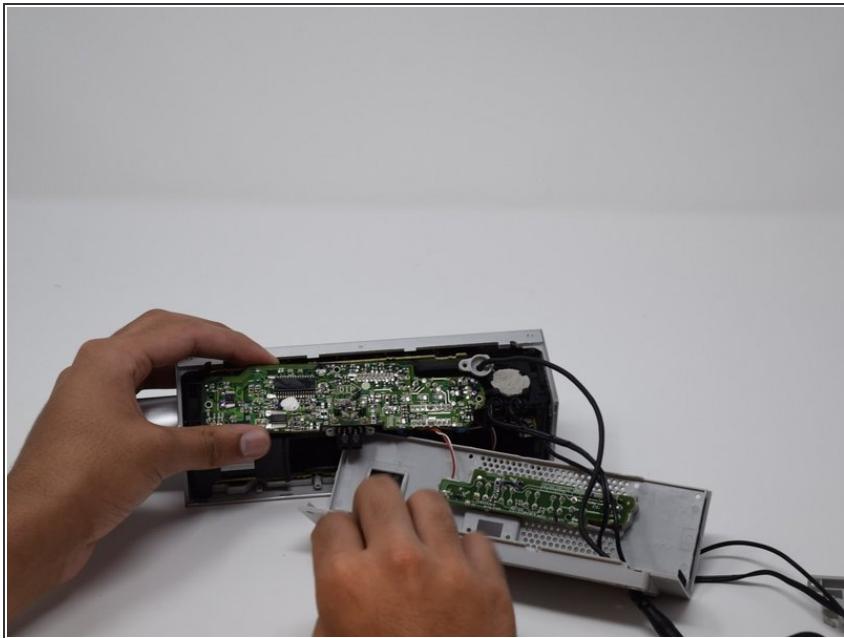

- Pull motherboard out with your hands.

Step 6



- Remove paper tab from its slot and re-insert it.