


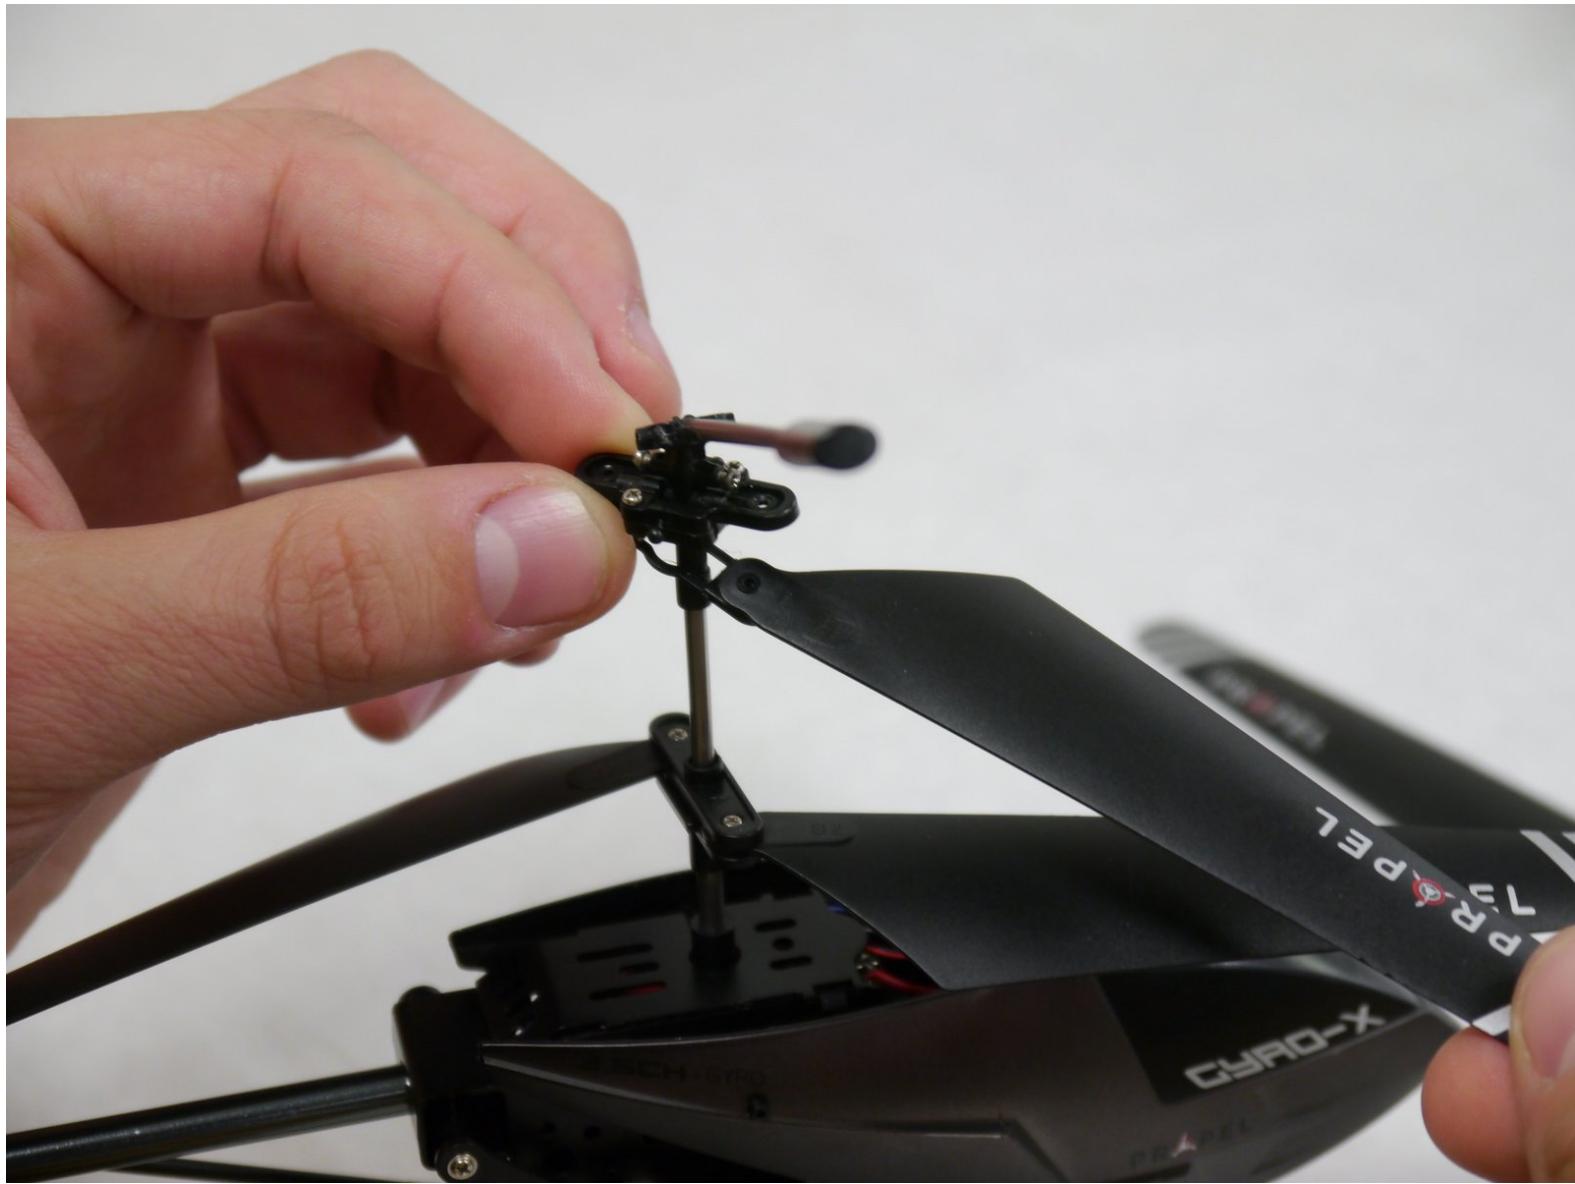

# Propel Gyro-X Top Propellor Blades Replacement

This is a simple guide that will show you how to quickly and careful remove the upper propellers of your Gyro-X helicopter.

Written By: Sarah Atmadja



This document was generated on 2019-09-22 01:54:09 PM (MST).

## INTRODUCTION

In this guide you will learn how to remove and replace the top two propellor blades of the Gyro-X. This is a common procedure, because crashing your Gyro-X will often result in propellor damage. To remove the propellers you will only need to remove 4 small screws. Be careful not to lose these after removal.

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Top Propellor Blades



**⚠** Stabilizing links are easy to break.  
Be gentle when prying them off.

- Place the tweezers on the sides of the links and pull straight away from the top point of connection.

## Step 2



- Remove the two 6.0 mm Phillips #00 screws from the rotors.

## Step 3



- Pull the rotors away from the mounting brackets.

To reassemble your device, follow these instructions in reverse order.