



# Propel Star Wars T-65 X-Wing Drone Remote Control Battery Replacement

This guide will teach readers how to access the batteries in the remote control and replace them with fresh batteries.

Written By: Miranda Brinkley



## INTRODUCTION

Is your drone controller not lighting up? A possible cause could be dead batteries. Follow these steps to learn how to replace the batteries. No tools are required because the screwdriver is included in the remote control.

## Step 1 — Remote Control Battery



- On the right side of the controller, slide the small screw driver out.

## Step 2



- Flip the controller over, so the black panels are facing up.

## Step 3



- Unscrew the small screw on the left bottom side. The screw should be on the plastic piece that has an upwards facing arrow.
- Repeat for the screw on the bottom right hand side.

## Step 4



- Pull the plastic piece off to reveal the compartment where the batteries go.

## Step 5



- Remove the old batteries.

To reassemble your device, follow these instructions in reverse order.