


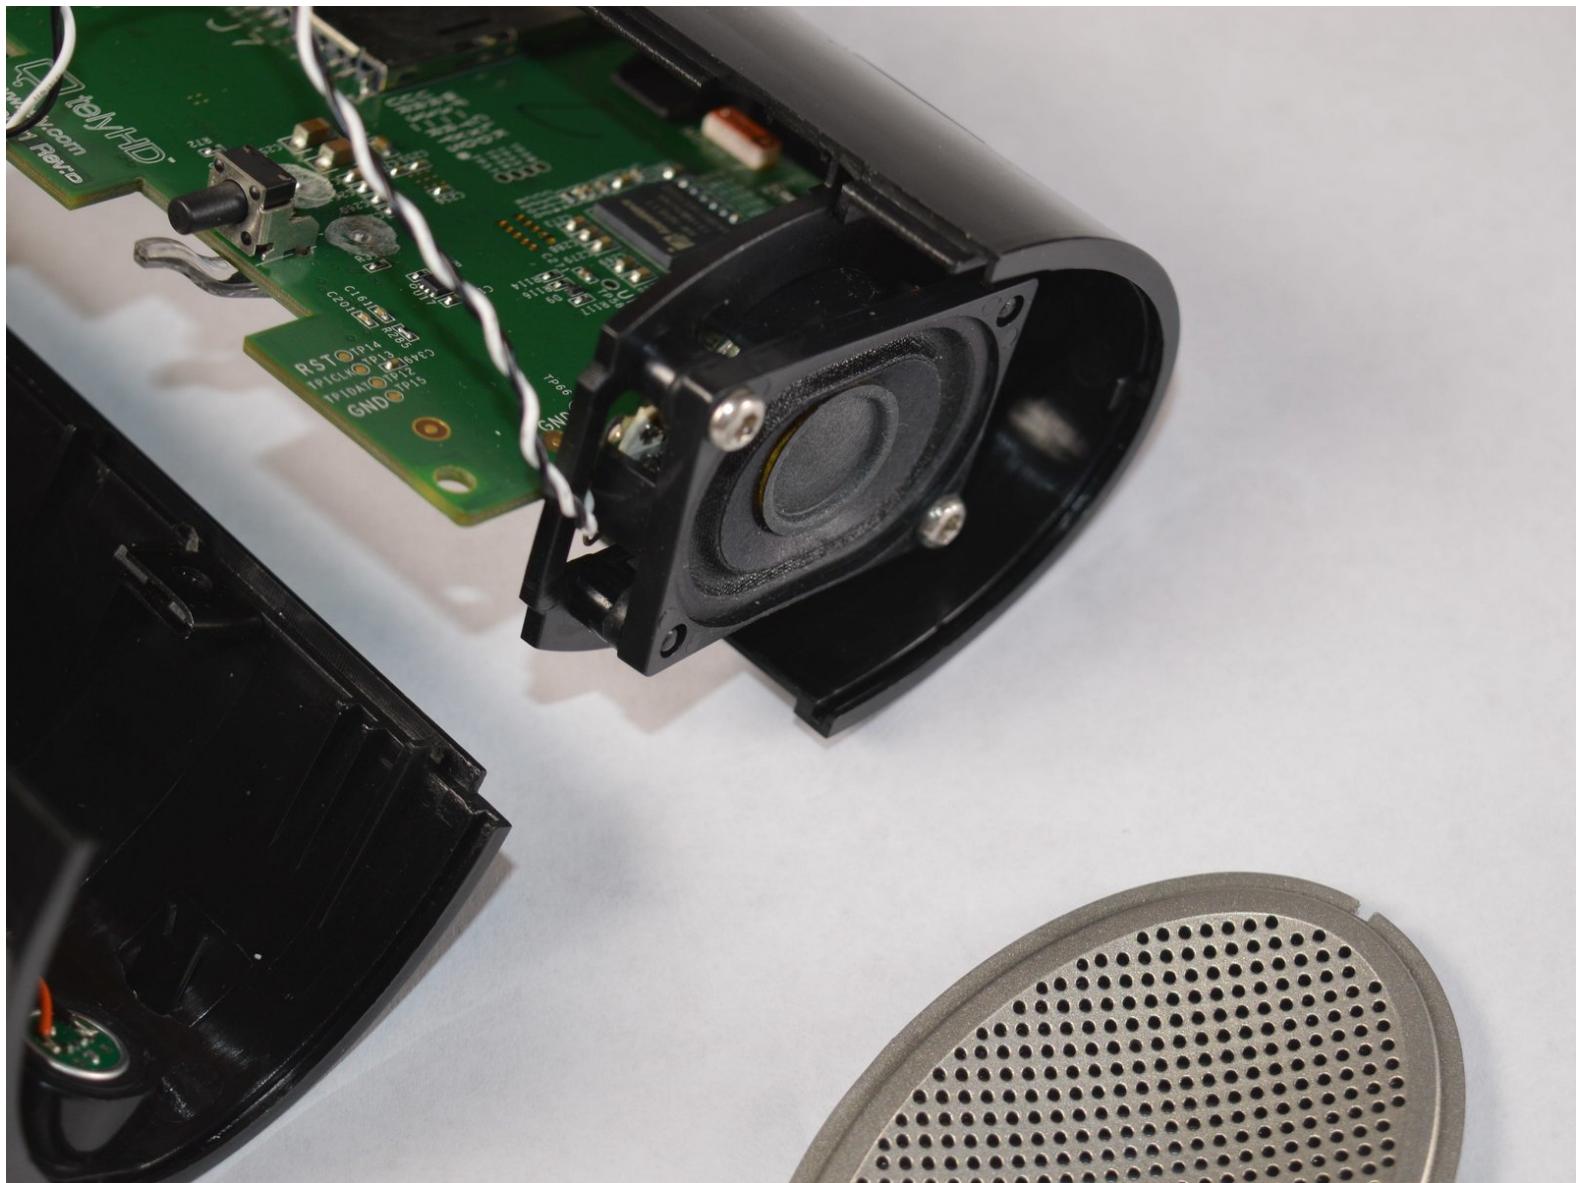

Purple SmartVP Speaker Replacement

Replace a malfunctioning or disabled speaker in your device.

Written By: Brian Maulucci



 **TOOLS:**


- [T9 Torx Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)

Step 1 — Speaker





- Remove the top bar by removing the 5cm hex T10 screws on the back of the device as shown. Then gently pull off the top bar from the main component.

Step 2

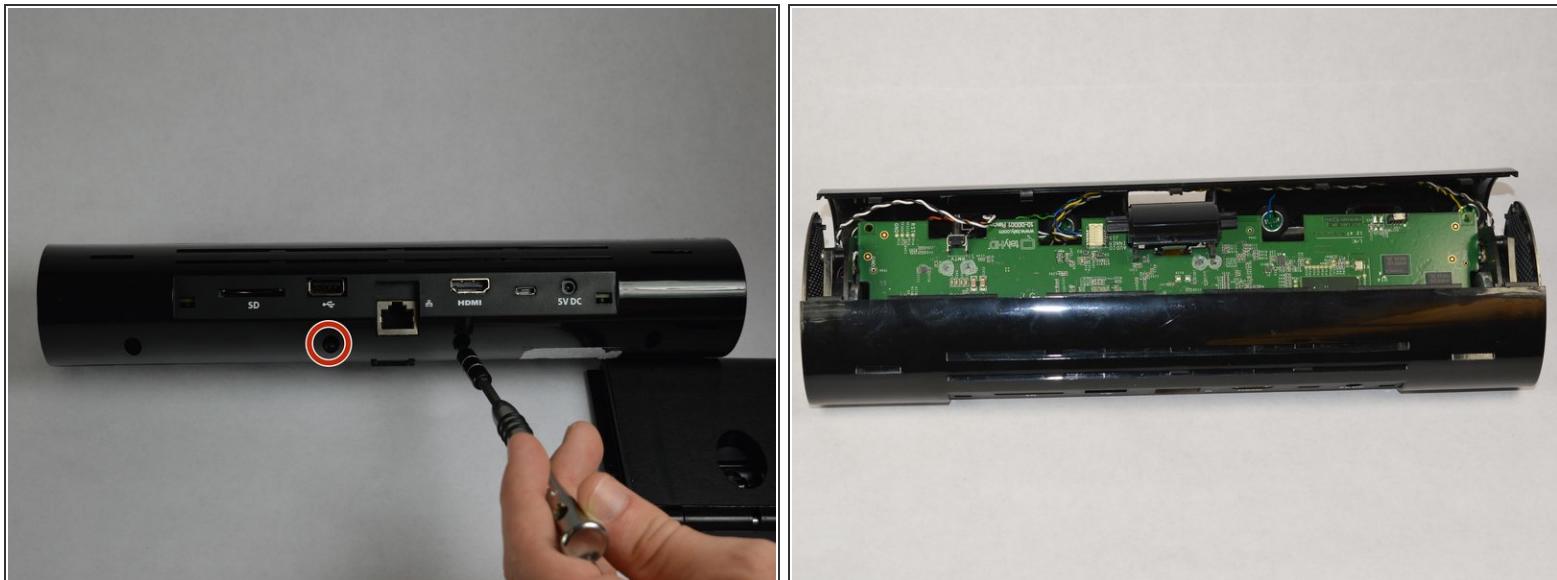

- Remove the 1.2 cm hex T9 screws and gently open up the device.

Step 3

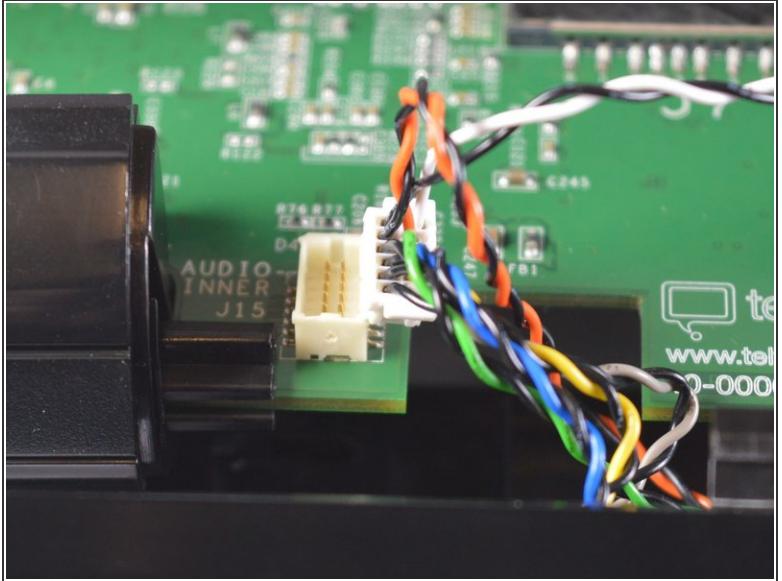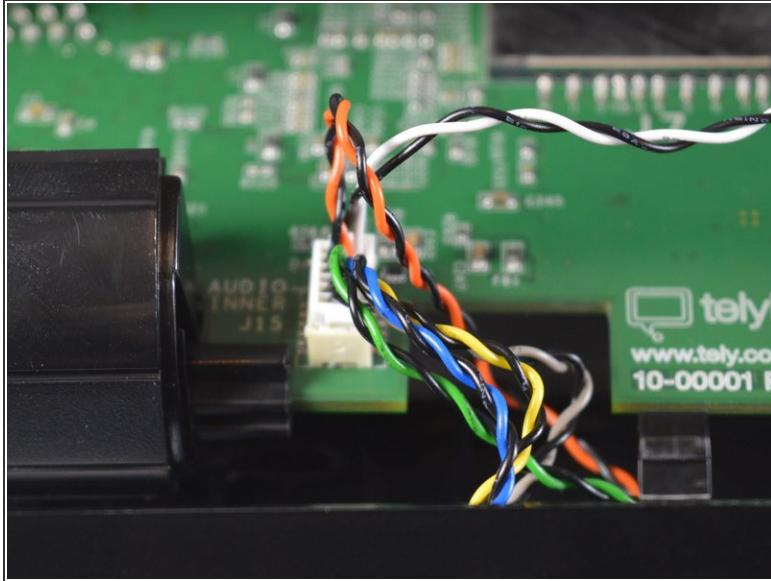


- Disconnect the speakers from the motherboard.

Step 4



- Remove the speaker from the plastic shell of the device.

Step 5

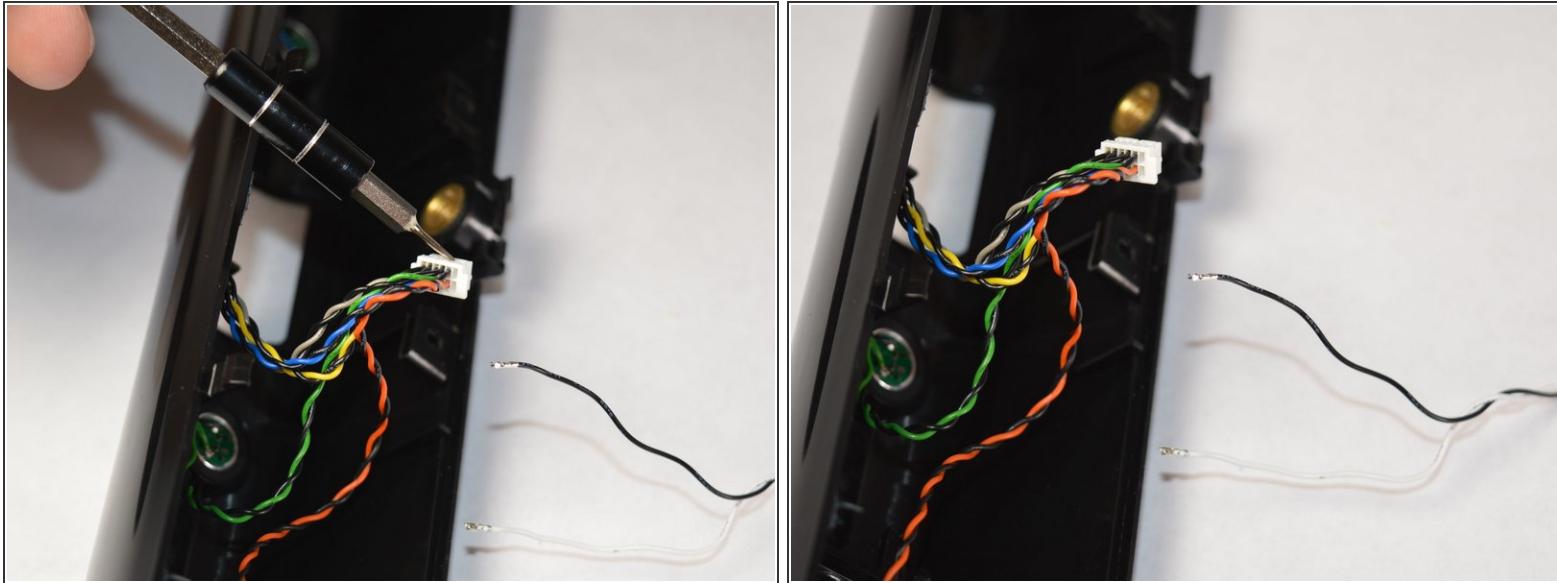

- Release the wires connected to the speaker from the 12-pin connector with a spudger and replace the affected speaker.

To reassemble your device, follow these instructions in reverse order.