




QNAP UX-500P System Fan Replacement

How to replace the System Fan in an QNAP UX-500P Extension.

Written By: Chris Klinger

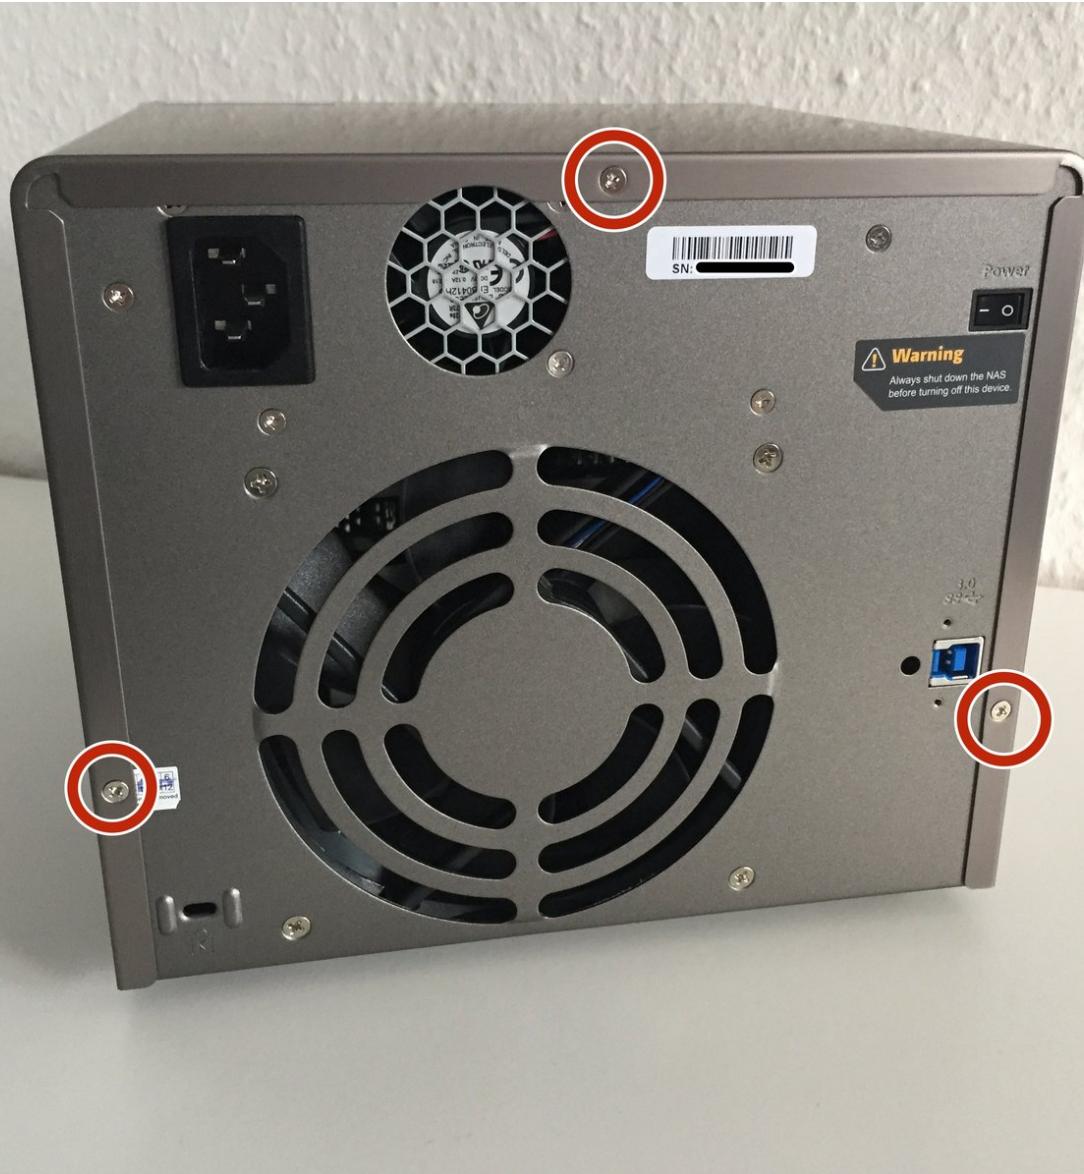

 **TOOLS:**

- [New Item \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)

Step 1 — System Fan



- Start with removing the three screws to open the case. After removing the screws pull/push the case to the backside to remove it.

Step 2 — Remove the power supply



- Now you can remove the power supply unit. This requires 5 more screws on the back and two inside the case to be removed.

Step 3 — Remove the back



- Remove the remaining two screws on the back side. Two more can be found on the bottom and one on the bottom corner left and right. Now you can carefully remove the back of the UX-500P.

Step 4 — Remove the system fan



- Now you can remove the final four screws that attach the 120mm fan to the back of the UX500P.

Repeat steps in reverse order.