


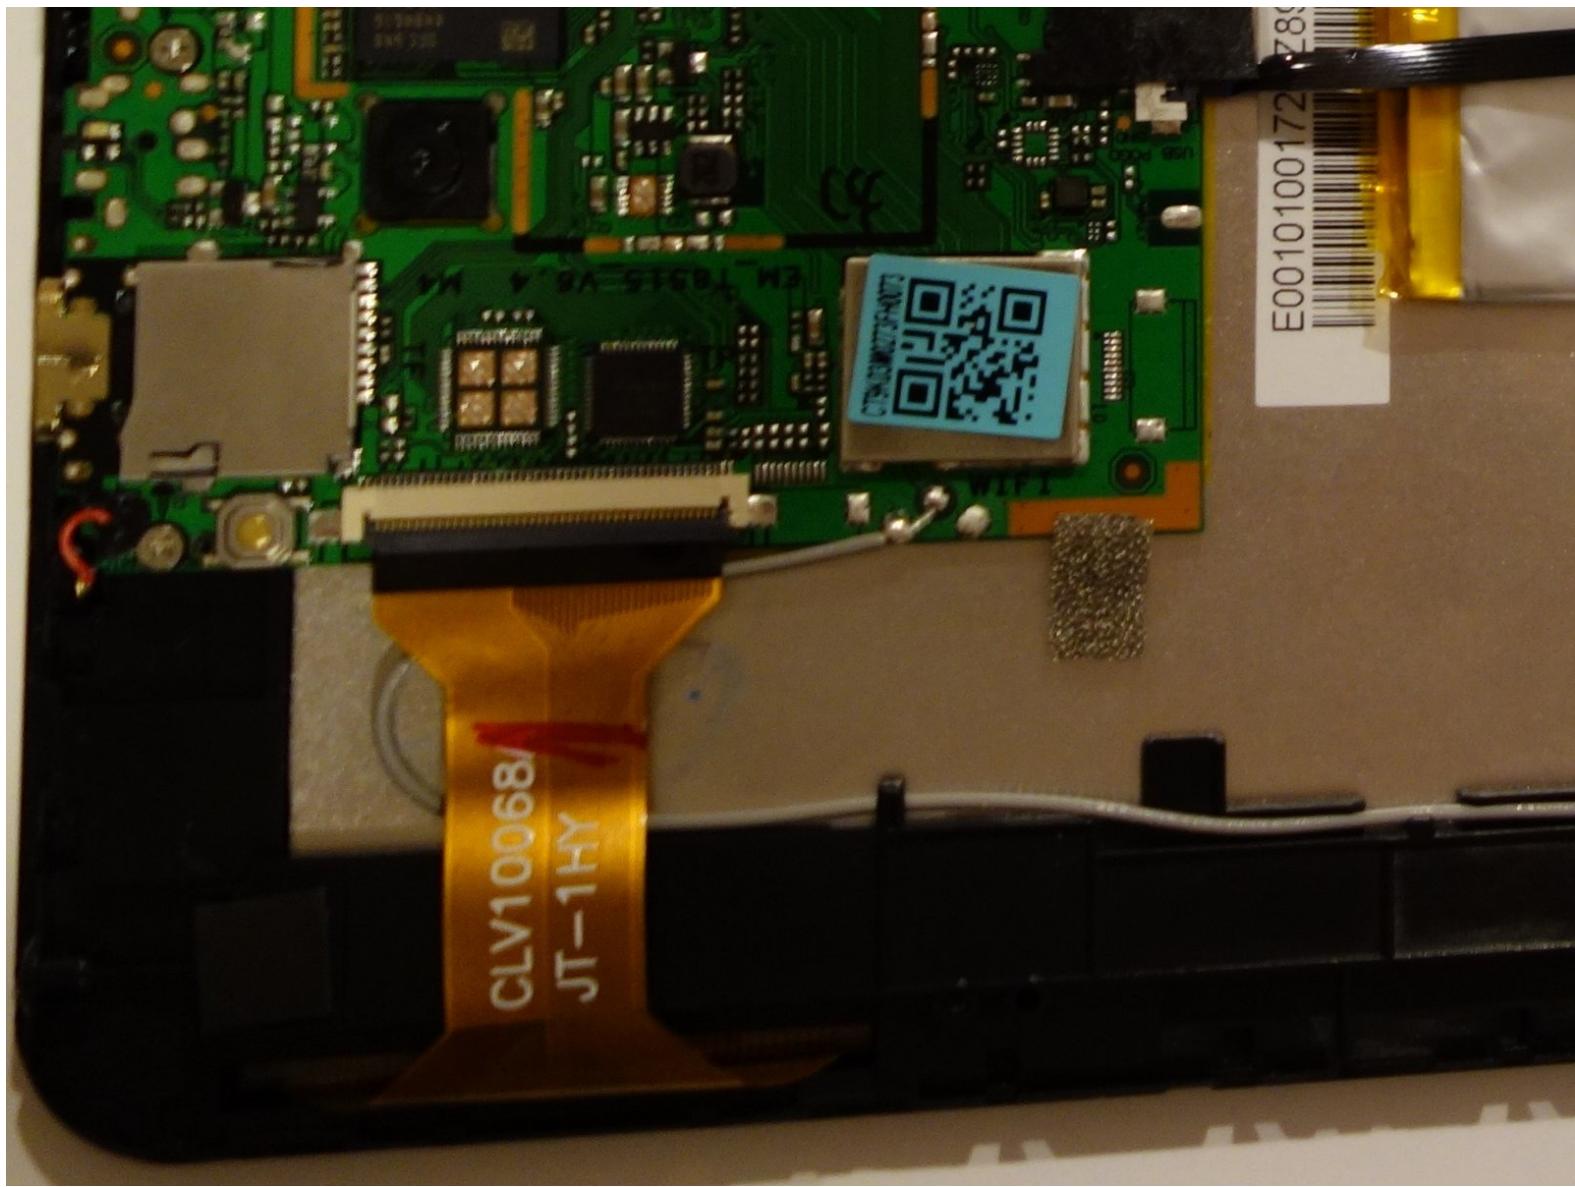

RCA 10 Viking Pro RCT6K03W13 Antenna Replacement

This guide will talk you through the process of replacing the antenna in your RCA 10 Viking Pro RCT6K03W13.

Written By: Ryan Wickett




This document was generated on 2020-02-14 02:00:46 PM (MST).

 **TOOLS:**

- **Spudger** (1)
- **Phillips #00 Screwdriver** (1)
- **Soldering Iron** (1)

Step 1 — Backplate

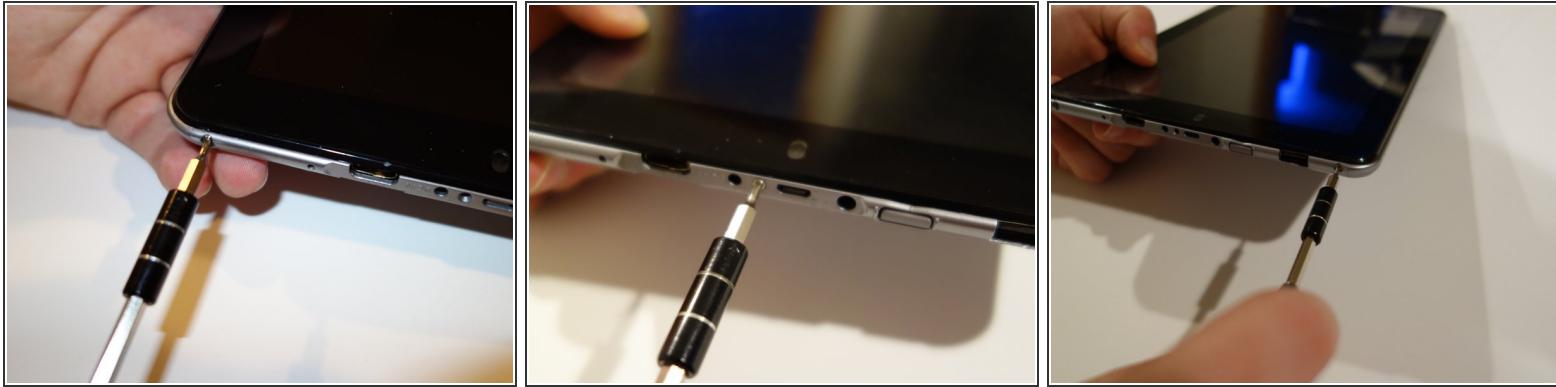

- Remove the three Phillips #00 screws at the bottom of the device.

Step 2



- Remove the two Phillips #00 screws to the left and right of the keyboard connector.

Step 3



- Pull on one of the bottom corners to begin to pull off the back plate.


Step 4



- Work around the outside of the chassis, using the spudger to pry the backplate off.


(i) After doing this for about half the device, the backplate should pop right off.

Step 5 — Antenna

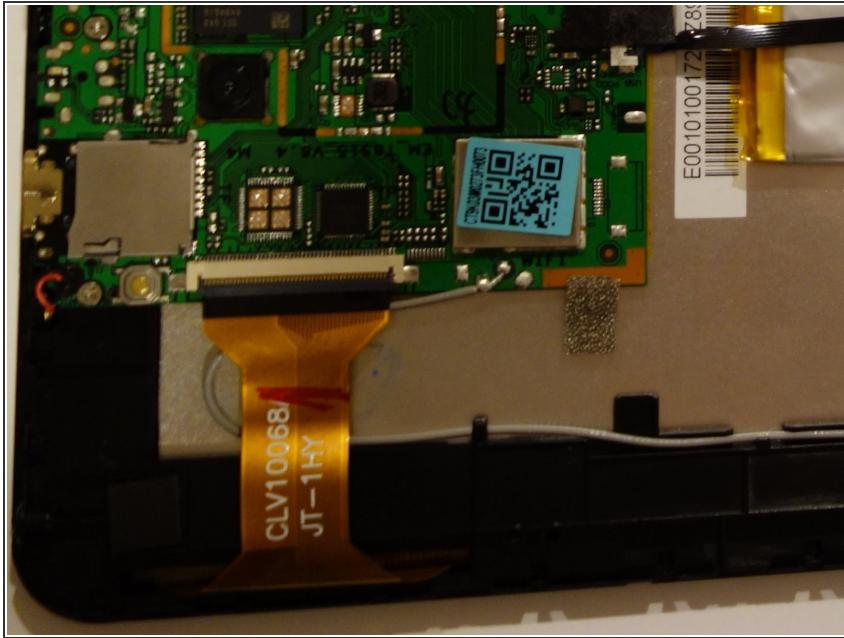

- Identify the grey wire on the right side of the device.

Step 6

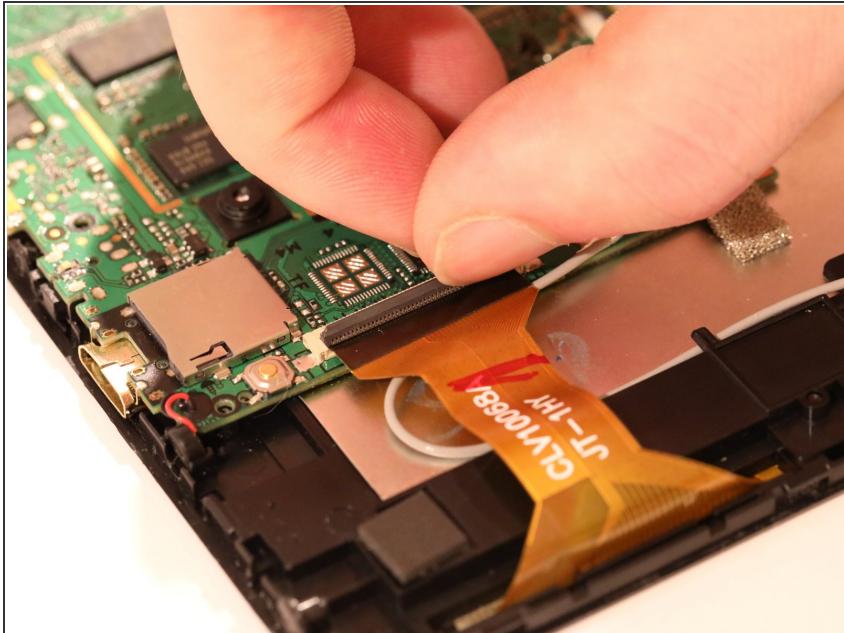

- Remove the orange ribbon cable over the wire.

Step 7



- Remove the antenna using a soldering iron.

To reassemble your device, follow these instructions in reverse order.