



RCA 10 Viking Pro RCT6K03W13 Battery Replacement

Use this guide to replace the battery in your RCA 10 Viking Pro RCT6K03W13.

Written By: Ryan Wickett



INTRODUCTION

This guide will talk you through the process of replacing the battery in your RCA 10 Viking Pro RCT6K03W13.

TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Backplate



- Remove the three Phillips #00 screws at the bottom of the device.

Step 2





- Remove the two Phillips #00 screws to the left and right of the keyboard connector.

Step 3



- Pull on one of the bottom corners to begin to pull off the back plate.


Step 4

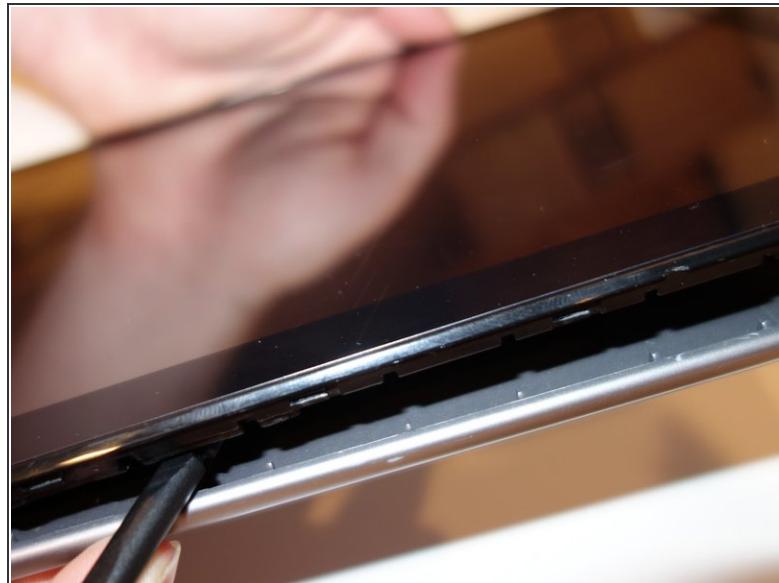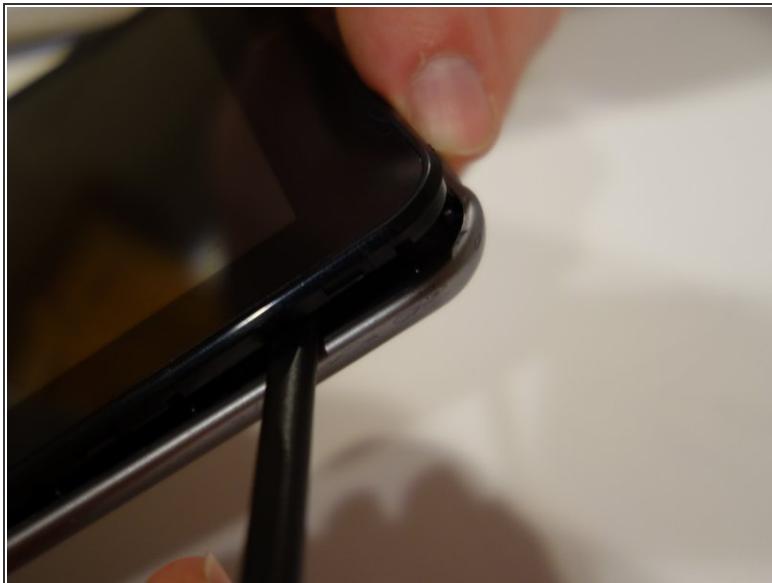

- Work around the outside of the chassis, using the spudger to pry the backplate off.


(i) After doing this for about half the device, the backplate should pop right off.

Step 5 — Battery

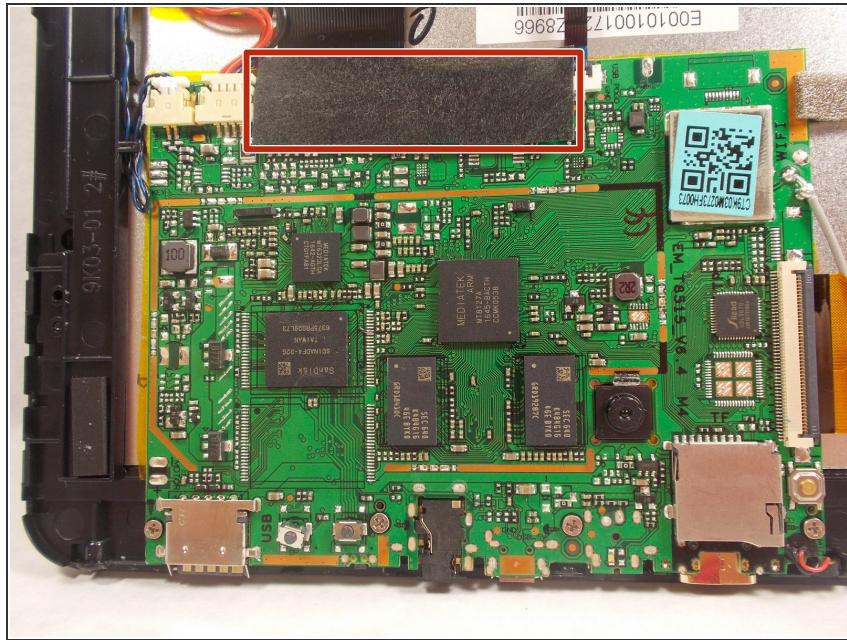

- Remove the tape over the connectors on the motherboard and other side of the battery.

Step 6

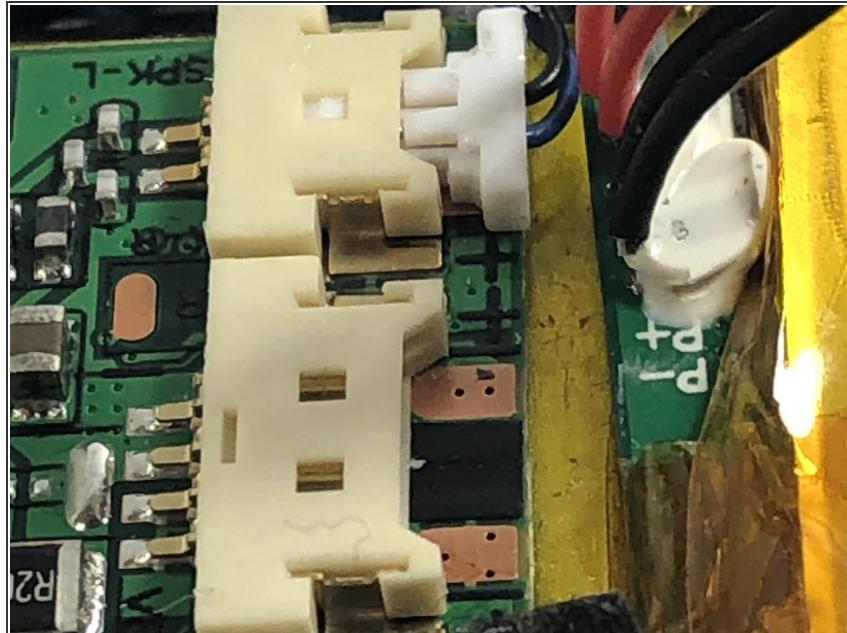


- Disconnect the red and black keyboard wires connecting the battery to the motherboard.

Step 7





- Disconnect the black ribbon cable running over the battery. Flip up the black clamp and pull the cable out.

Step 8

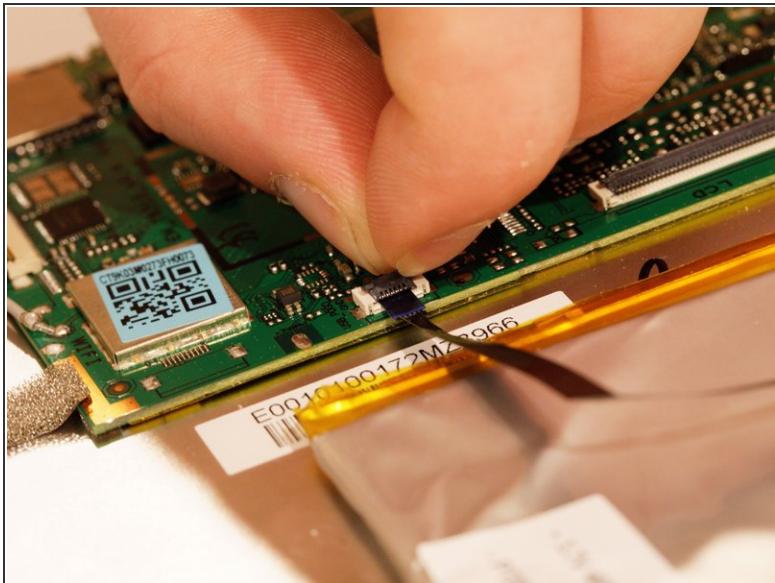

- Remove the cable over the battery connecting the motherboard and the power connector.
- Flip up the black clamp and pull the cable out.

Step 9

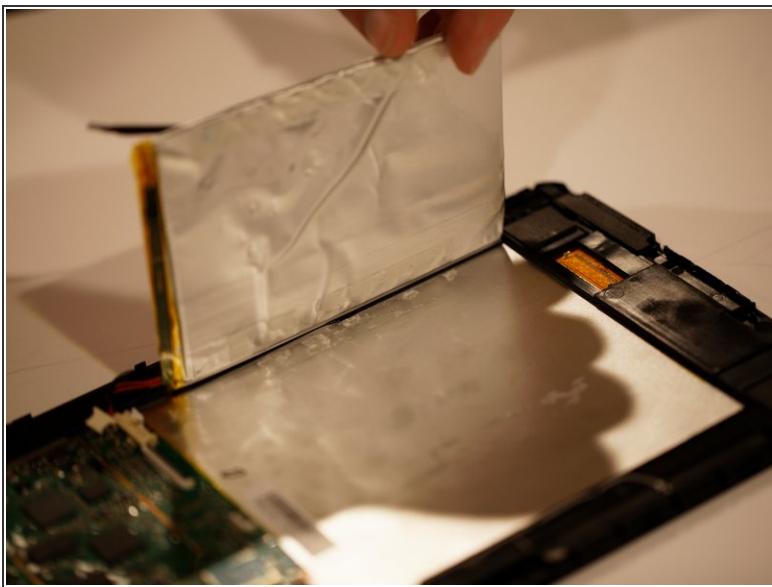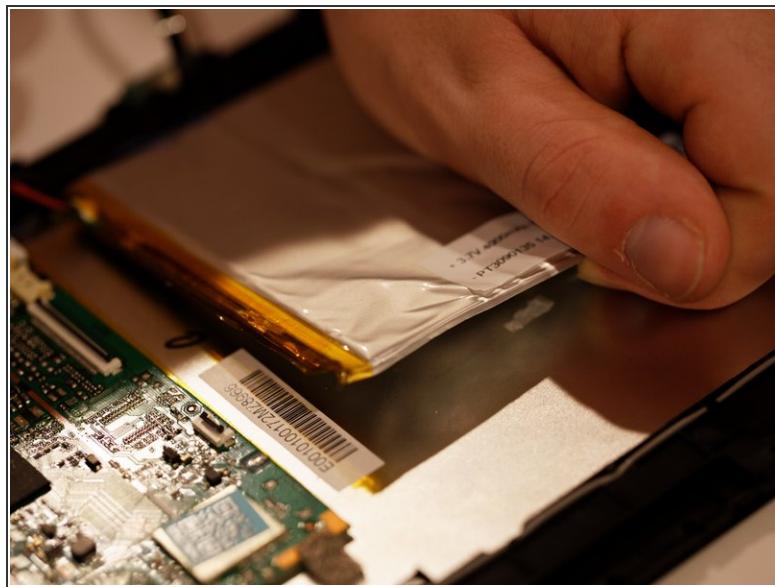

- Pull out battery. It is taped to the device so it is safe to pull out.

 Look for damage to the battery. If damaged, make sure to not get any acid on your fingers.

To reassemble your device, follow these instructions in reverse order.