



RCA CC310 Onboard Microphone Replacement

Replace the onboard microphone in the RCA CC310 camcorder.

Written By: Oliver Adams



INTRODUCTION

This guide will instruct you to replace the onboard microphone if it is faulty.

TOOLS:

- Phillips #0 Screwdriver (1)
- Soldering Iron (1)

PARTS:

- Microphone (1)

Step 1 — Onboard Microphone




- Lift the metal flap and slide the viewfinder off to the right.

Step 2





- Unscrew the 7.0mm ph#0 screw on the underside where the cable connects.
- Lift the plastic where the cable is connected to the viewfinder.
- Disconnect the cable inside by pulling it apart.

Step 3

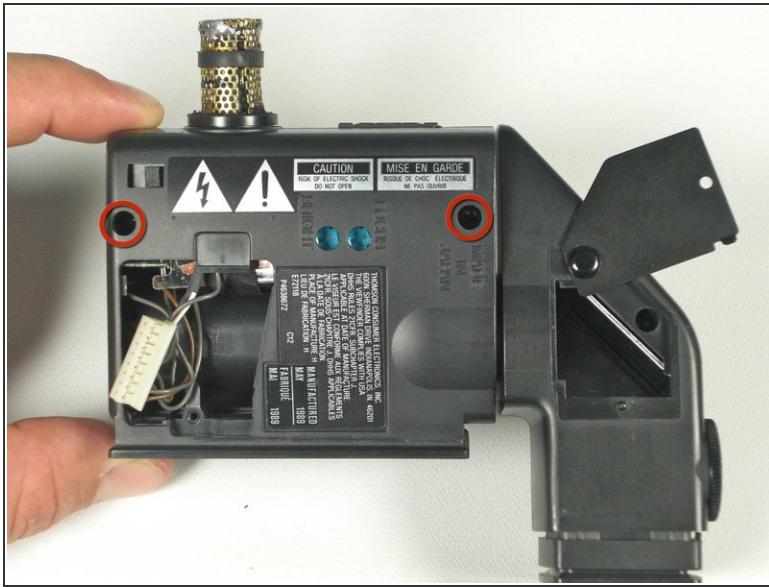


- Unscrew the two 7mm ph#0 screws on the underside of the viewfinder assembly.
- Lift the viewfinder plastic assembly up.

Step 4

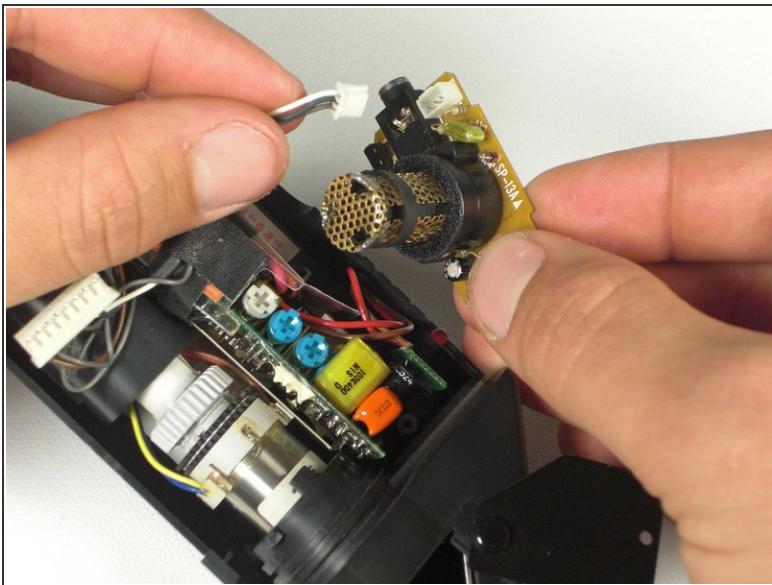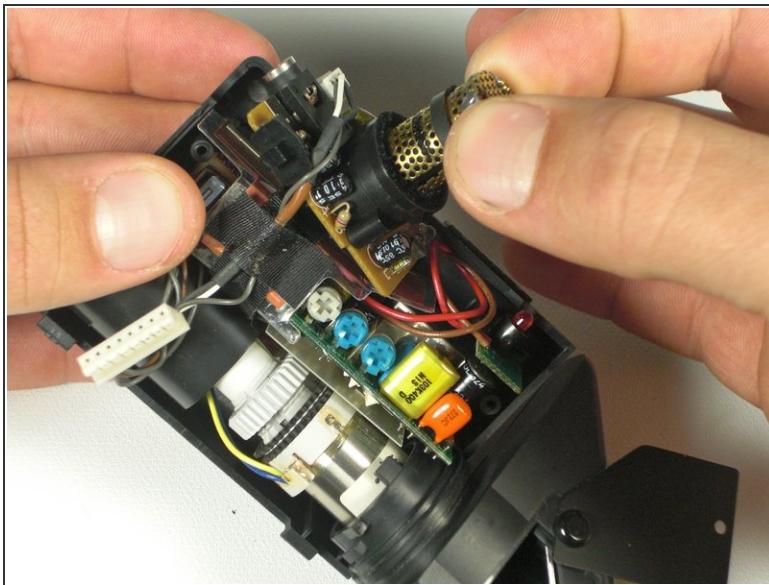


- Lift the microphone circuit board straight up.
- Unclip the cable connected to the circuit board.

Step 5

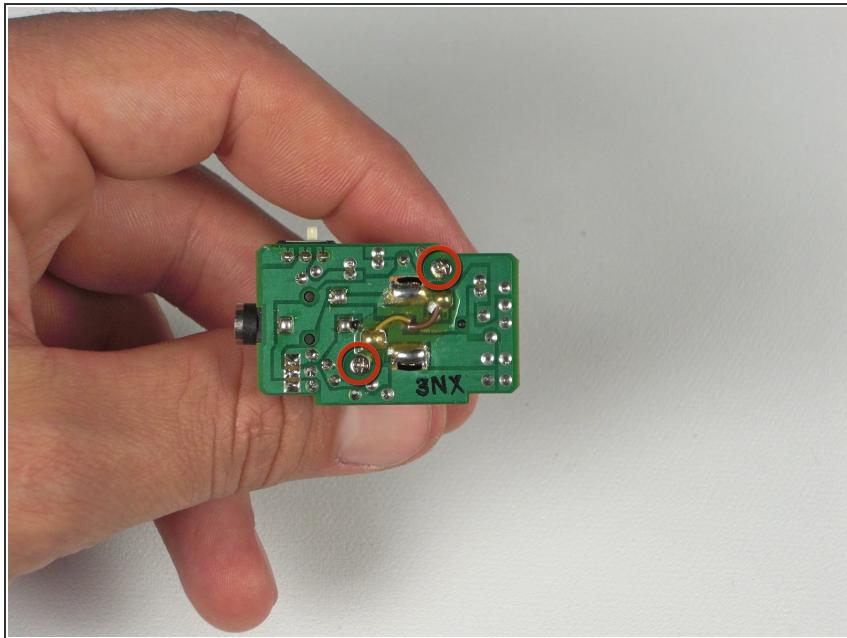

- Turn the microphone circuit board over.
- Unscrew the two Ph#0 screws holding the plastic housing on the circuit board.

Step 6

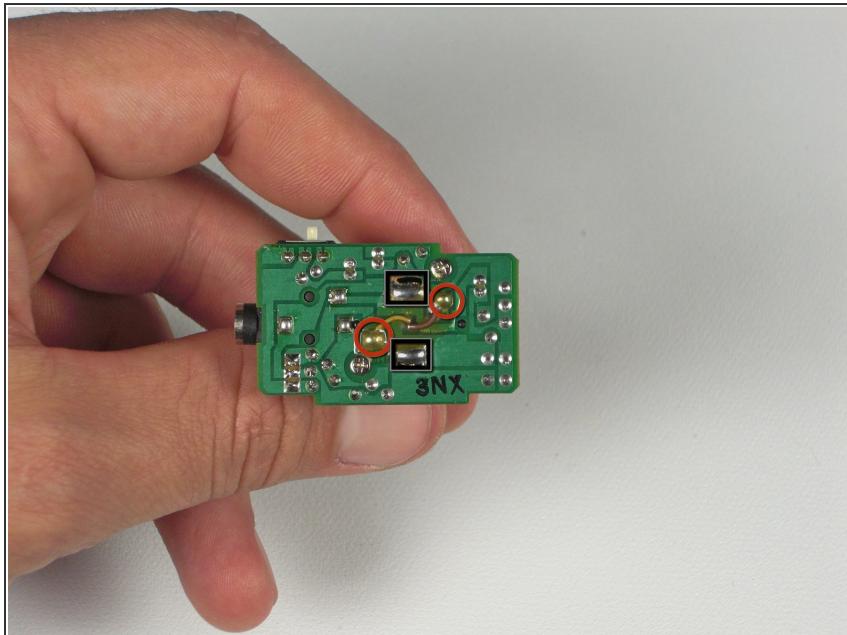

- Desolder the metal protective housing using a soldering iron.
- Desolder the microphone and replace it.

To reassemble your device, follow these instructions in reverse order.