




# RCA RCT6272W23 Speaker Replacement

Replace the speaker on your device.

Written By: Stephen Radachy

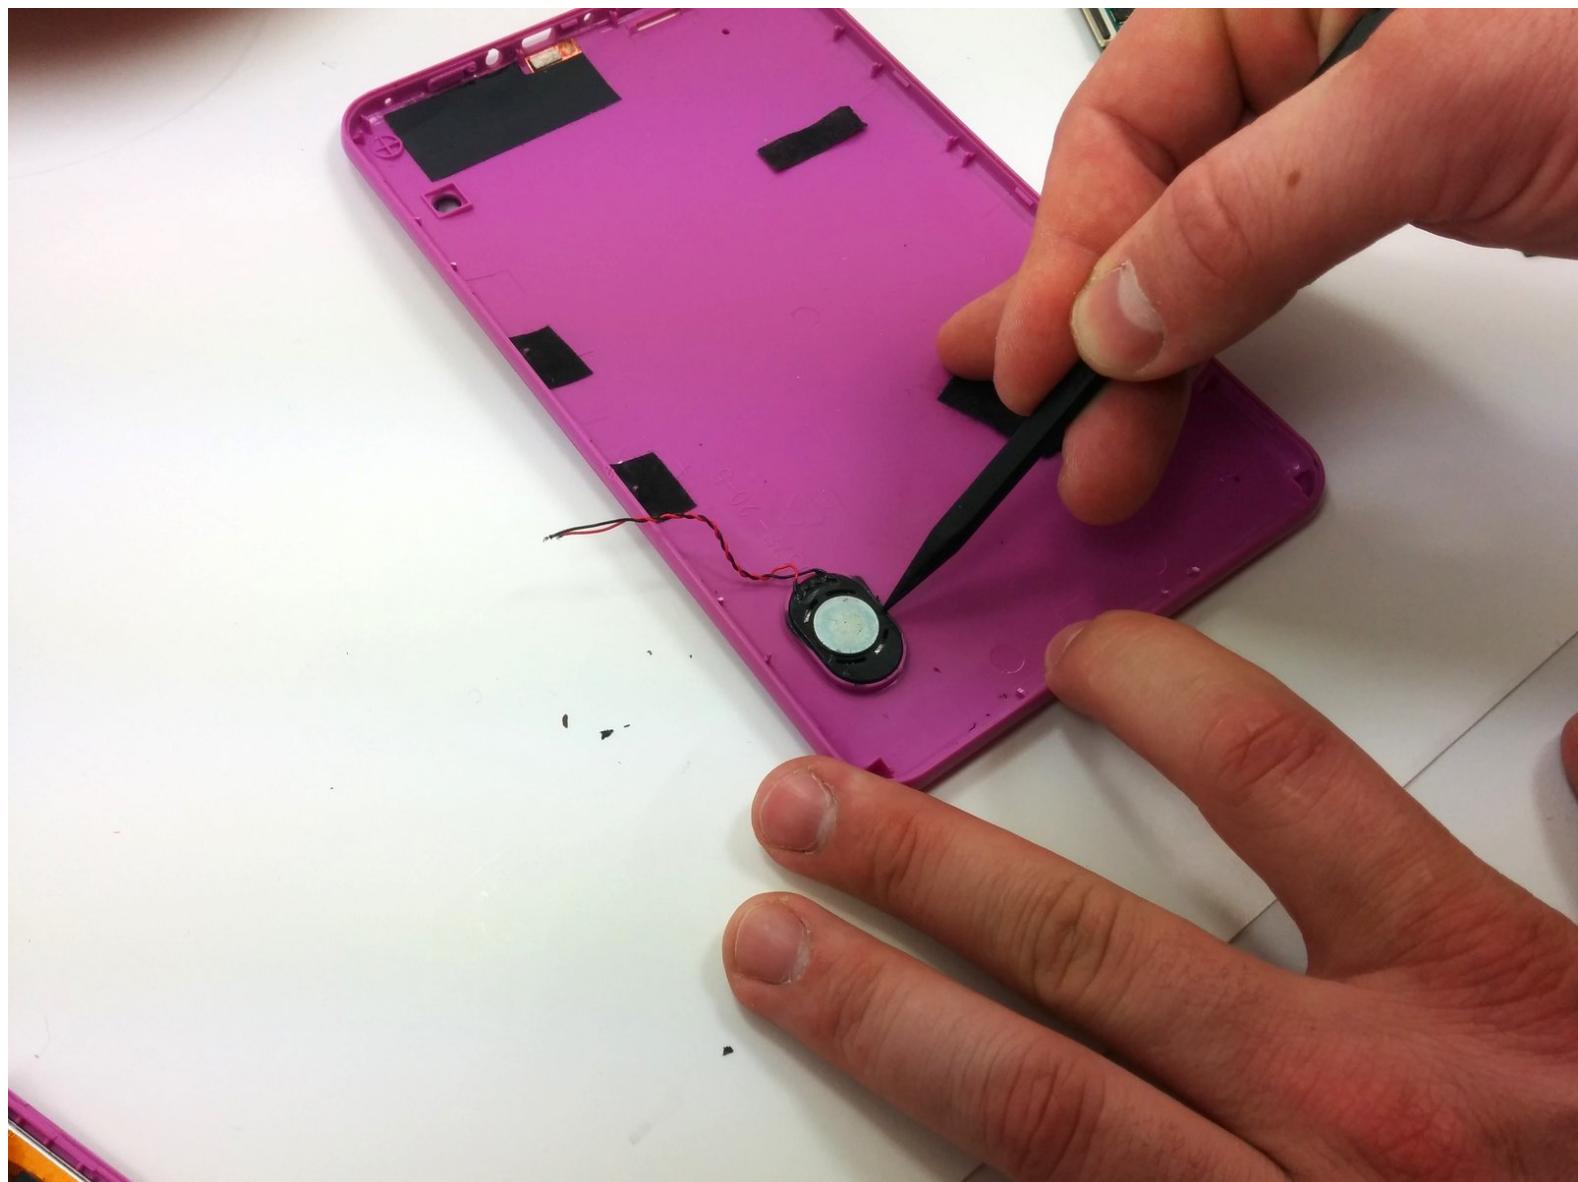

## INTRODUCTION

In this guide, you will learn how to replace the speaker on your device.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Spudger](#) (1)

## Step 1 — Case



- Use a philips #00 screwdriver to unscrew both 4.064mm screws at the top of the device which hold it together.


## Step 2



- Press a plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the many plastic tabs.
- Gently pull both sides apart.

 The speaker is connected to the back cover so be careful when separating

## Step 3 — Speaker

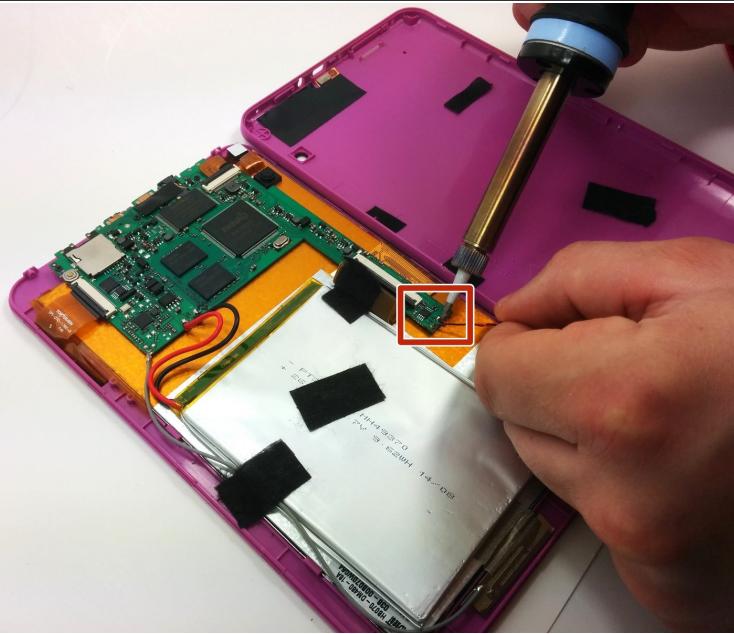


- Use a Soldering iron to removed the soldered connections for the speaker

 For your safety and to ensure a correct repair, be sure to exercise caution when using the soldering iron

-  For more information about soldering, check out this [guide](#).

## Step 4

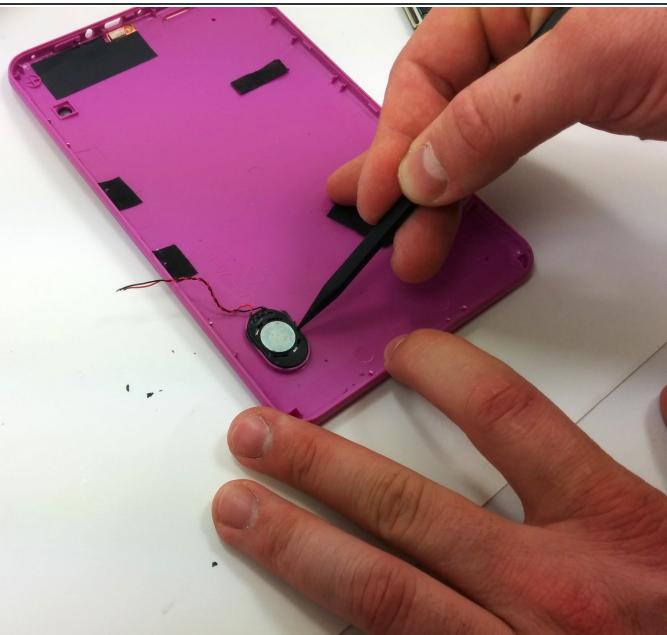

- Using a spudger, gently pry the speaker out of its plastic enclosure.

To reassemble your device, follow these instructions in reverse order.