



# RCA RT2806 Remote Batteries Replacement

How to replace the batteries in the remote.

Written By: Levi G





## PARTS:

- AAA Battery (1)

## Step 1 — Exterior



- Lay down your remote as shown

## Step 2 — Panel unlatching



- Pull back on the plastic tab with your fingernail

## Step 3 — Panel opening



- After pulling up, the panel will be unlatched
- Lift it

## Step 4 — Panel removal



- The panel is now free from the remote
- Remove it

This document was generated on 2020-04-06 07:58:00 AM (MST).

## Step 5 — Battery removal



- Depress on each battery, on the side which does NOT have a spring
- Once depressed, lift up and remove each battery.

To reassemble your device, follow these instructions in reverse order.