



# RCA Small Wonders Camcorder CC176 Battery Replacement

Step by step instructions describing how to change the battery component of an RCA Small Wonders Camcorder cc176

Written By: Allison Baudoin



This document was generated on 2019-09-22 05:04:22 AM (MST).

## INTRODUCTION

RCA Small Wonders Camcorder cc176

May 1993

## Step 1 — Battery



- Locate battery component along back end of the device.

## Step 2



- Holding battery device firmly between thumb and forefinger, apply pressure to the battery component, sliding the plastic to the left.
- Lift up to remove the battery component from the device, separating it from the camera device completely.

To reassemble your device, follow these instructions in reverse order.