




RCX 1.0 Batteries Replacement

How to remove and replace the batteries in any RCX (not just 1.0).


Written By: notexactly

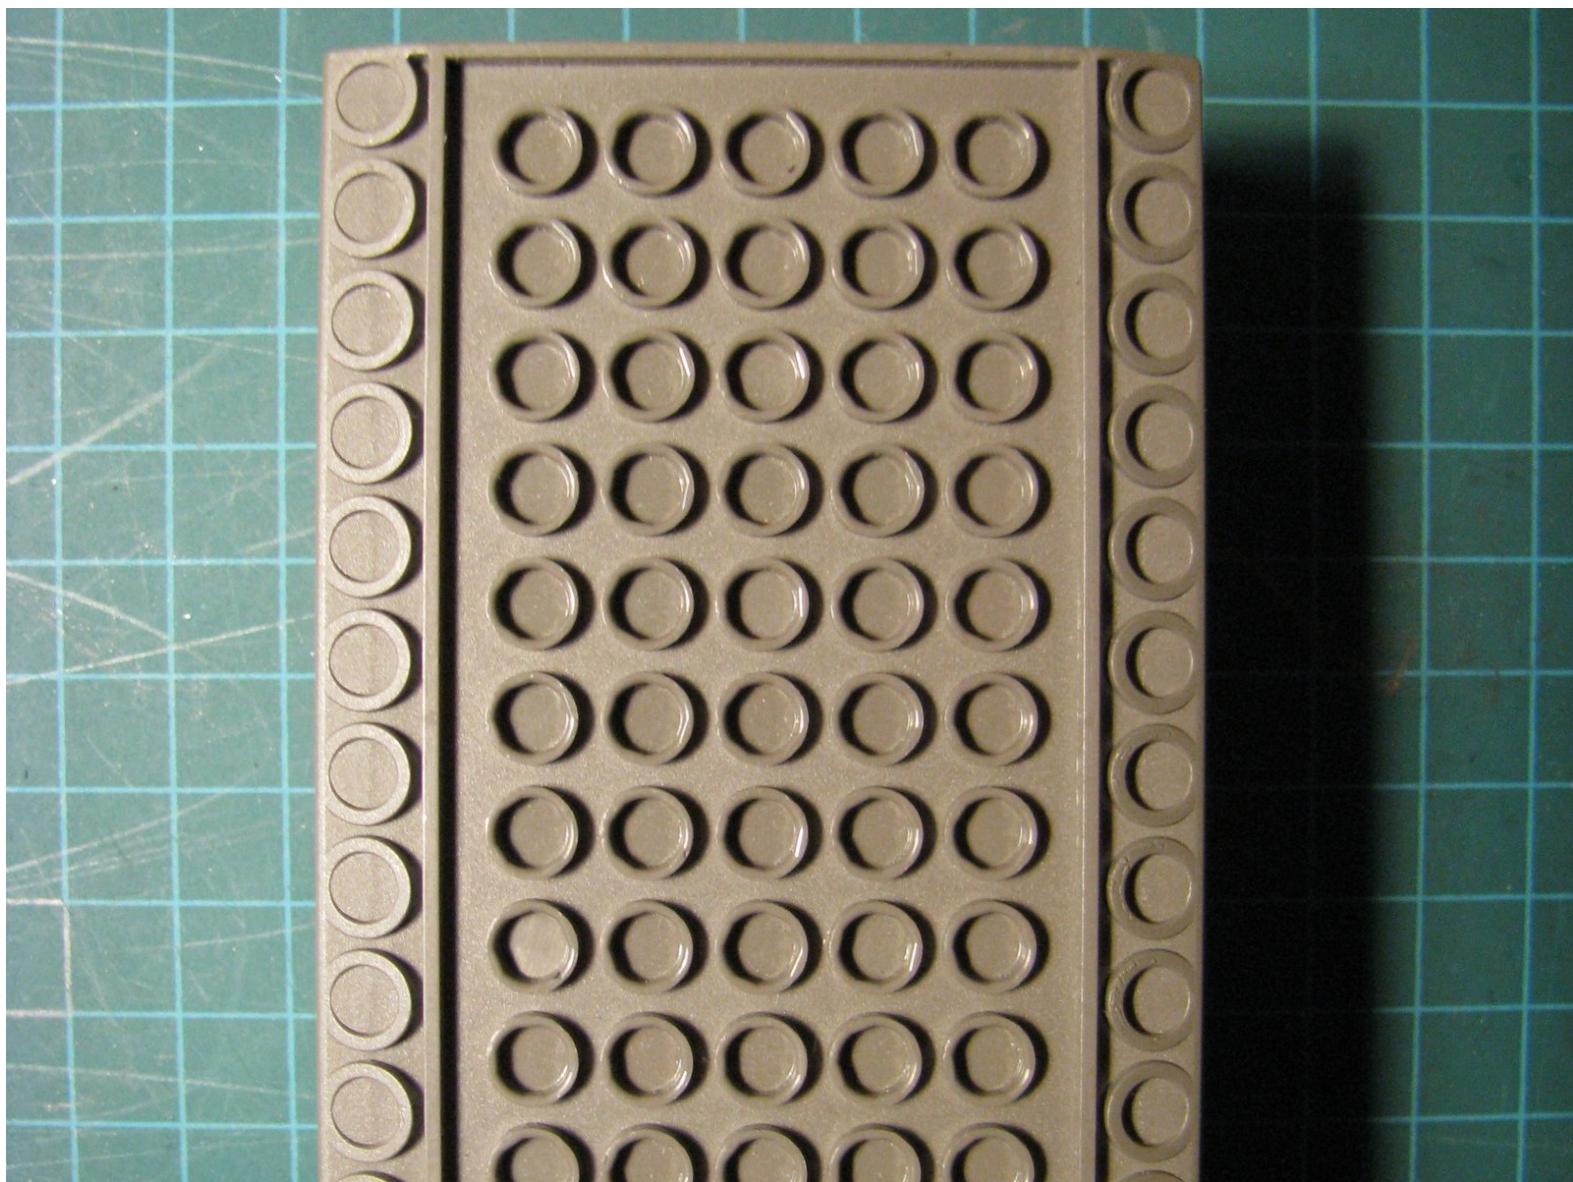

INTRODUCTION


When your RCX runs out of battery power, you'll need to put in new batteries.

Step 1 — Batteries

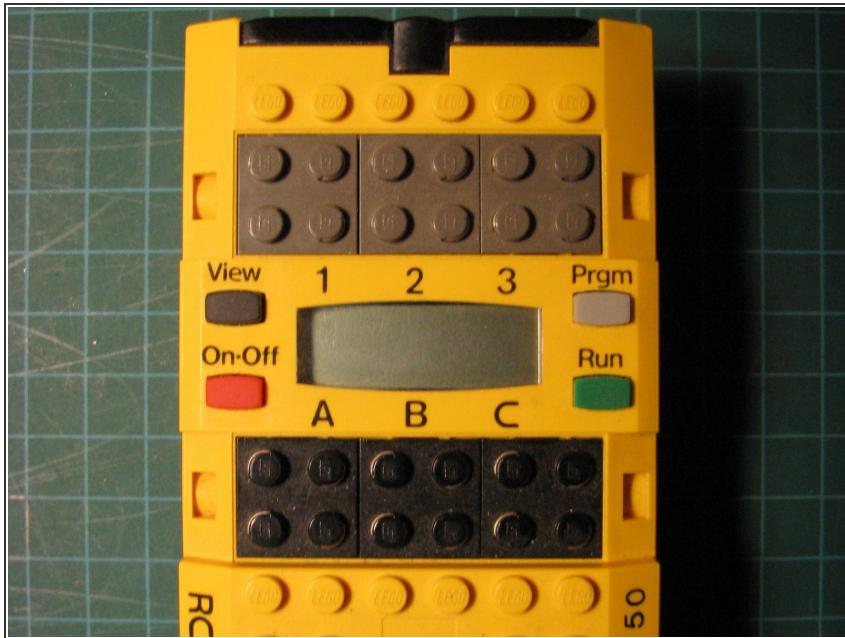


- Place the RCX on a flat surface.

Step 2

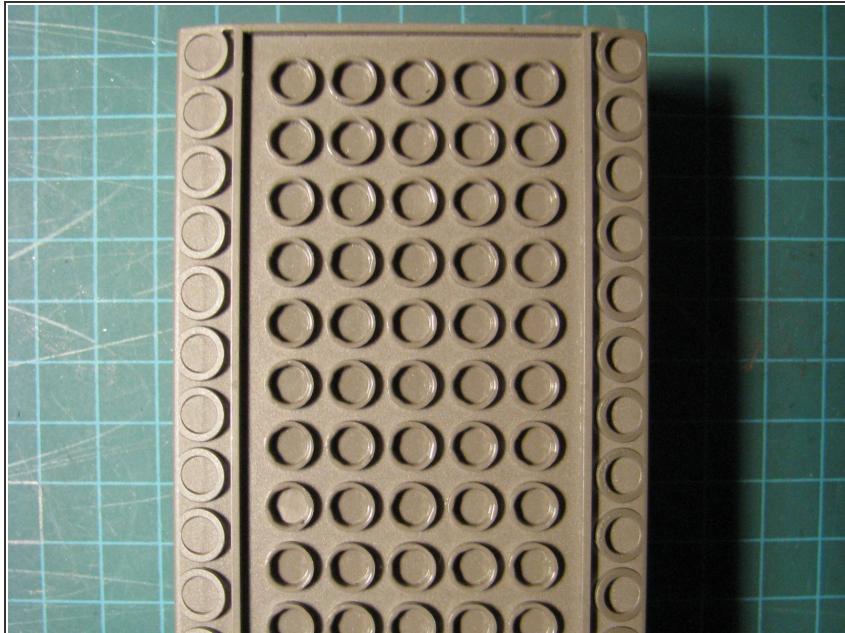

- Flip the RCX over so its black IR window is facing away from you.

Step 3

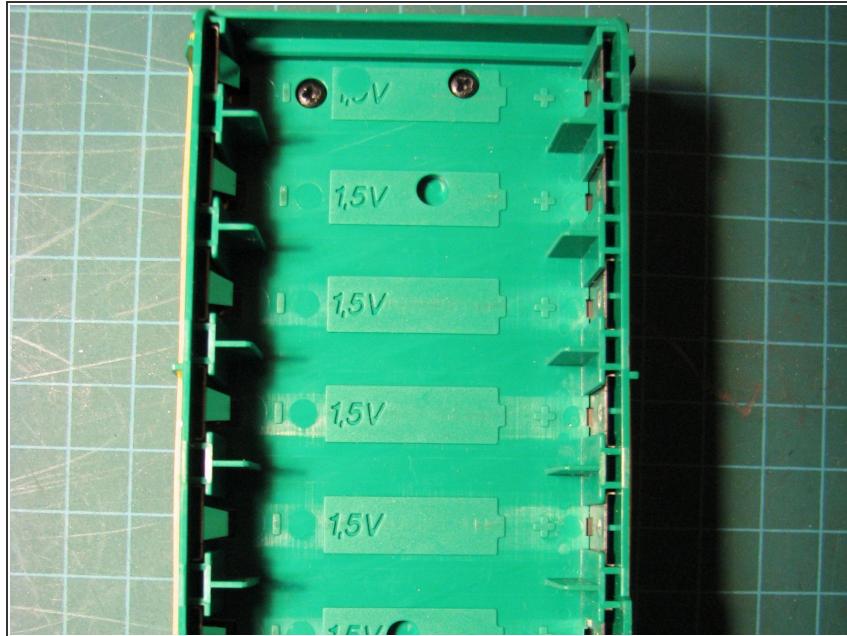

- Remove the gray battery cover by lifting from the front (near the IR window). Raise it at an angle and remove it to reveal the green battery compartment.
- You can now remove the batteries and insert new ones.

To reassemble your device, follow these instructions in reverse order. The orientation of the gray battery cover doesn't matter.