



RIDGID R2740 Motherboard Replacement

How to replace a RIDGID R2740 motherboard.

Written By: Trey Stevens



INTRODUCTION

This guide will outline the steps on how to access the RIDGID R2740 motherboard. Motherboard failure can occur due to dust, overheating, and a buildup in debris.

TOOLS:

- [TR10 Torx Security Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Motherboard



⚠️ Unplug your device before proceeding..

Step 2




- Orient the sander so the Air Guard logo is facing you.
- Remove the single Torx TR20 screw.

Step 3



- Orient the device with the left side face up.
- Using a Phillips #1 bit, unscrew the 3 screws which hold the internal casing in place.
- Gently remove the belt.
- Using the Torx TR10 bit, unscrew the 10 screws which hold the external casing in place.

Step 4

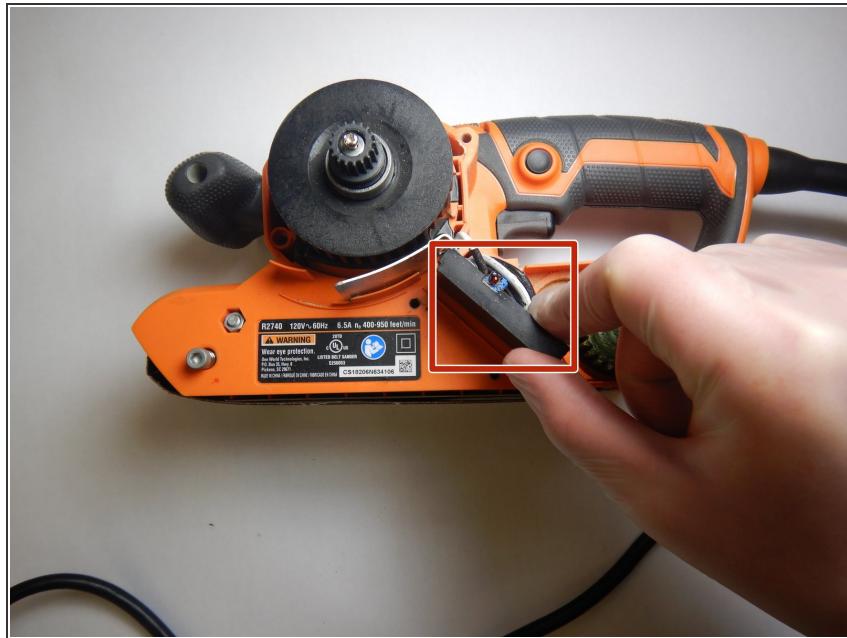

- Gently pull up on the motherboard chip set, pulling it directly from the device.

To reassemble your device, follow these instructions in reverse order.