



RYOBI AG454 Carbon Brush Replacement

Use this guide to replace the carbon brush in your Ryobi AG454.

Written By: Erica Faulkner



INTRODUCTION

If your angle grinder suddenly stops working a common problem is that your brushes are worn out. Carbon brushes wear overtime so they will need to be replaced every so often. This replacement guide explains how the brushes can malfunction and how you can fix certain issues.

TOOLS:

- Flathead 4 mm Screwdriver (1)

Step 1 — Carbon Brush



- Remove the brush caps from each side of the body using the 4 mm flat head screwdriver.

Step 2



- Remove the carbon brushes.

To reassemble your device, follow these instructions in reverse order.