



Rapoo 8200P Keyboard Large Keycap Replacement

Here is how to remove and replace the large keycap for the Rapoo 8200P keyboard.


Written By: Addison



INTRODUCTION

Keycaps can become sticky or damaged over time. Here is how to remove and replace large sized keycaps, like the space bar.

Step 1 — Keyboard Large Keycap

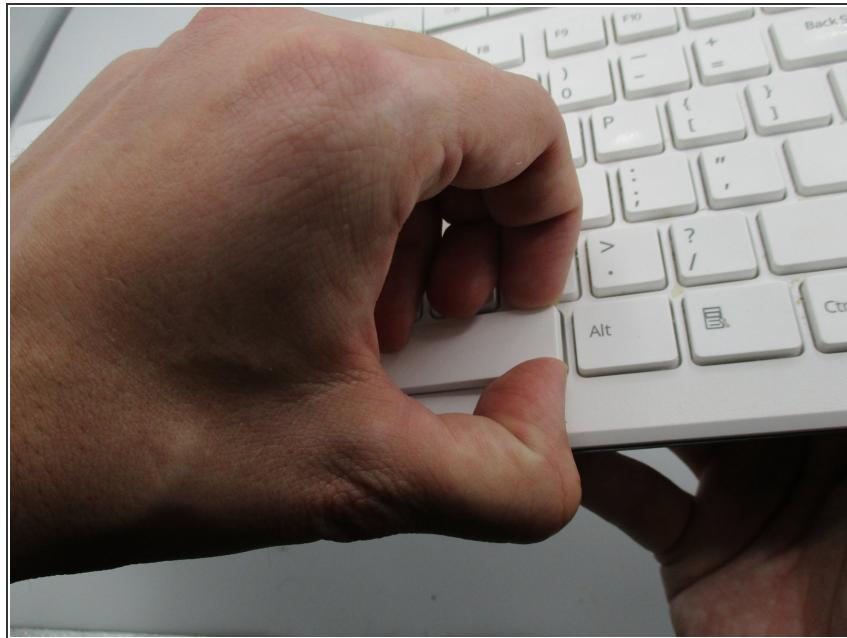

- Pull the large keycap back until it pops out

To reassemble your device, follow these instructions in reverse order.