



# Rapoo 8200P Keyboard Small Keycap Replacement

Here is how to replace the small keycap on the Rapoo 8200P keyboard.

Written By: Addison



## INTRODUCTION

Keycaps can become sticky or damaged over time. Here is how to remove and replace small sized keycaps.

### TOOLS:

- [Spudger \(1\)](#)

## Step 1 — Using a Spudger to remove the keycap



- Insert the flat end of the spudger under the keycap and gently press up until it pops off

To reassemble your device, follow these instructions in reverse order.