




Razer Blackwidow Tournament Edition Chroma Back Panel Replacement

This guide assists you in removing the back panel of the Razer Blackwidow Tournament Edition Chroma.

Written By: Advika Chesetti


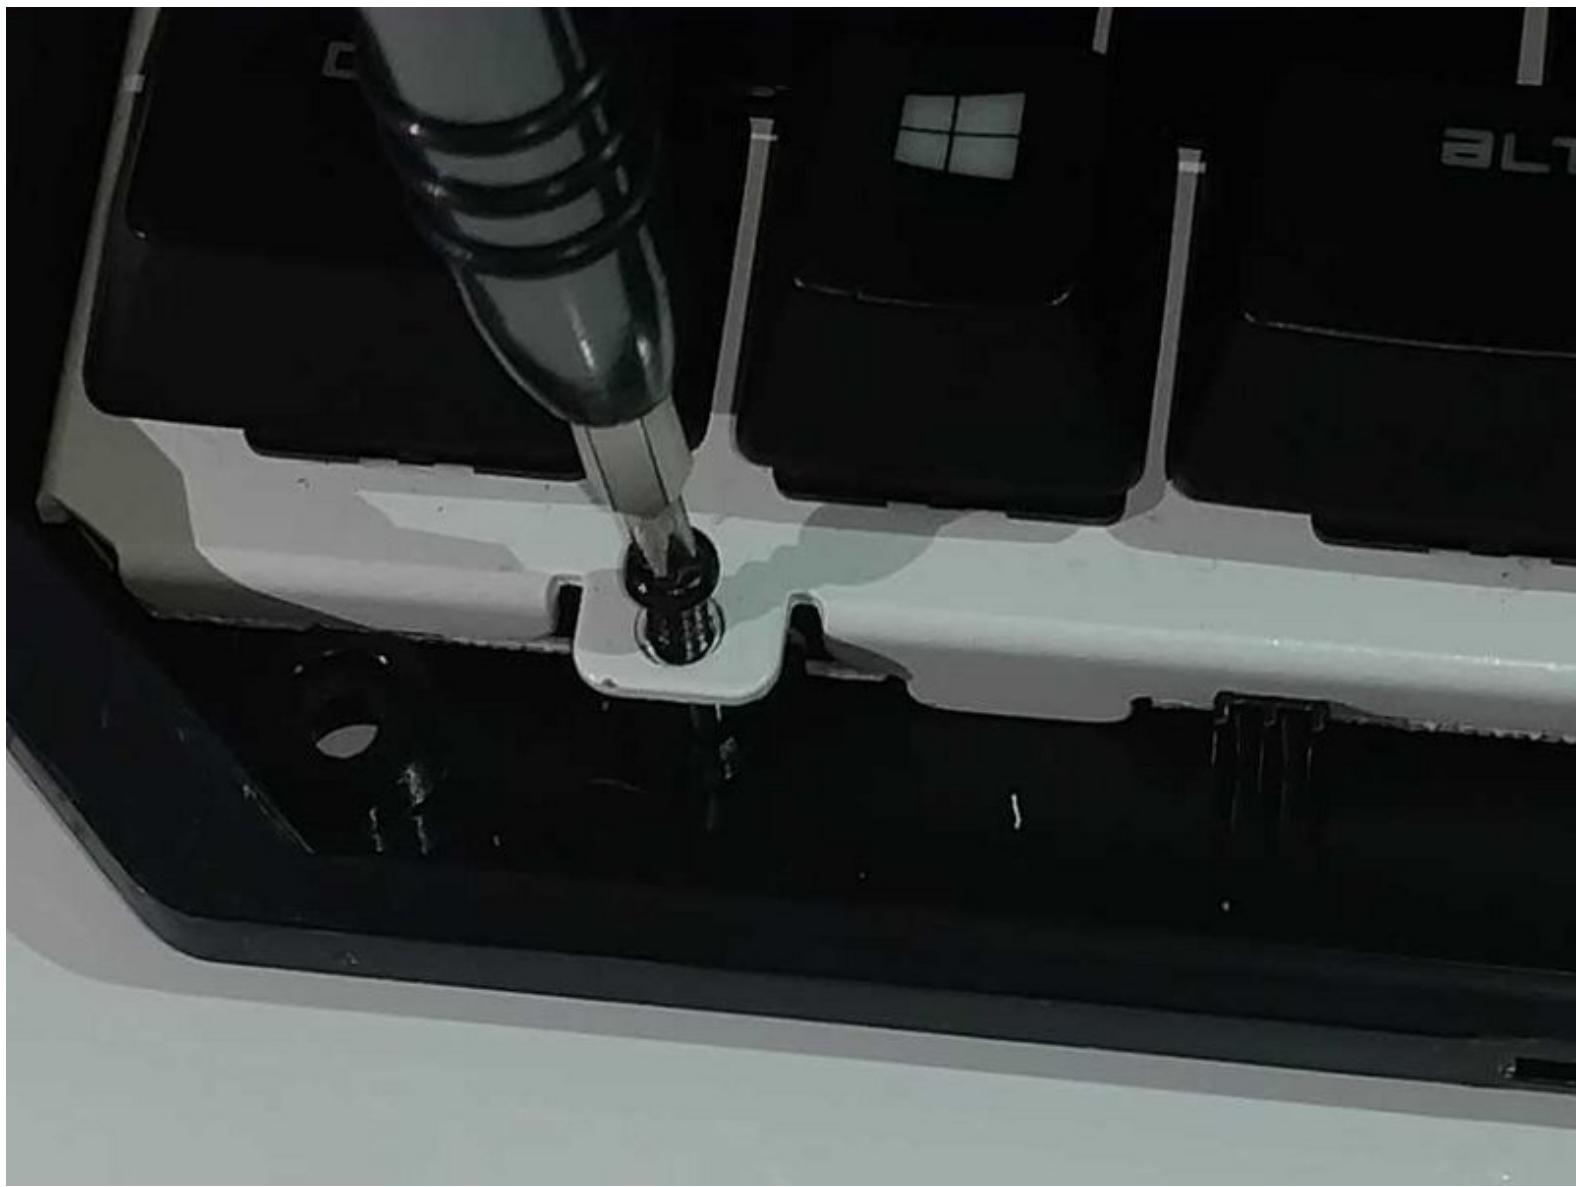


This document was generated on 2019-09-22 08:06:53 AM (MST).

 **TOOLS:**


- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Rubber Feet

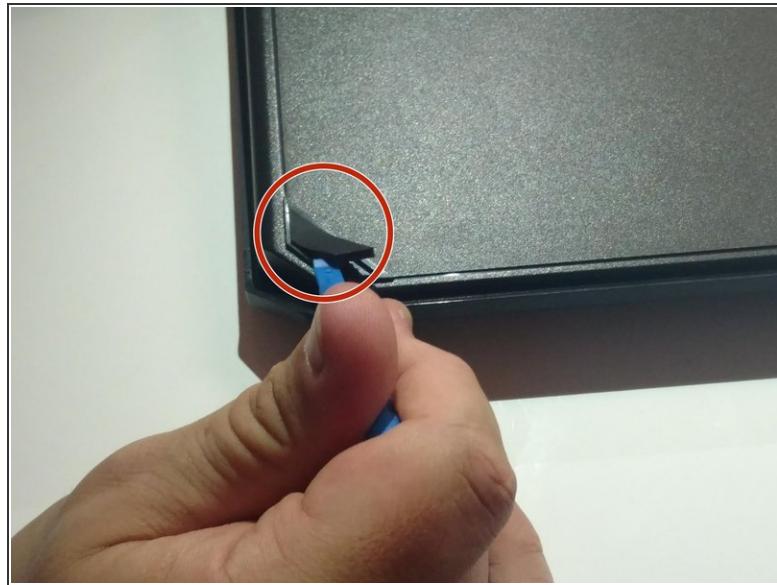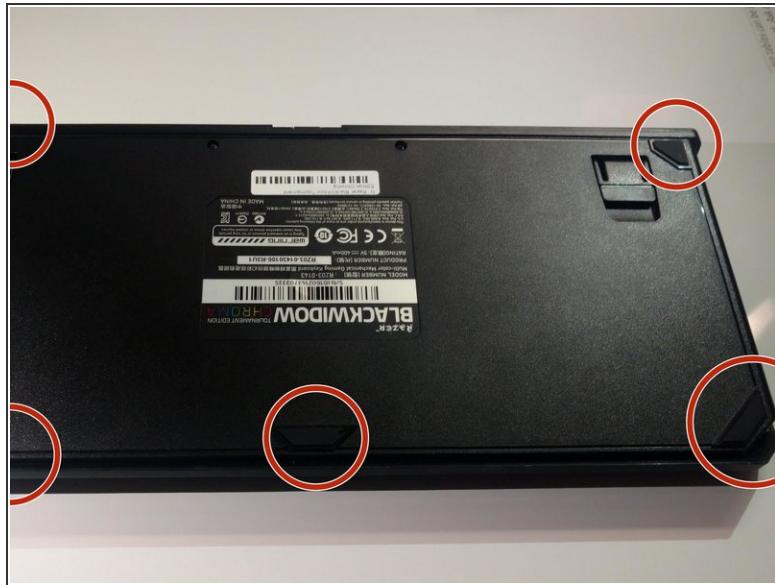


- Turn the keyboard over so that it is lying flat on its face.
- Use the iFixit opening tool to pry the rubber feet off the keyboard.

Step 2 — Front Panel

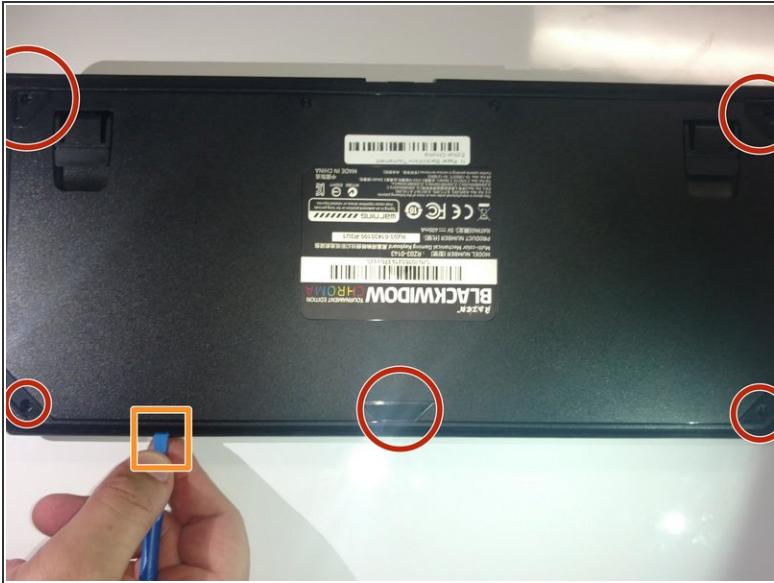

- Use a Phillips #1 screwdriver to remove the six screws on the back of the keyboard.
- Then use the iFixIt opening tool to pry off the front panel.
- Place the keyboard over so the keys are facing up.
- Lift both ends of the keyboard up removing the front panel.

Step 3 — Back Panel

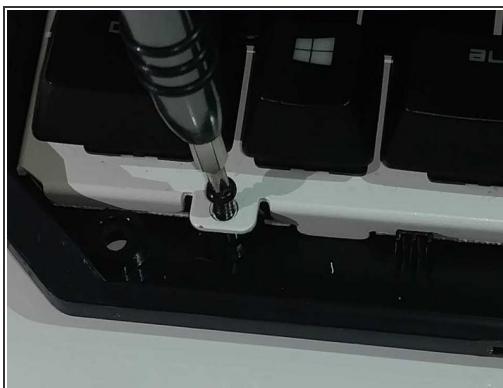

- Use a Philips #1 Screwdriver to remove the four screws located below the keys.
- Lift the main circuit board and flip it over, placing it on its top.

⚠️ Be cautious of the wire connected to the USB Port Board.

Step 4



- Use a Philips #1 Screwdriver to remove the two screws located on the bottom of the USB Port Board.
- Lift the USB Port Board and place it to the side.

To reassemble your device, follow these instructions in reverse order.