



Razer Blade RZ09-0102 Speakers Replacement

In this guide you will learn how to replace a broken speaker in your laptop.

Written By: Kristopher Yoder



INTRODUCTION

The main reason you would want to replace the speakers in your laptop would be that they are faulty and not producing sound. Another might be that you just want to upgrade to a better speaker. The speakers in this device are located on the outer left and right sides of the motherboard. The speakers dimensions are 1 x 1.75.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Rear Panel



- Using a Torx T5 screwdriver, remove the ten 1/8 inch screws.

Step 2 — Speakers




- Using a Phillips #0 screwdriver, remove the two screws holding down the speaker.

Step 3



- Disconnect the wire by pinching with your fingers and pulling up.

Step 4

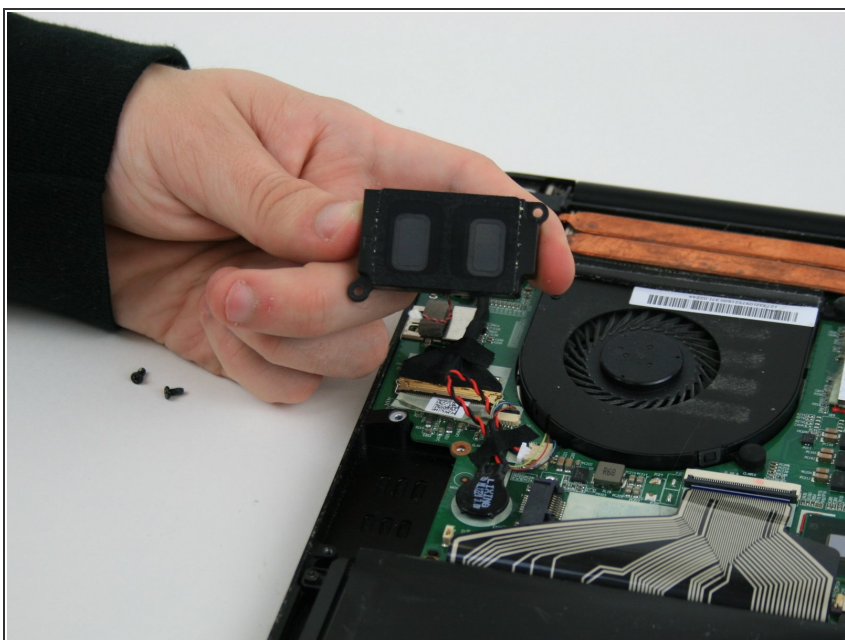

- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.