


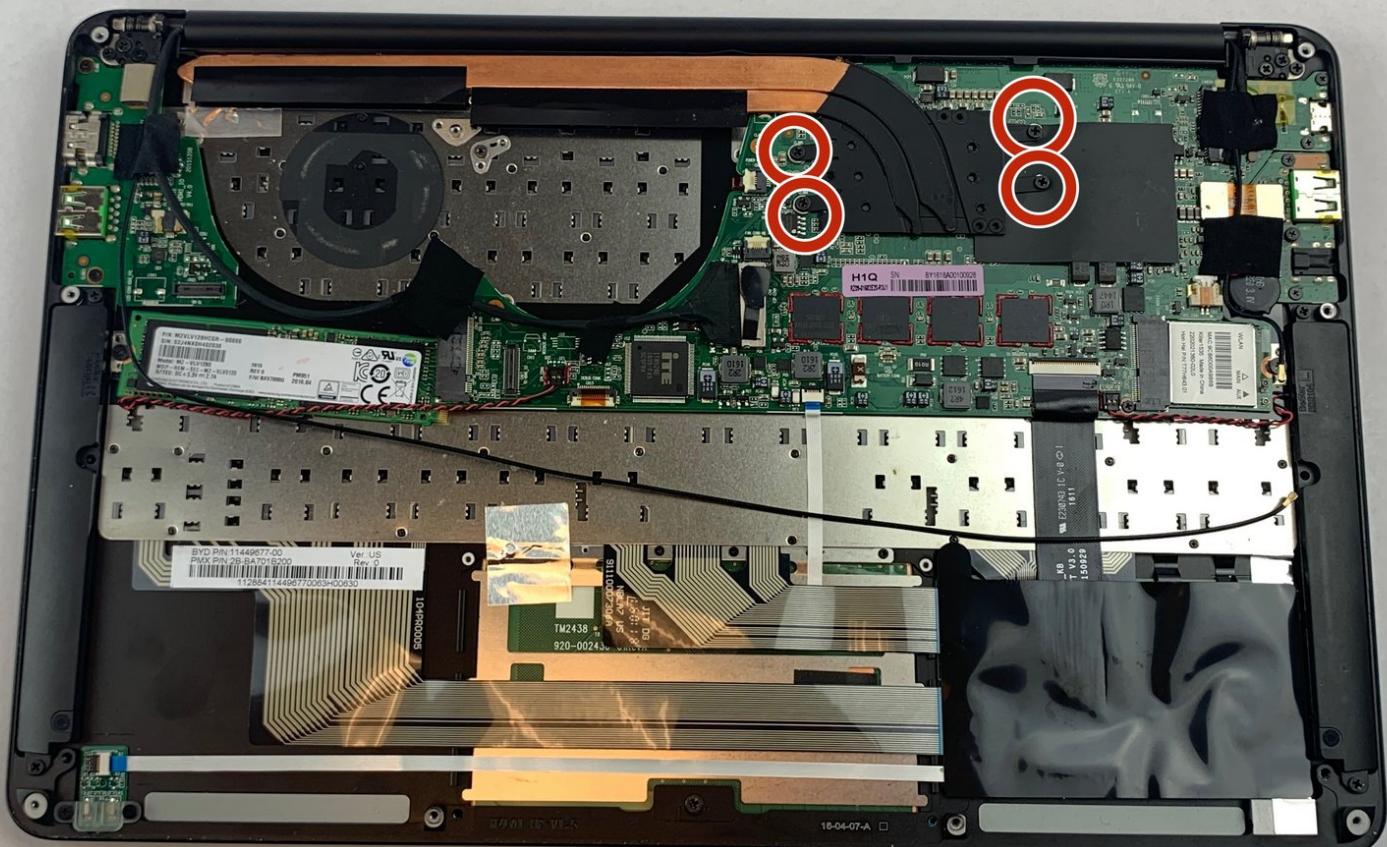

Razer Blade Stealth 2016 Heat Sink Replacement

This guide is created to help users replace the heat sink of the Razer Blade Stealth (2016).

Written By: Lindsay Grant



INTRODUCTION

Follow this guide if you want to replace the heat sink of the Razer Blade Stealth (2016).

TOOLS:


- [T4 Torx Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- Use a Torx 4 screwdriver to remove the eight 3.04 mm screws on the back case and remove the rear cover by prying up lightly starting in one of the corners.

Step 2

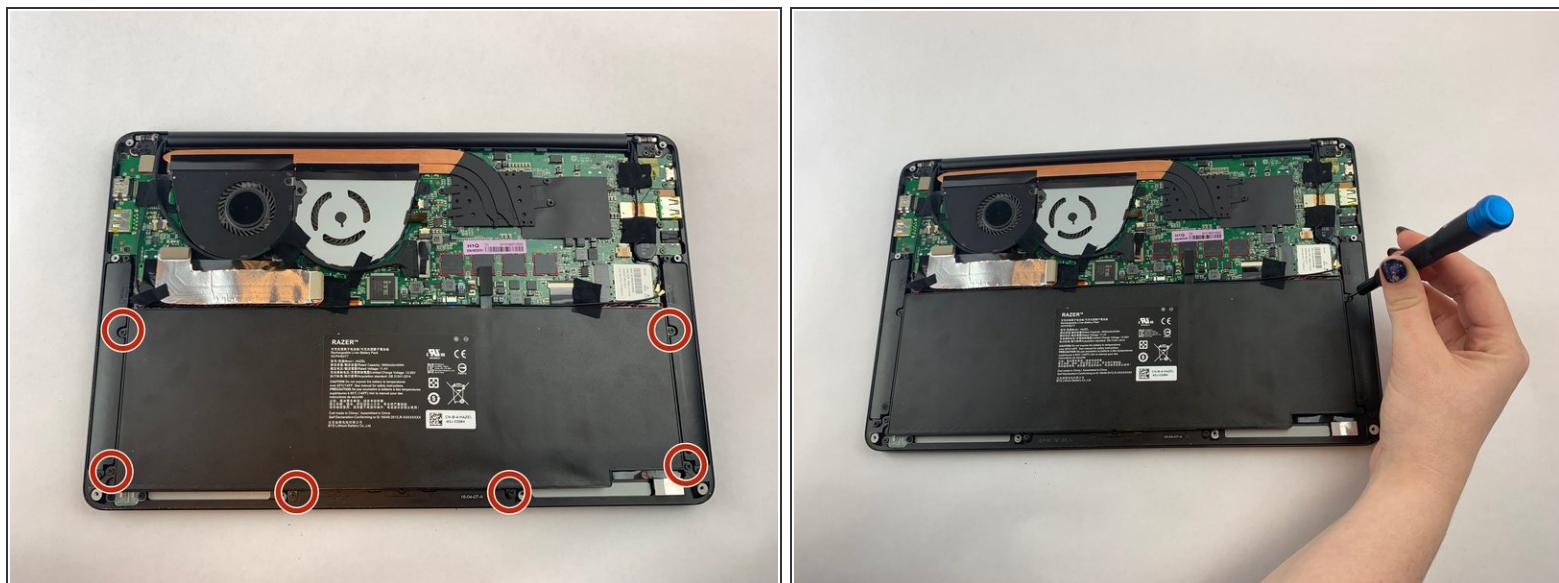



- Remove the battery carefully by removing the six screws using the T4 Torx screwdriver.

Step 3

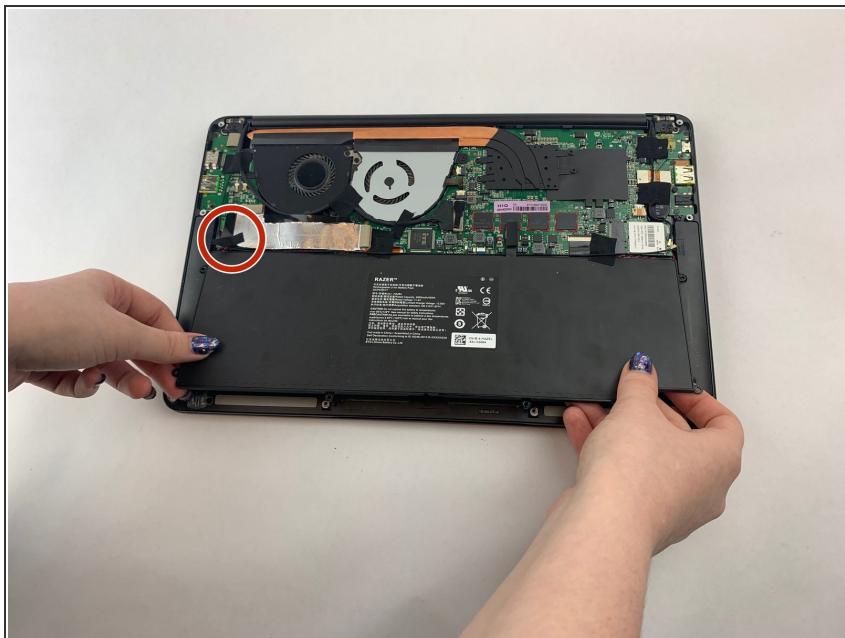


- Unplug and remove battery from the device.

Step 4 — Fans

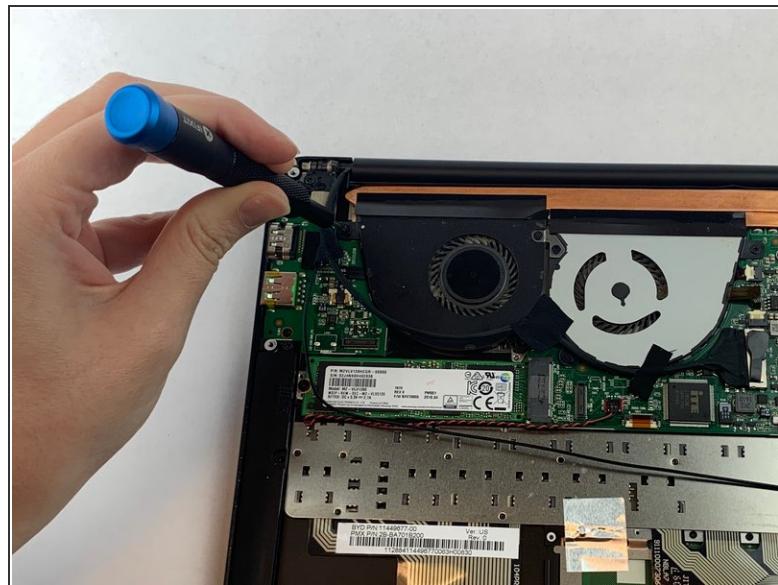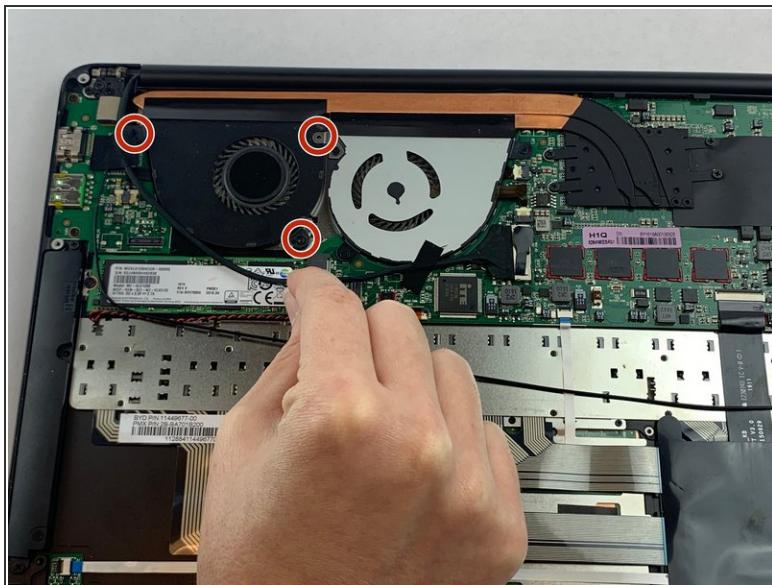


- Remove the three 3.38 mm screws from the left fan (this fan should be black).

Step 5

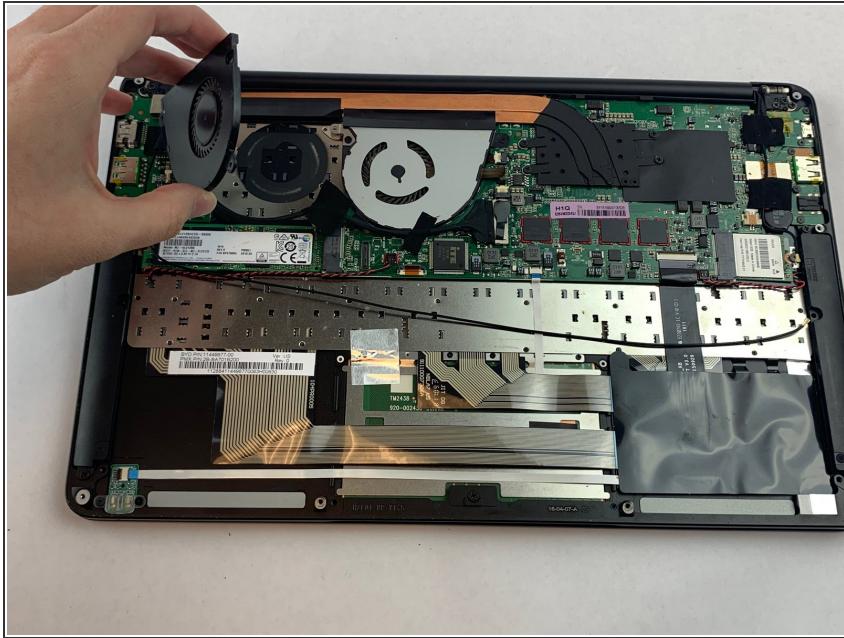


- Carefully lift and remove the left fan.

Step 6

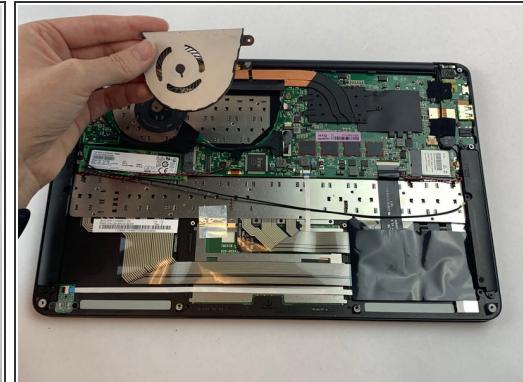


- Repeat steps five and six to remove the silver, right fan.

Step 7 — Heat Sink

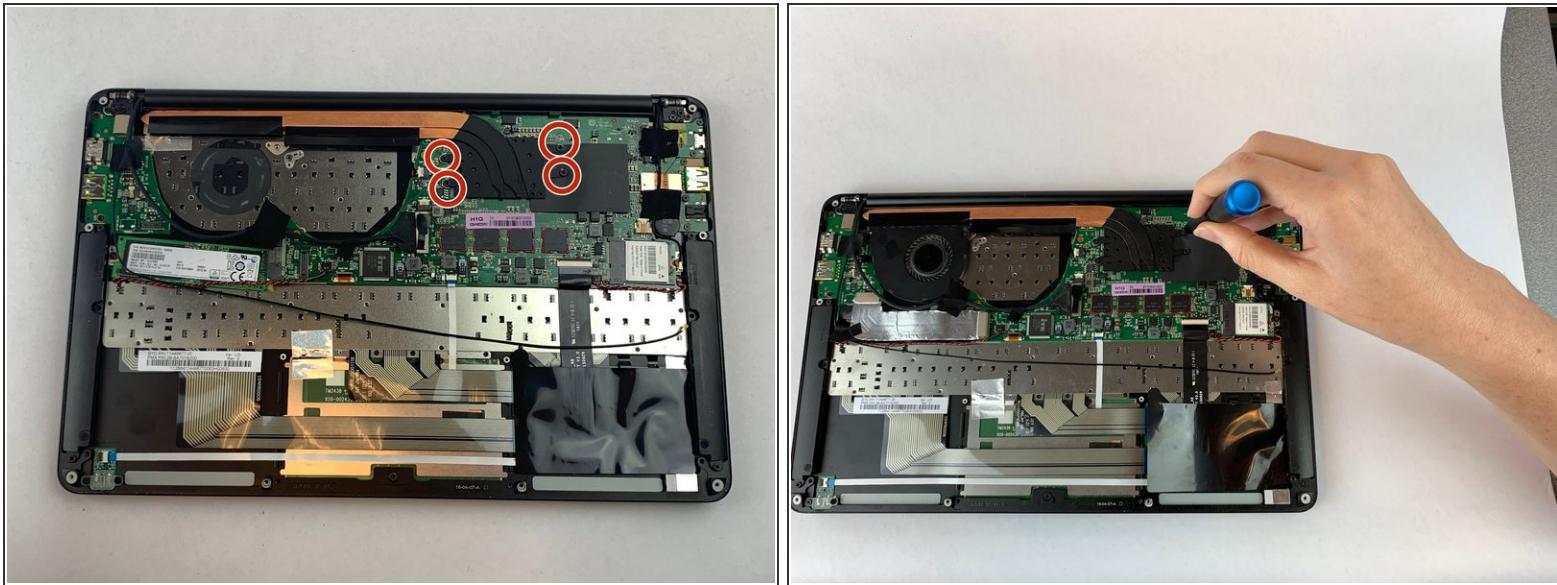

- Remove the four 3.38 mm screws around the black square using a Phillips #00 screwdriver.

Step 8

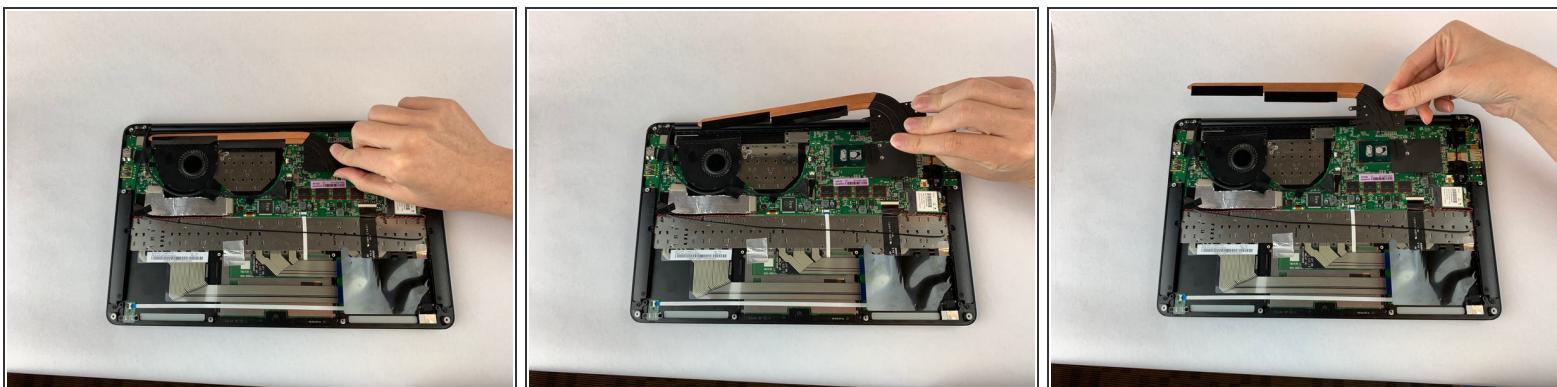

- Once the screws are removed, the piece can be gently lifted from the back of the device.

To reassemble your device, follow these instructions in reverse order.