



Reconnecting Screen to Logic Board Guide

This guide will show you how to reconnect the display screen on your device in case the screen will not turn on.

Written By: Nick Sherman



INTRODUCTION

This guide will lead you through the steps necessary to access the screen's components as well as how to assure it is properly connected.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Screen



- Flip the device over

Step 2



- Unscrew the 2 screws closest to the screen

Step 3




- Flip the device back over
- *i* It is now standing right side up

Step 4




- Unscrew the top.

Step 5

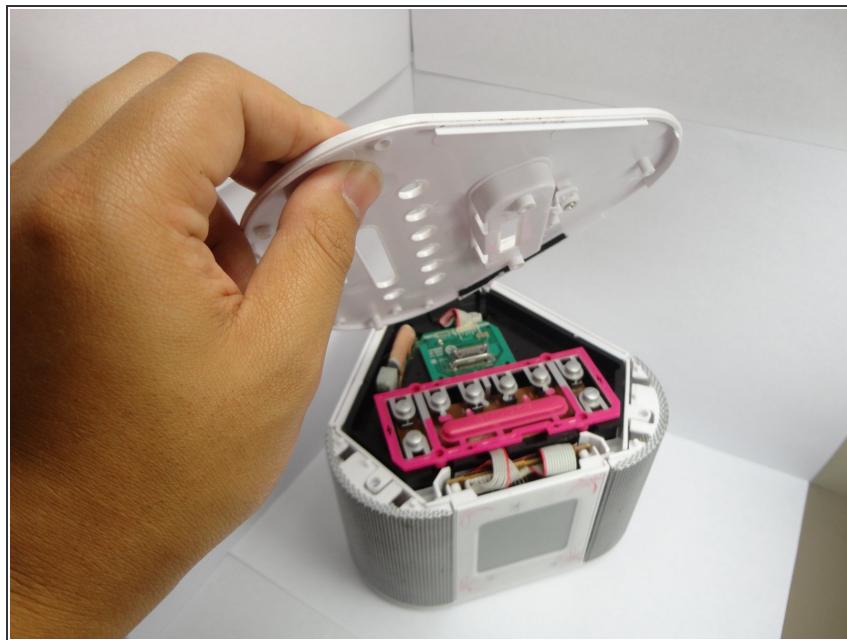


- Take the top of the device off.

Step 6

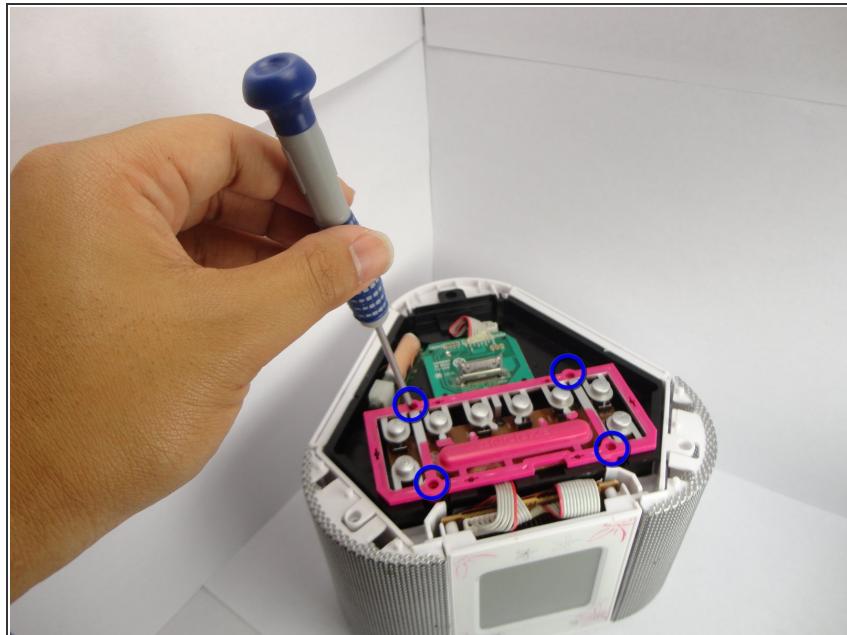


- Unscrew the button board.

Step 7

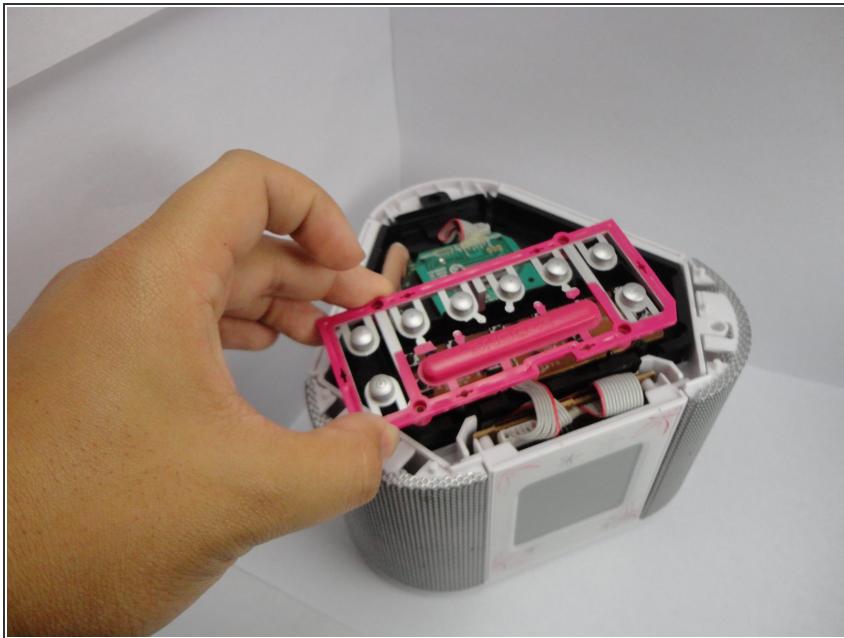


- Take off the button board.

Step 8

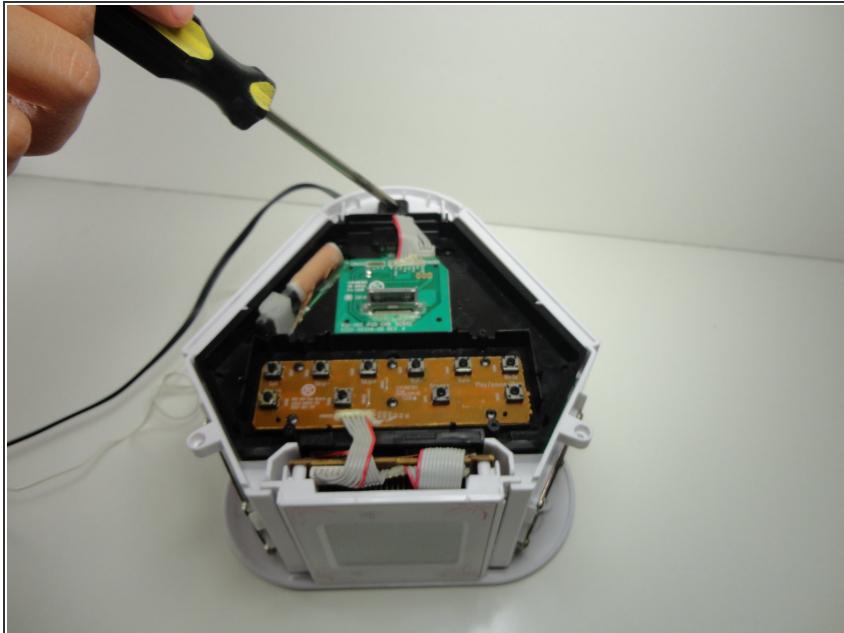


- Unscrew all visible screws on the black logic board cover.

Step 9

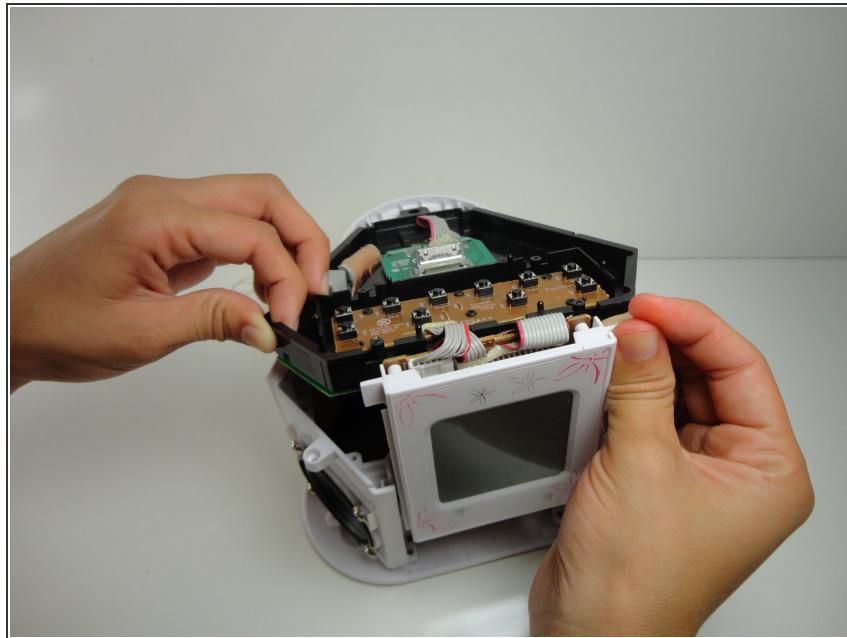

- Lift the screen straight up out of the device.

Step 10

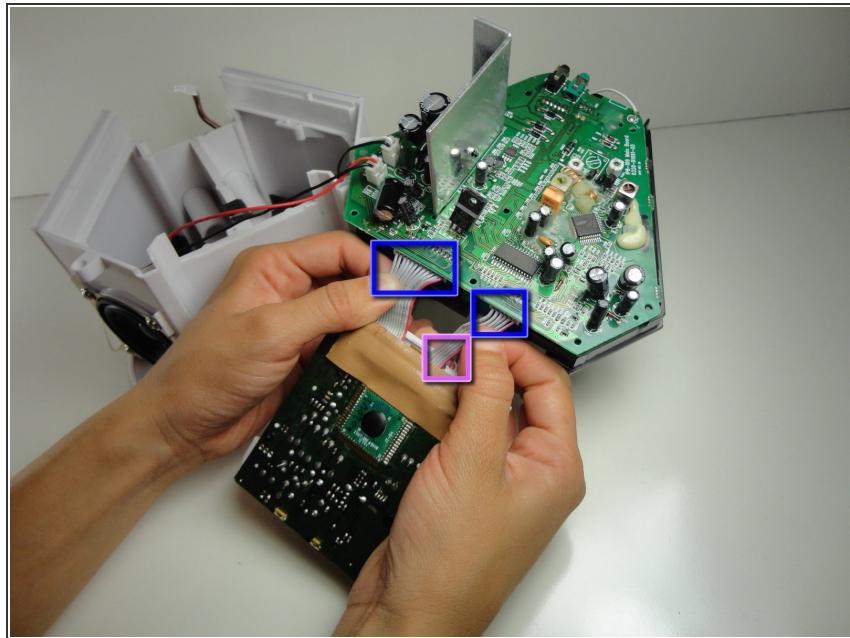

- Check that the single input plug from the logic board to the screen (reverse side) is completely pushed in by pressing it firmly into the socket.
- Also check that the 2 output plugs from the screen to the logic board are completely pushed in by pressing them firmly into the highlighted sockets.

(i) You have successfully reconnected your display screen.

To reassemble your device, follow these instructions in reverse order.