



Remove Trash Lid to stop ripping bags

Owners said about 30x that the bags ripped when caught on the black plastic inner lip. Take out the black liner top lip.

Written By: Paul Tast



INTRODUCTION

Also, many people loved this can's form factor, but the bags ripped and the lid stopped working.

I fixed the lid from not working by opening it up, discovering the wires are tiny and low quality. The problem was detached soldering. And then I re-soldered it.

Step 1 — Here it is out.



- Just take it out. No more ripped trash bags.

To reassemble your device, follow these instructions in reverse order.