


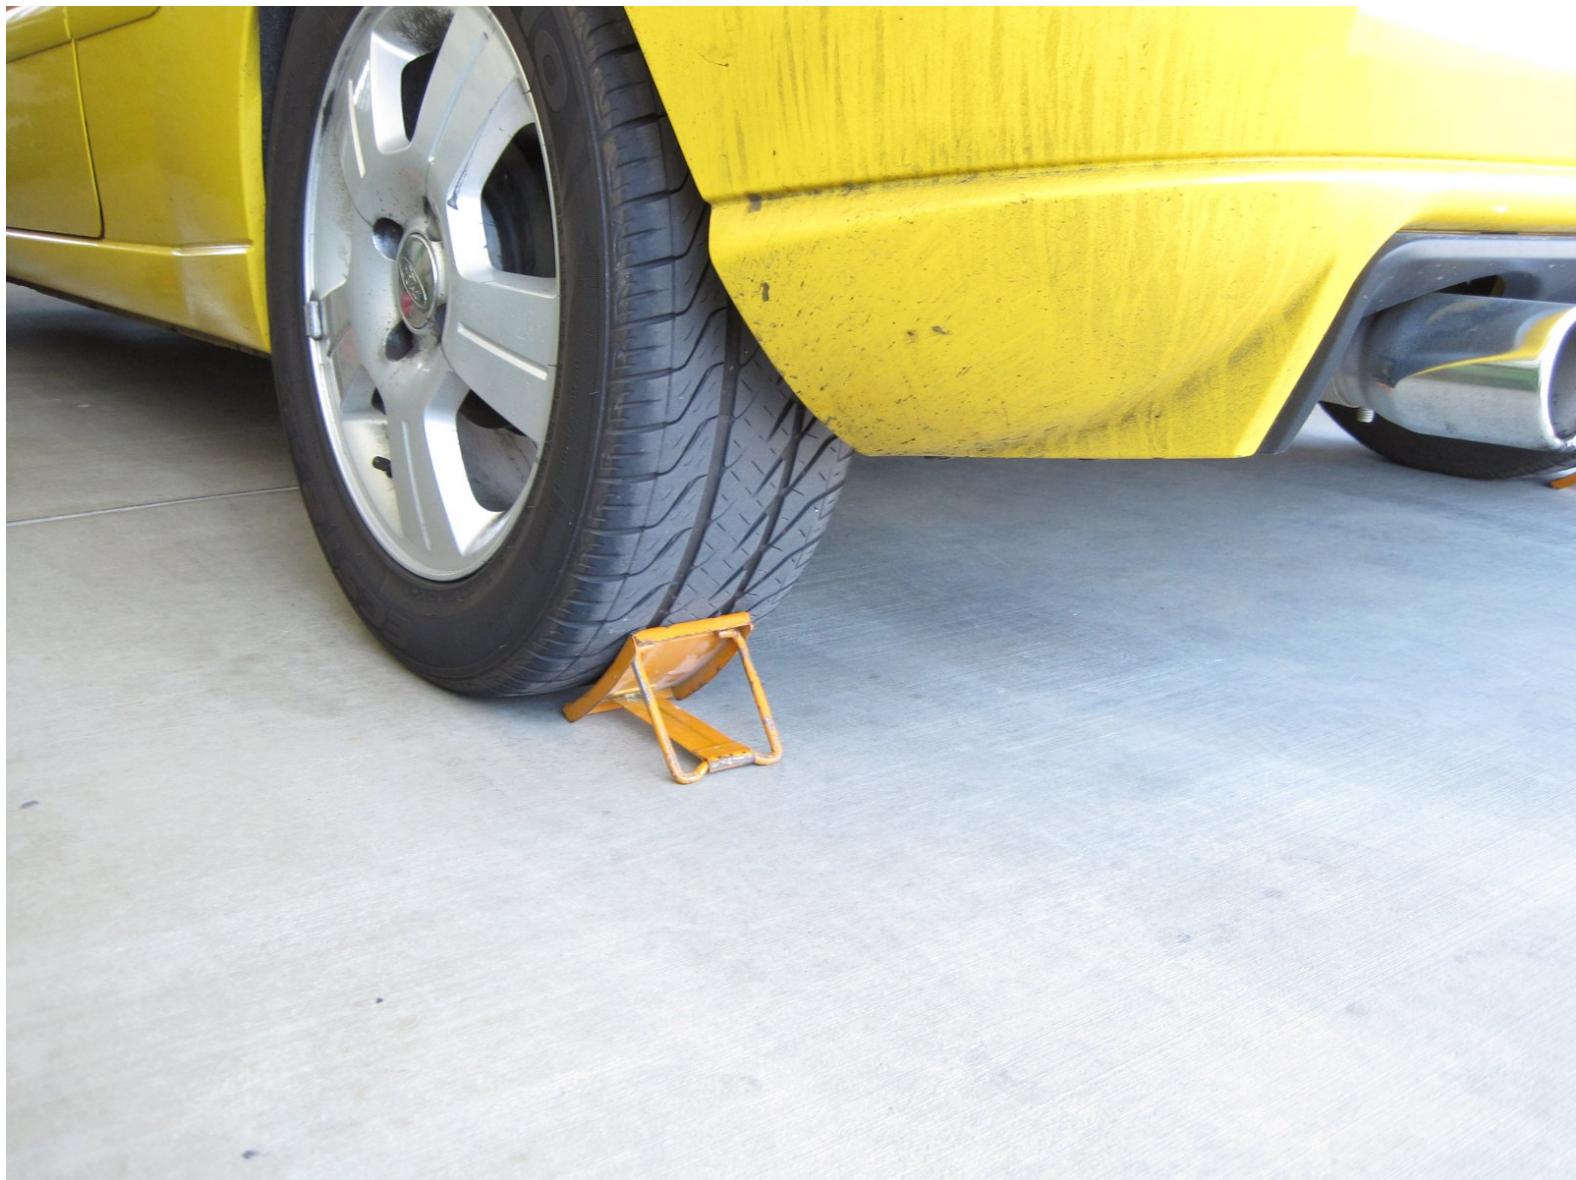

# Removing 2005-2007 Ford Focus Front Wheel

Changing the front wheel or simply removing it for repairs and maintenance.

Written By: David Hodson



## INTRODUCTION


Removing the wheels from a car is a very common step when performing repairs. Wheels are removed to access brake, suspension, and steering components. The wheel may also need to be removed in the event of a damaged tire or wheel, or when performing a tire rotation.

The following guide was created with an SES model Focus. Different factory and aftermarket wheels may have additional steps to access the wheel lug nuts, but the steps are essentially the same.

## TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Lug Wrench](#) (1)
- [Wheel Chocks](#) (1)

## Step 1 — Front Wheel

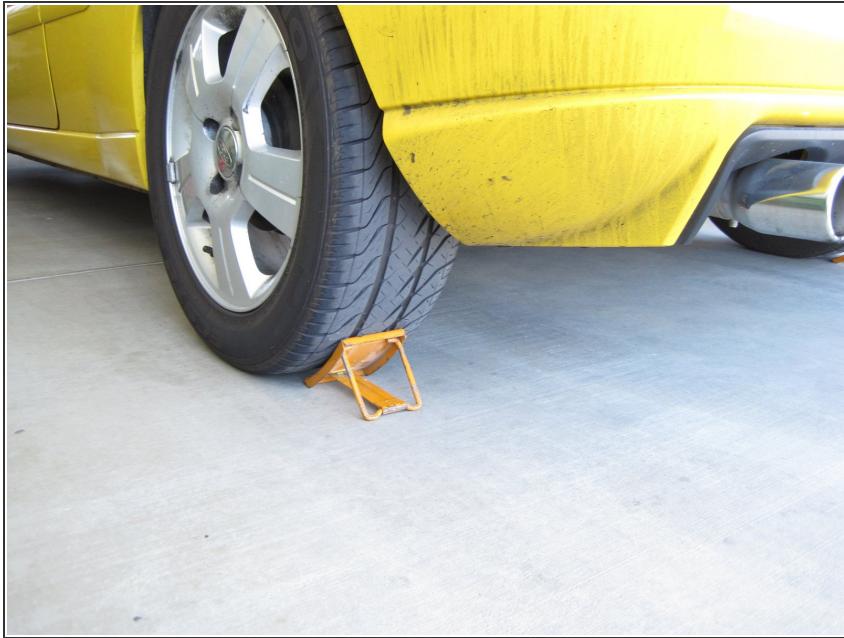

- Put the car in park (automatic) or neutral (manual).
- Apply the parking brake.
- Place chocks behind the rear wheels.

## Step 2



- Use a 19 mm lug wrench to loosen each lug nut a half turn.

## Step 3



- Use a hydraulic jack on the car's frame to jack the car.
- A small notch shows where to place the jack.
- It is only necessary to jack the car until the wheel no longer touches the ground.

## Step 4



- Place a jack stand on the frame and remove the jack.

**⚠** Never work on or underneath a car that is only supported by a jack. The car may fall, causing serious injury, or even death.

## Step 5



- Use a lug wrench to completely remove the four lug nuts.
- Remove the wheel.