



# Removing Casio CTK-501 Bottom Panel

Written By: Jimmy Winne



 **TOOLS:**

- Phillips #2 Screwdriver (1)

## Step 1 — Bottom Panel



- Flip the keyboard upside down so the bottom is angled towards you.

## Step 2



- Use a #2 Phillips screwdriver to remove the twenty-seven 12 mm screws from the dark gray bottom panel.

## Step 3



- Remove the bottom panel by lifting the bottom panel up and outward from yourself.

## Step 4



! Flip the entire keyboard so the keys face up, and be careful not to let the bottom drop.

- Flip the top half of the keyboard and set onto the bottom half with the internal parts facing up.

To reassemble your device, follow these instructions in reverse order.