




Removing LG VX8350 Screen Assembly

This guide is for the removal of screen assembly

Written By: James Brandon

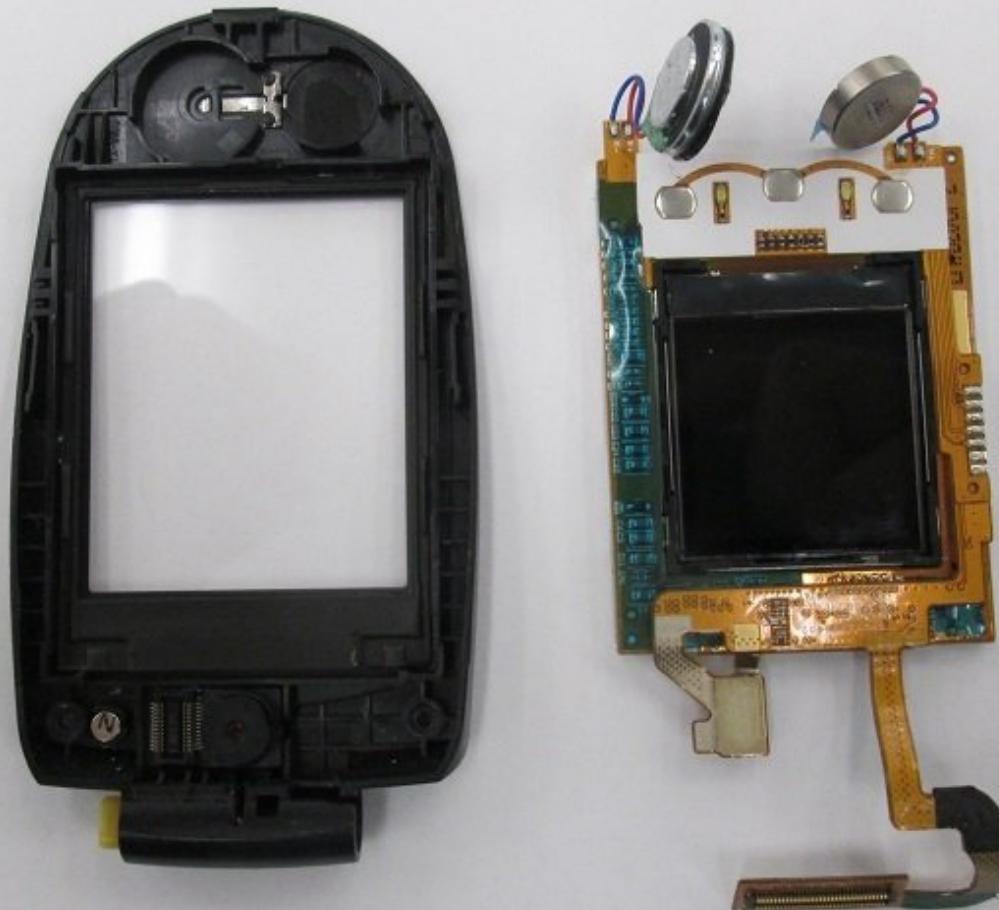

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Battery



- Locate the horizontal grip located on the back cover of the phone.
- Slide the back cover down and off of the phone.

Step 2



- Insert a plastic opening tool into the battery release point located above the battery.
- Pull outwards in order to release the battery.

Step 3 — Circuit Board Housing




- Locate the 5 screws holding the body of the phone together.
- The top screw will have a plastic cover, remove it using tweezers.
- Using a Philips head screwdriver, twist counterclockwise to remove the screws.
- Take special care with the screw located at the top of the phone. It is smaller and more likely to be damaged or improperly attached.

Step 4




- Lift the back cover starting at the bottom of the phone.

Step 5

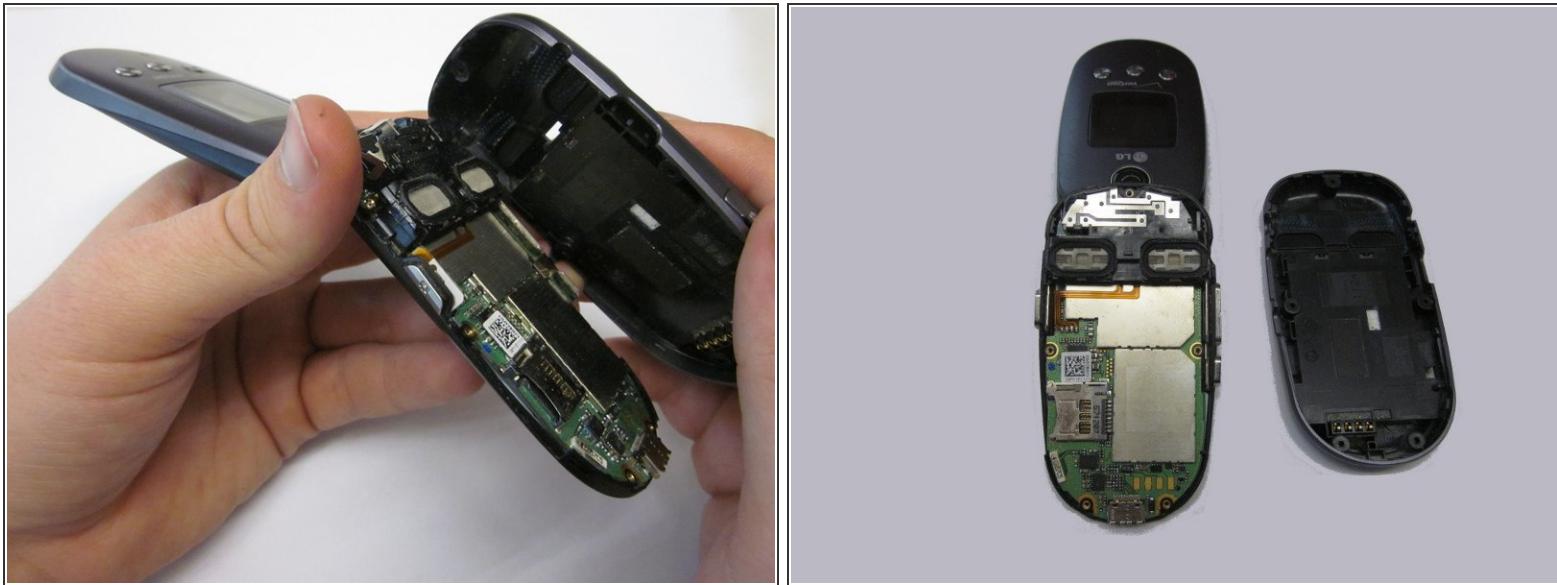


- Remove the back cover completely from the phone.

Step 6 — Circuit Board

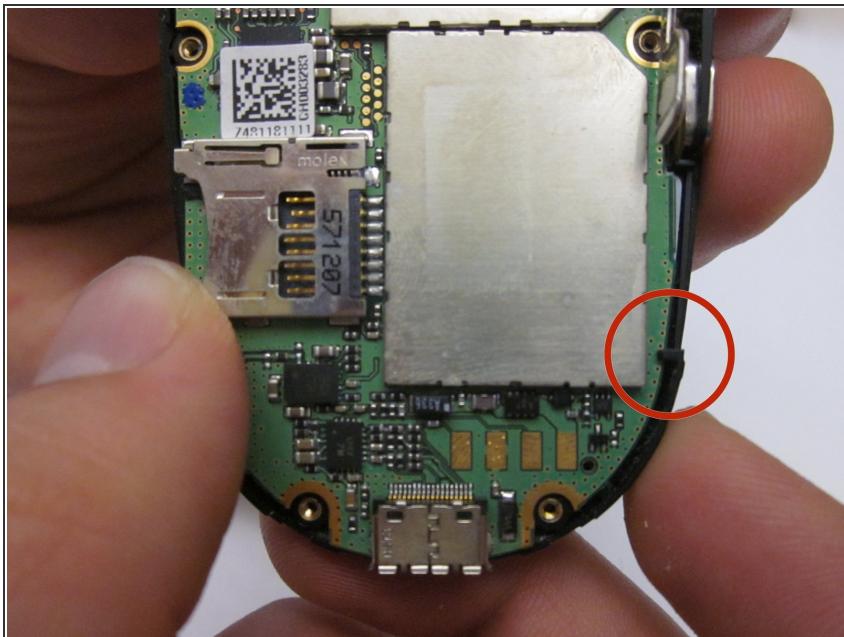


- Locate the clamp at bottom right side of the Circuit Board.
- Pull the circuit board from the phone being cautious to pull out underneath the clamp.

Step 7

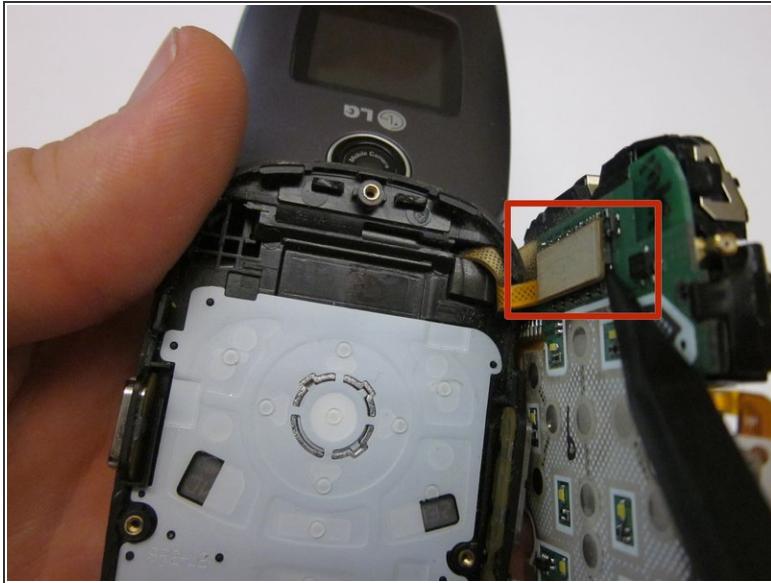

- Locate the ribbon connecting the circuit board to the phone display.
- Using the spudger, disconnect the ribbon connecting the phone's display and the circuit board.
- Remove the circuit board


Step 8 — Keypad

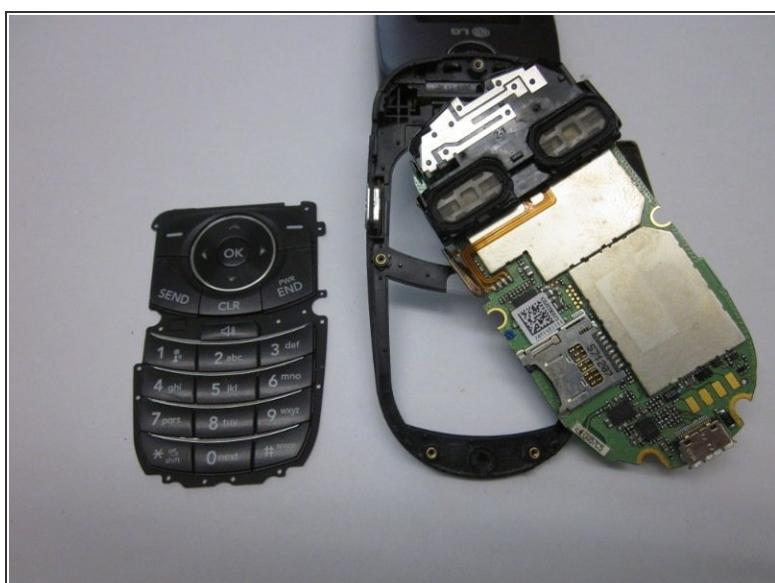

- Lift the keyboard and remove it from the phone.

This document was generated on 2019-09-29 02:13:17 PM (MST).

Step 9 — Screen Cover

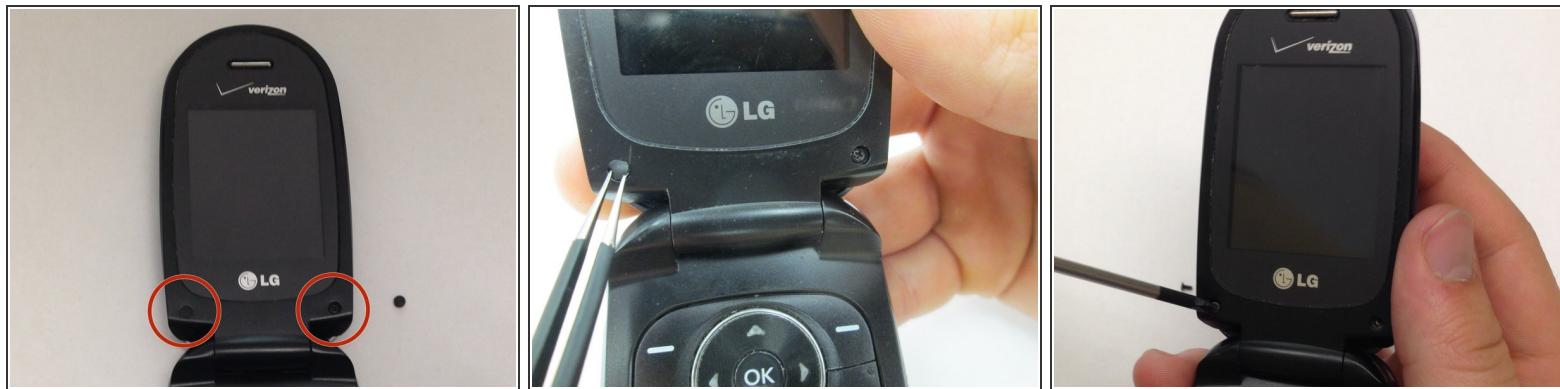

- Locate the two rubber circles covering the screws.
- Remove the rubber covers using tweezers.
- Using the Phillips head screwdriver, unscrew and remove the two screws.

Step 10



- Close the phone and gently pull outwards from the bottom left portion of the phone cover.
- Take care not to do this with too much force, as it could crack the cover.
- Completely remove the cover from the phone.

Step 11 — Screen Assembly





- Locate the front music buttons.
- Remove the music control buttons on the face of the phone.

Step 12



- While grasping the top and bottom sections torque the pieces until the indicated hinge has popped out. The two sections of the phone are now able to separate.
- ⚠ Make sure the right side of the hinge is removed first and not the left as you will likely damage the ribbon connection.

Step 13

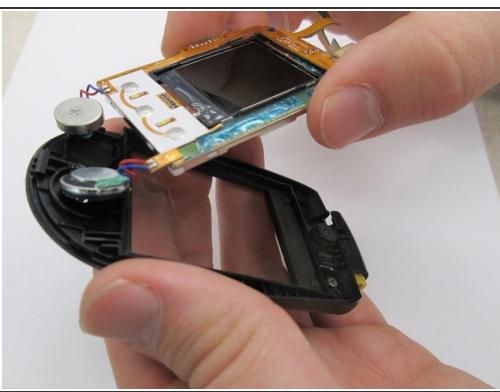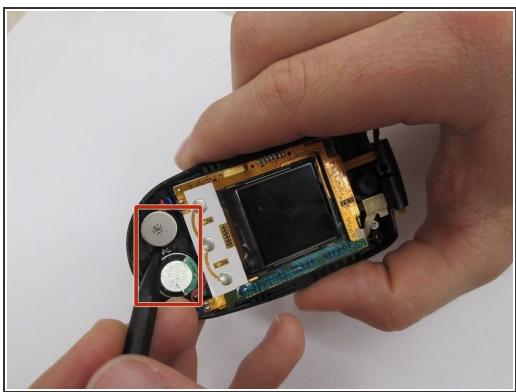

- Locate the two speakers. Using a spudger disconnect the speakers from the assembly.
- Lift the screen assembly from the casing.

ⓘ The screen assembly is completely removed to allow for easier access to the speaker connections when performing further repairs on the speakers.

To reassemble your device, follow these instructions in reverse order.