



Removing Minolta X-370 Film Winding Lever

Sometimes the film winding lever can become jammed or stuck. This guide will fix these issues.

Written By: Nick



ISO (DIN · ASA)	24°	200
12° · 12	27°	400
15° · 25	30°	800
18° · 50	33°	1600
21° · 100	36°	3200
	39°	6400

MINOLTA CAMERA CO., LTD.

INTRODUCTION

This is a very simple task, only requiring a screwdriver.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Film Winding Lever



- Lift up the winding lever and rotate it clockwise to open the back film compartment.

Step 2

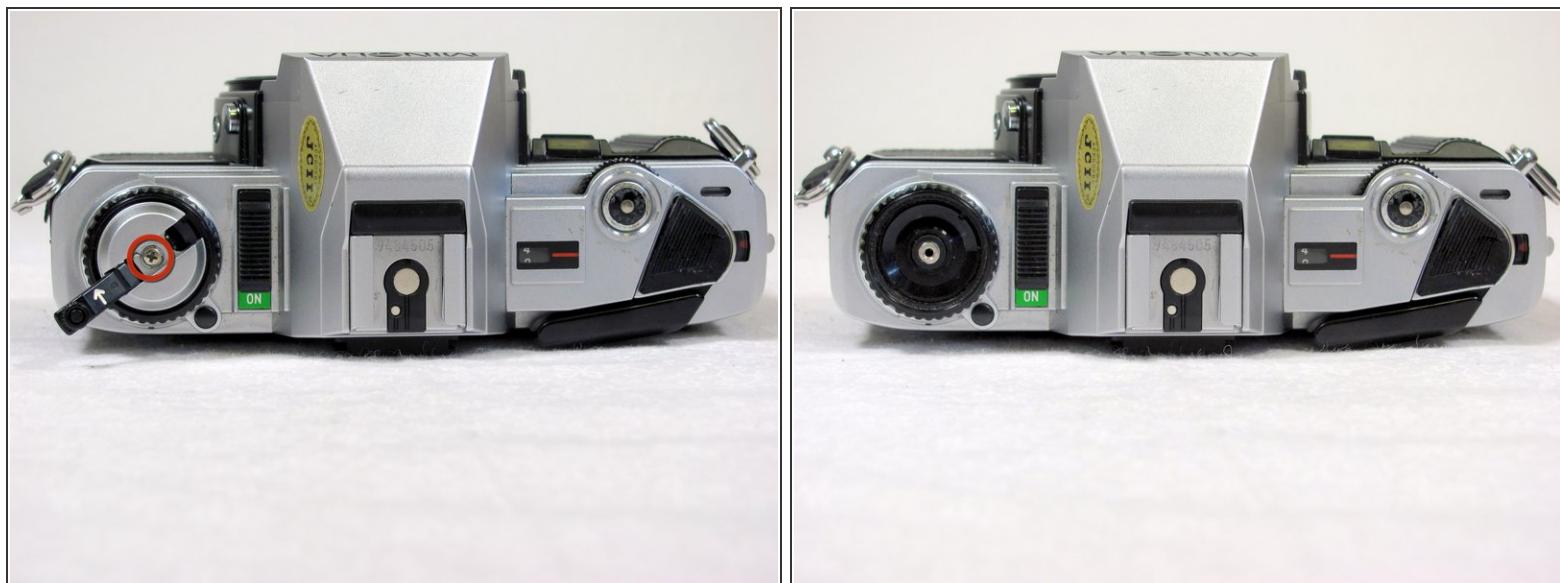

- Lift up the winding handle and remove one 3.85mm screw.
- Remove the film winding handle.

Step 3



- Pull the film winder down until it comes free.

⚠ Do not close the film compartment. The compartment will not open without the film winding lever installed properly.

To reassemble your device, follow these instructions in reverse order.