



# Removing Nishiki Aero II Front Wheel

This guide shows how to remove the front wheel of a Nishiki Aero II Road Bike.

Written By: Tobias Elder



 **TOOLS:**

- Smart Wrench (1)  
14mm

## Step 1 — Removing Road Bike Front Wheel



- Turn bike upside down as shown

## Step 2



- Use a wrench to loosen the nut holding the wheel's axle on one side.
- Once it's loose enough, continue removing the nut with your hand.
- After removing the nut, also remove the washer under it.
- Note how the washer has a small appendage that locks into a slot in the fork.

## Step 3



- Do the same for the nut on the other side.

## Step 4



- Now simply lift the wheel up and out of the fork.

To reassemble your device, follow these instructions in reverse order.