



Removing and Replacing Canon Optura 100MC Battery

This guide instructs users on how to remove the battery on the Optura if it needs charging or replacing.

Written By: Avery Reger



This document was generated on 2019-09-22 01:24:39 PM (MST).

INTRODUCTION

Use this guide to learn how to remove and replace the battery.

Step 1 — Battery



- Orient the camera so that the back button panel and viewfinder are facing you.
- Push the "Battery Release" button to the side and hold.

Step 2



- While holding the battery release button to the side, slide the battery towards you, past the release button.

To put the battery back in, line up the edges and gently push it back into place until it clicks.