



Removing the Back Panel

Prerequisite Only. This step will be necessary to complete before you access any of the inside components.

Written By: James Bailey




INTRODUCTION

This guide will help you safely access the inside of your Lenovo A8 without fear of damaging any of the components or the exterior.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Removing the Back Panel


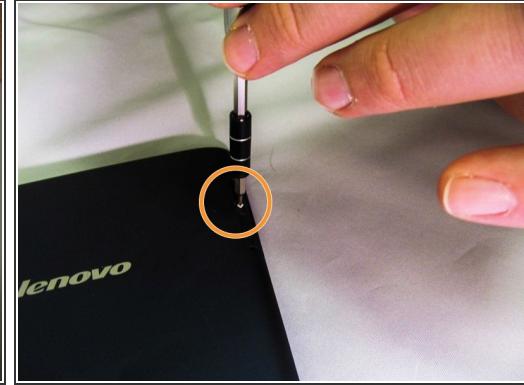


- Place the tablet face down on a soft, stable surface that will protect the screen.
- Next, Scrape off the seal over the screw in the back of the tablet with a Metal Spudger.
- Use the Phillips #000 Screwdriver to remove the M1.4 x 2.5 screw.

(i) If the seal covering the screw has already been removed, please proceed to the next step in the process.

(i) As the screw is small, you may wish to extract it using a pair of tweezers.

Step 2

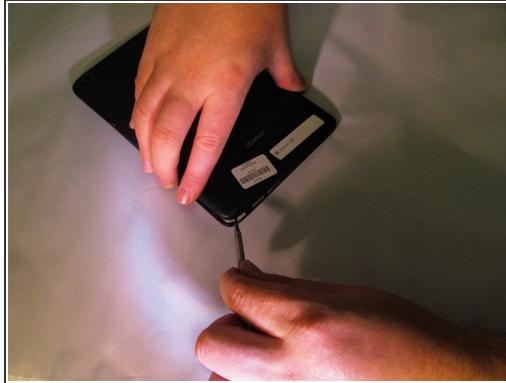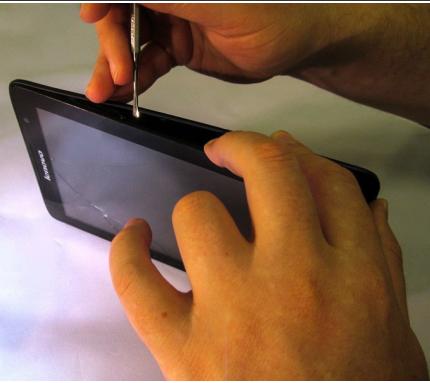

- Starting on the side, work your way around the the tablet to pop off the back cover. You will want to utilize a metal Spudger for this.

(i) Some force may be required initially to pry the back cover off.

(i) Note that the button tabs for this device are loose inside the case and will fall out when opening.

To reassemble your device, follow these instructions in reverse order.