



Removing the Dell Inspiron 1150 Display Assembly

The purpose of this guide is to demonstrate how to remove the display assembly

Written By: Daniel




INTRODUCTION

This guide is inspired by the Dell 1150 Service Manual and all steps are in accordance with it.

TOOLS:


- **Phillips #1 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Removing Dell Inspiron 1150 Battery

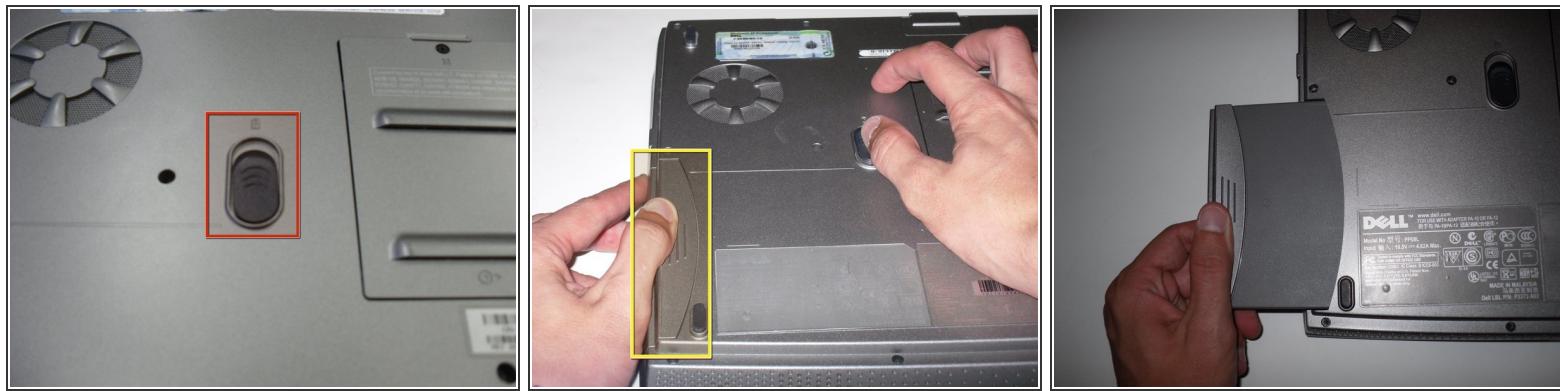

- Place the laptop upside down on a clean, flat surface.
- Locate the battery release button with the padlock symbol above it.
- Slide the battery release button towards the padlock symbol and hold it there. Note that the button is spring loaded and will return if released.
 - *i* The battery is now released from the battery compartment.
- Gently remove the battery from the side of the laptop.

Step 2 — Hard Drive

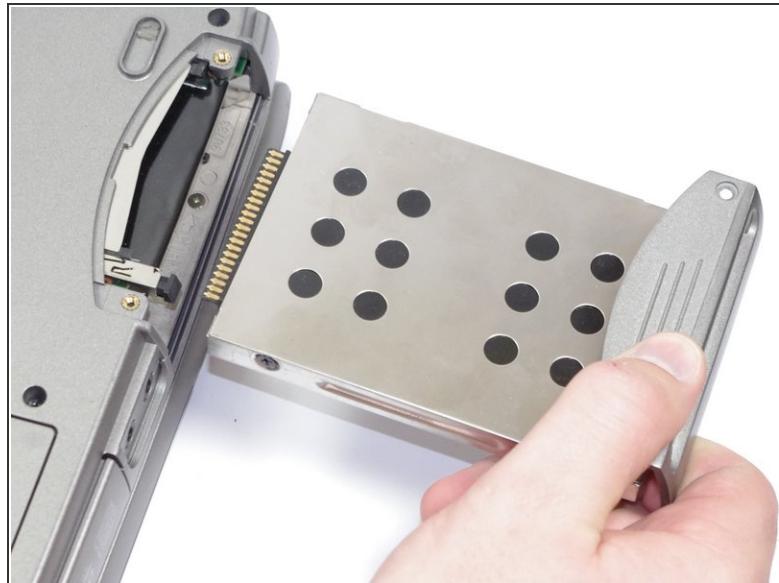

- Place laptop upside down on a clean flat surface.
- Remove 2ea M2.5 x 5 mm screws.
- Pull the HDD from main body of the laptop.

Step 3 — Optical Drive (Based on Dell Service Manual)



- Place laptop upsid down on a clean flat work surface.
- Remove the Philips M2.5 x 8 mm screw
- Loosen the screw that holds the memory compartment closed
- remove the memory module compartment cover
- Press the Optical Drive release lever to the right and the optical drive should slide out of the case

Step 4 — Keyboard




- Use a spudger to lift the notched right edge of the hinge cover, and pry it loose

⚠ You need to lay the LCD screen down flat to allow the hinge cover to be lifted off


- Lift the hinge cover off and set aside

Step 5

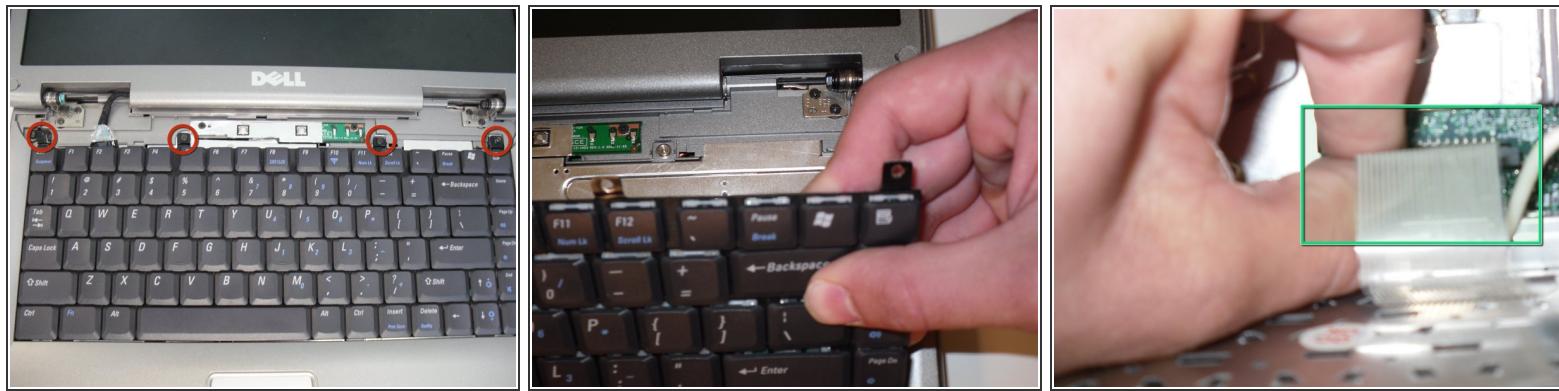

- Remove 4ea M2 x 3mm keyboard screws
- Lift up keyboard from the rear to expose the connector below
- Disconnect the keyboard ribbon cable from the mother board

Step 6 — Display Assembly

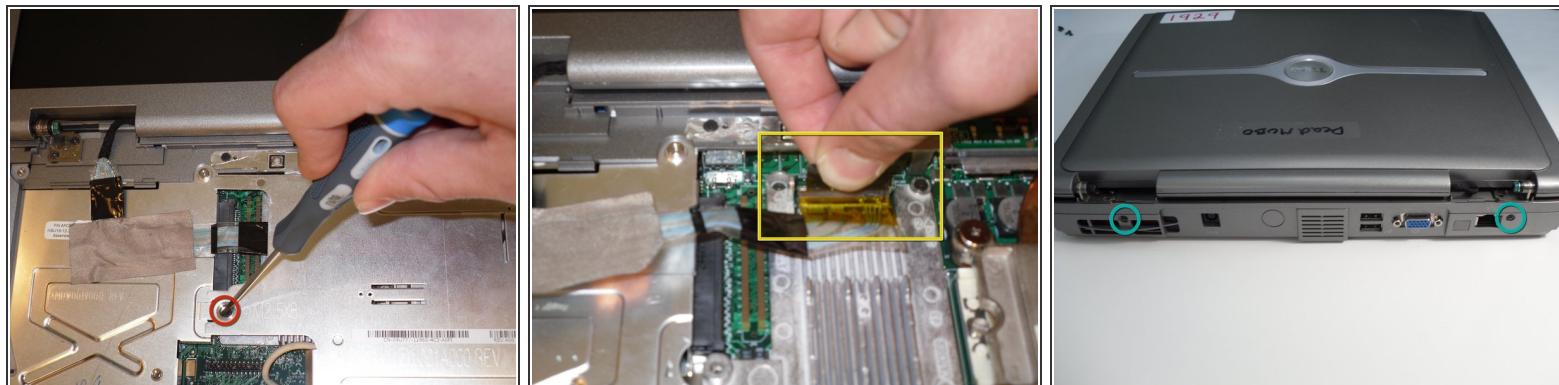

- Remove 1ea M2.5 x 8mm screw holding the EMI shield in place
- Remove the EMI shield to expose the LCD ribbon cable
- Gently pull up on the tab to disconnect the ribbon cable from the main board
- Close the lid carefully and remove the two M2.5 x 5-mm screws from the rear of the case

Step 7



⚠ Open the lid and support the Display Assembly while performing the next step to avoid it falling down when the hinge screws are removed

- Remove 2e M2.5 x 5mm screws from each hinge bracket
- The Display Assembly can now be lifted free of the laptop body

To reassemble your device, follow these instructions in reverse order.