




# Removing the Ink Cartridge Rail

Prerequisite only


Written By: Justin Taiki Fukada

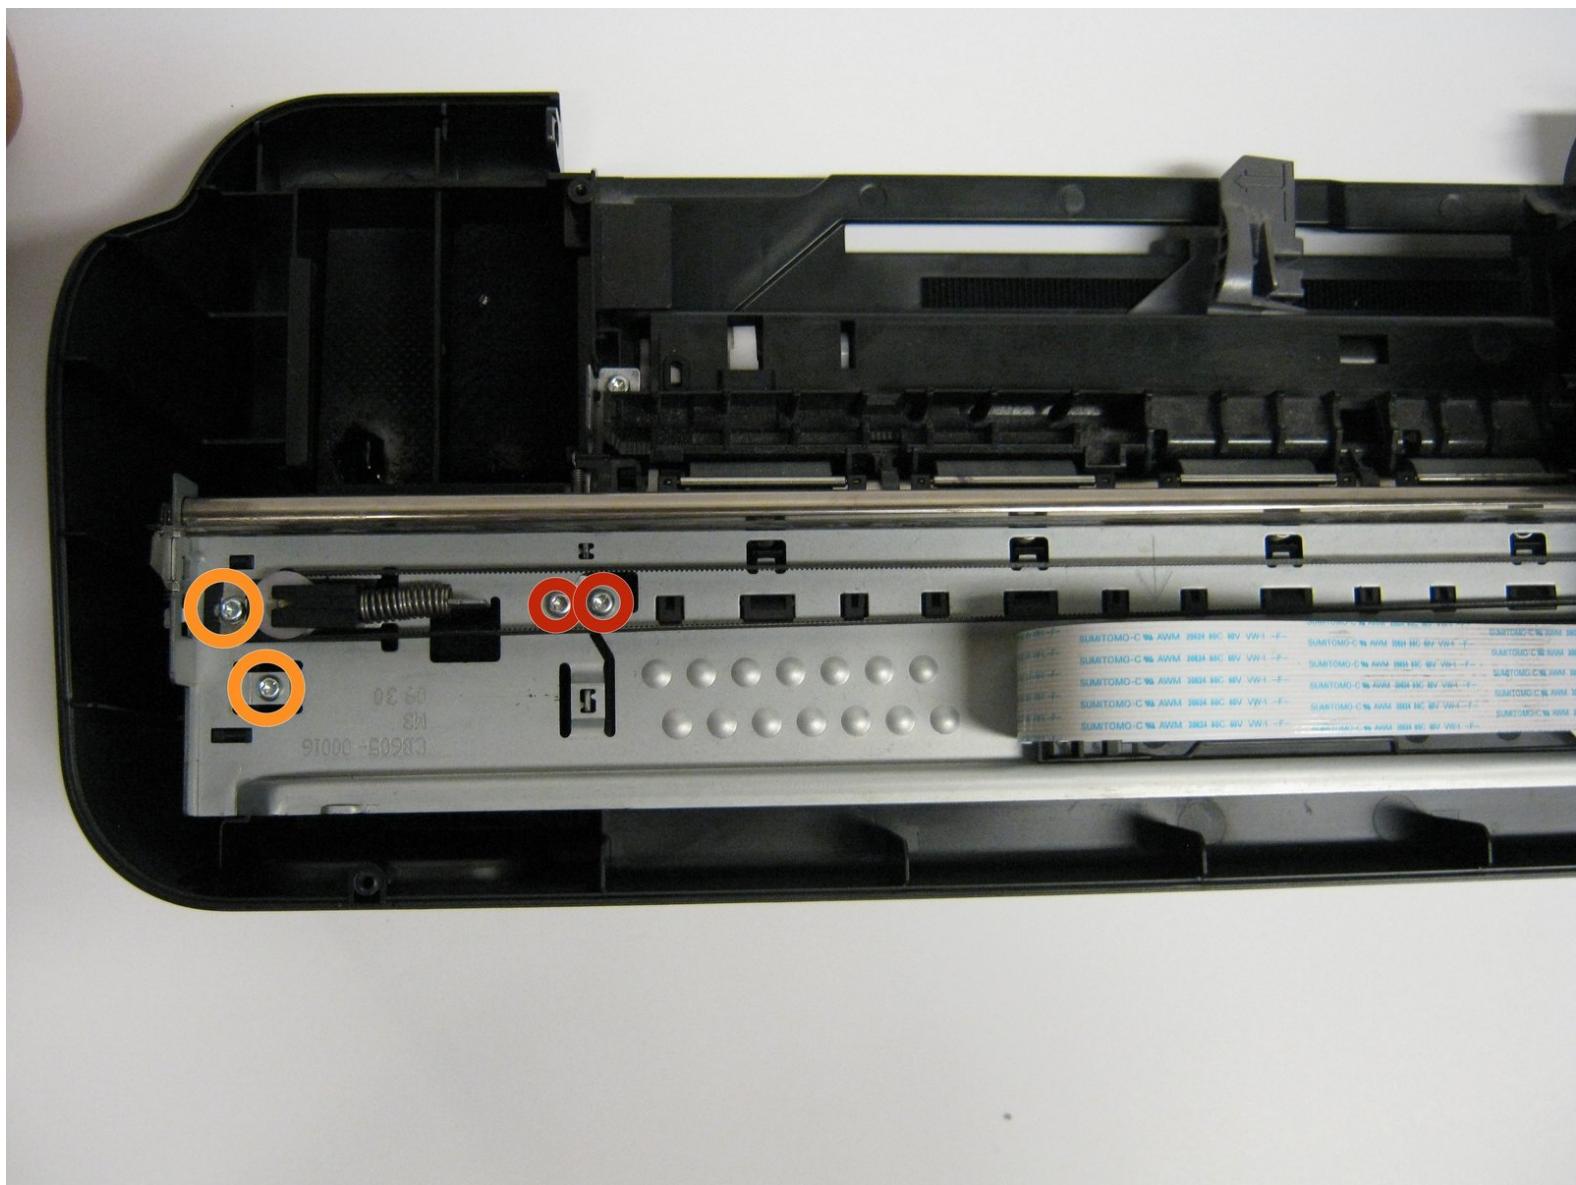

 **TOOLS:**


- T10 Torx Screwdriver (1)

## Step 1 — Ink Cartridge Rail

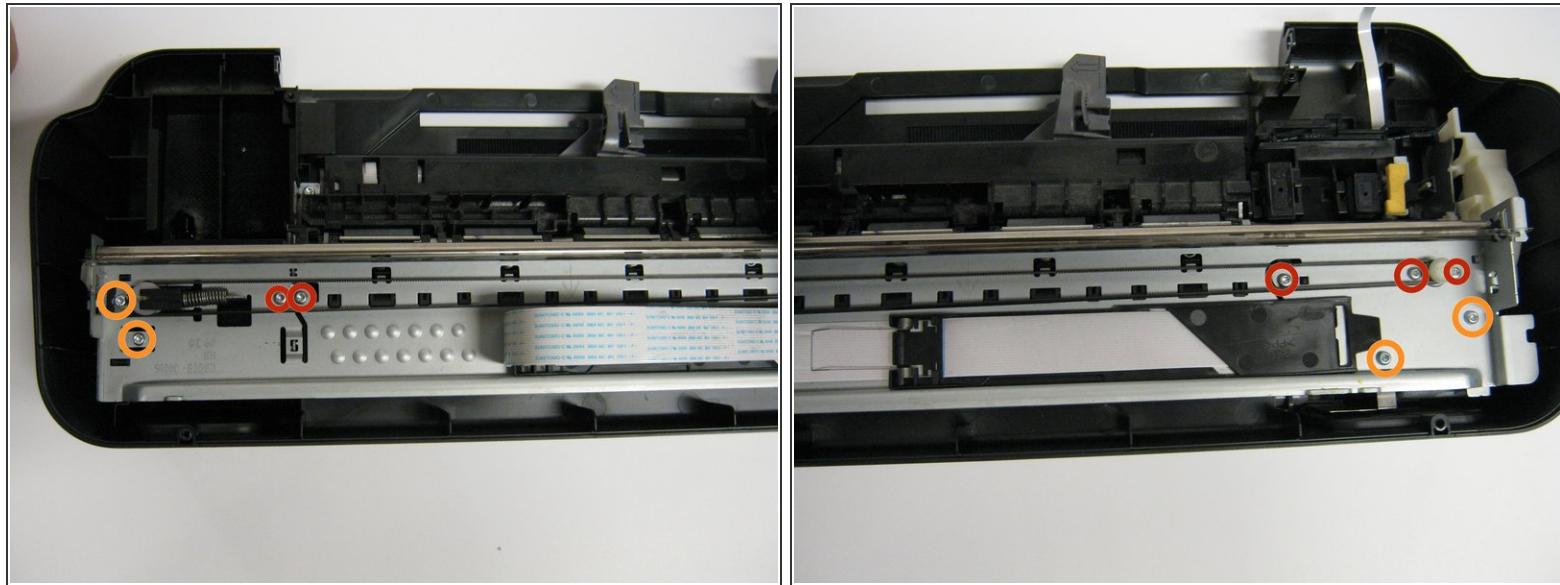

- Remove the five 13.0 mm Torx #10 screws found on top of the frame.
- Remove the four 9.0 mm Torx #10 smaller screws.

## Step 2

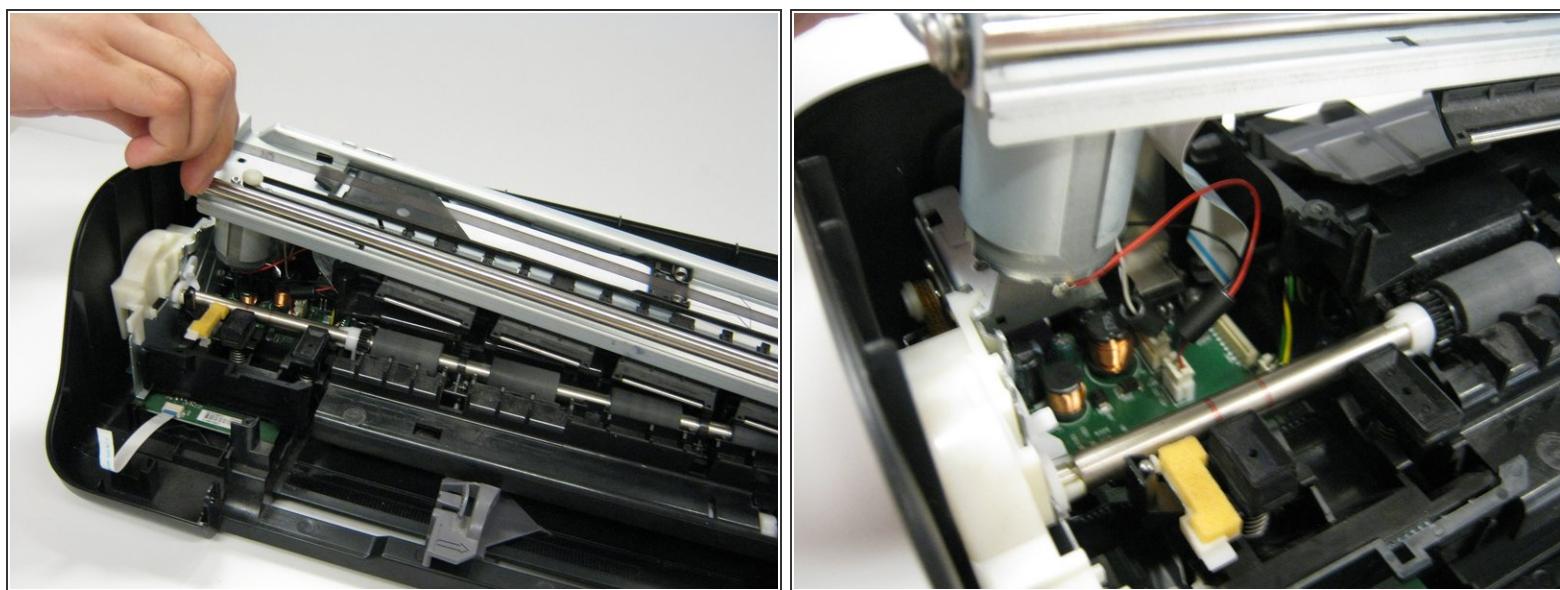

! Lift the rail carefully as a strip and motor will be connected to the bottom part of the printer.

- Now detach the white strip and wires by gently lifting them up.

To reassemble your device, follow these instructions in reverse order.