



Removing the Samsung LA40R81BD 40in LCD TV Main Board

This guide will show you where the main board is and how to remove it

Written By: Richdave



 **TOOLS:**

- Phillips #2 Screwdriver (1)


Step 1 — Rear Cover



⚠️ Unplug power cable and all AV cables from rear of TV and carefully lay TV face down on a clean flat working surface ensuring that you don't damage the LCD screen.

- Using a Philips driver remove the 18 screws from the rear panel.
- Gently lift the rear cover off the TV. You may need to wiggle the cover a little however there are no clips holding the cover on so it should come off easily if you have fully unscrewed all 18 screws.

Step 2 — Main Board

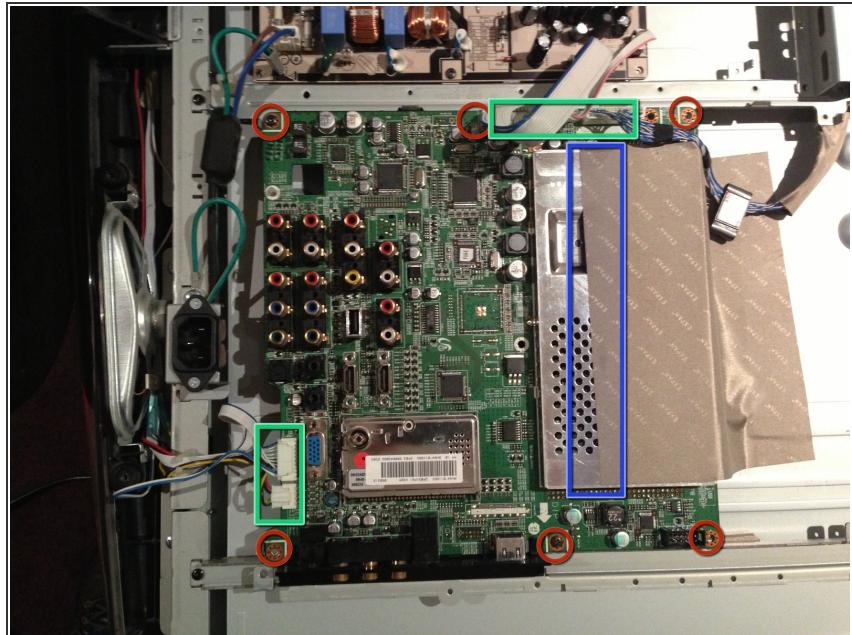

- Gently peel away the conductive fabric from the metal cover on the board
- Remove 5 connectors from the board
- Remove 6 screws from the perimeter of the board.
- Lift the main board away from the chassis ensuring you don't snag or catch any of the cables.

To reassemble your device, follow these instructions in reverse order.

